

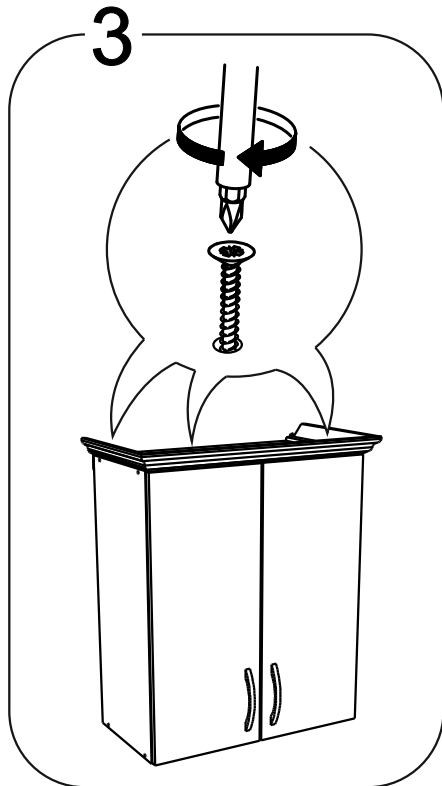
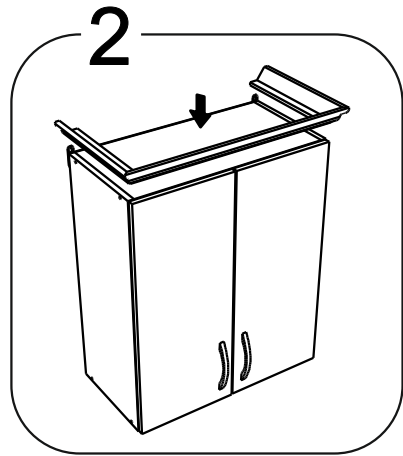


16

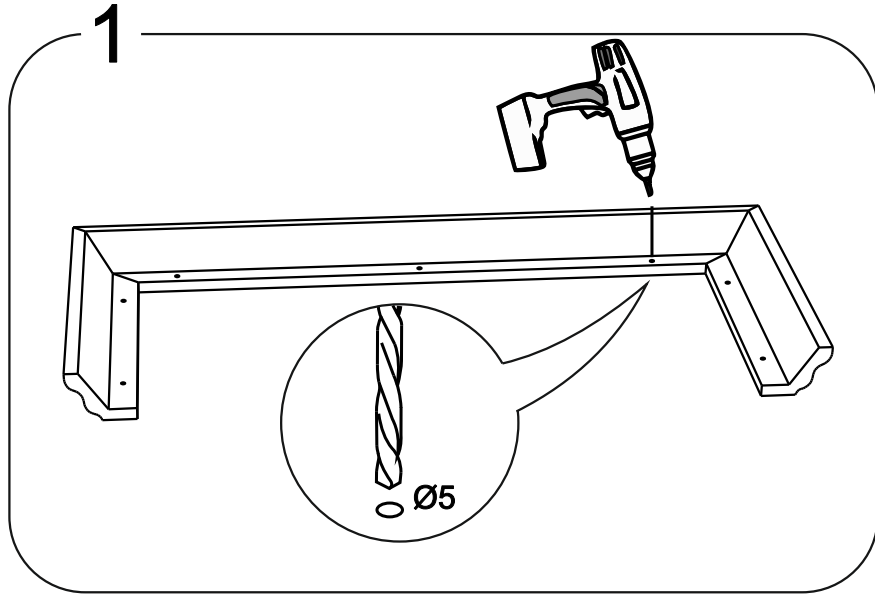


169. **RU**

P400






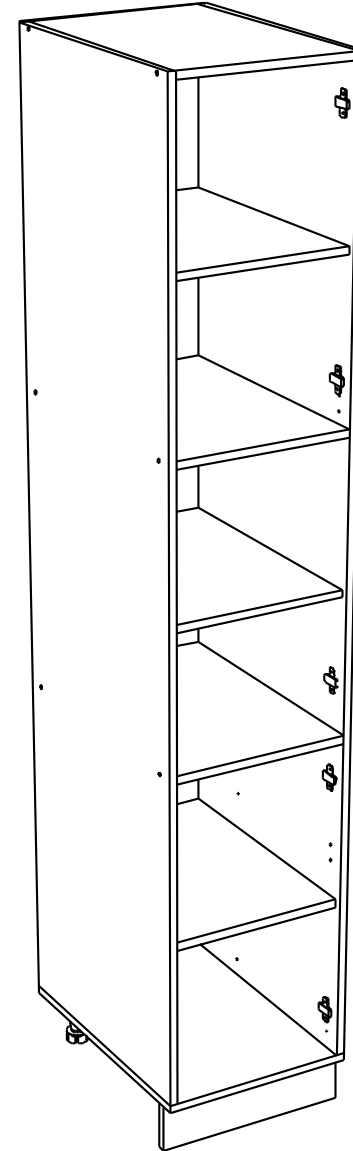


31.10.2018

P400(1)

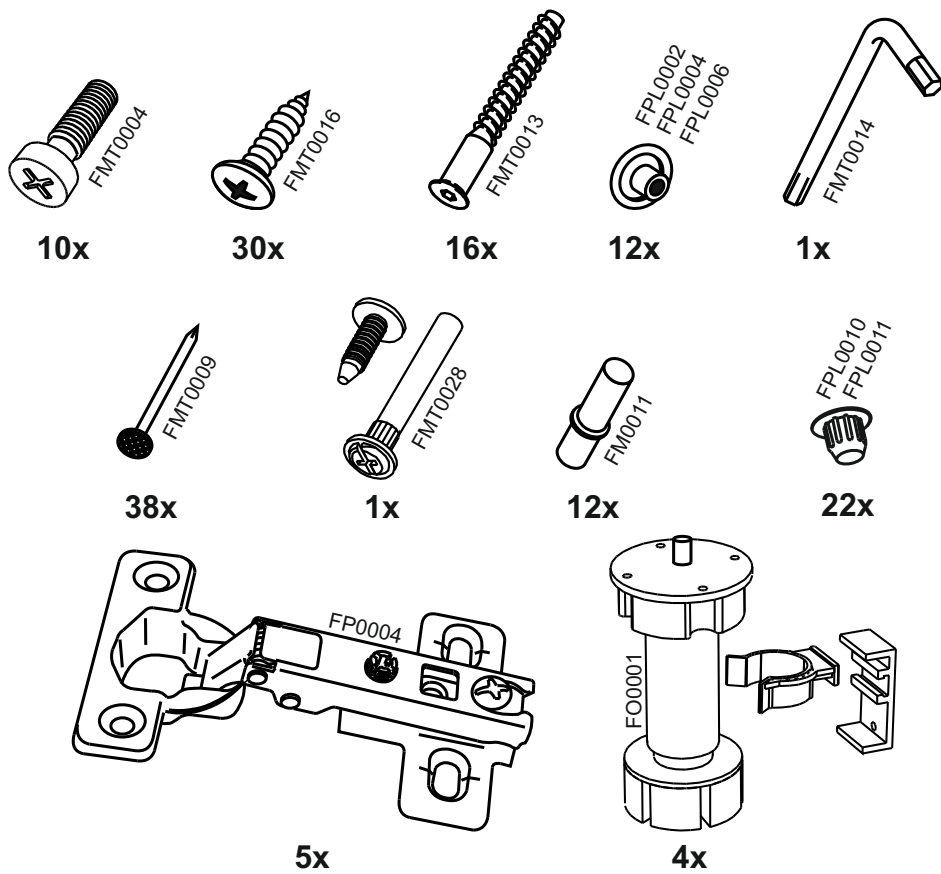

15



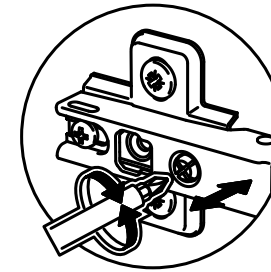
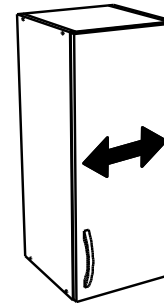
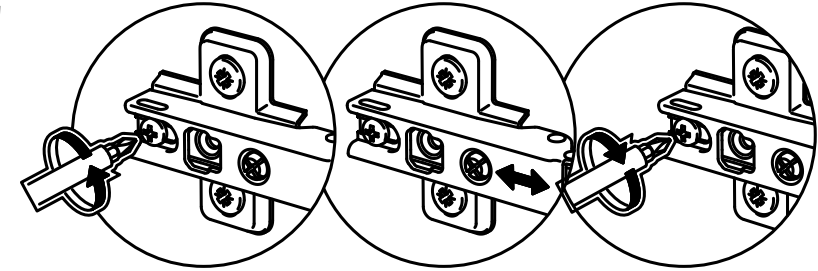
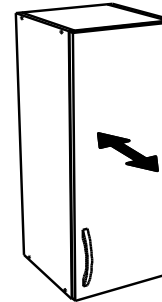
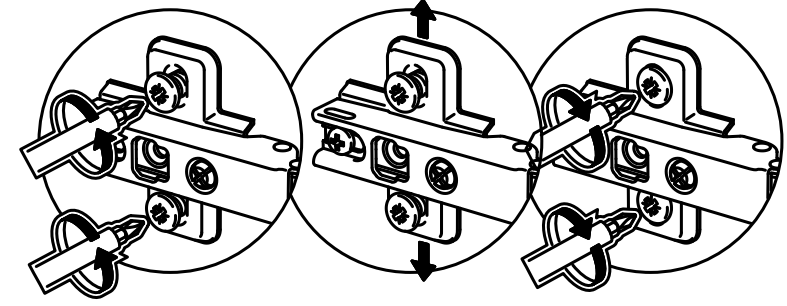
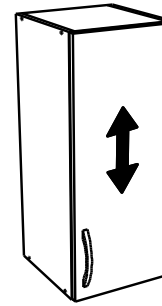


No	code	a*b	x
1	P400.01	2016*554	1
2	P400.02	2016*554	1
3	P400.03	400*554	1
4	P400.04	368*554	3
5	P400.05	368*540	3
6	N400.05	400*100	1
7	P400.06	2030*395	1







В мебельном наборе могут быть конструктивные изменения, не ухудшающие качество изделия, но не указанные в данной инструкции.

In furniture KIT, there may be changes, not specified in this manual, which don't deteriorate the quality of the produkt.


13

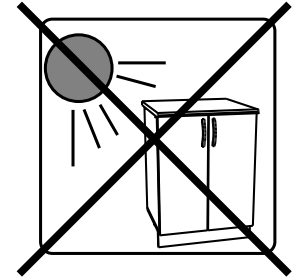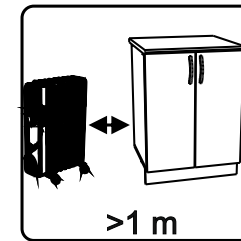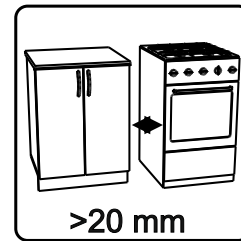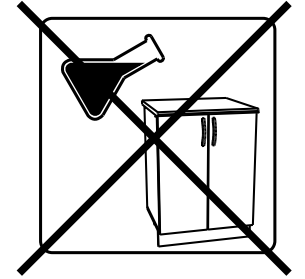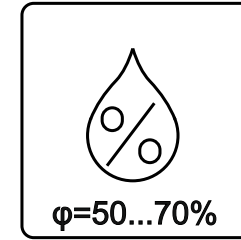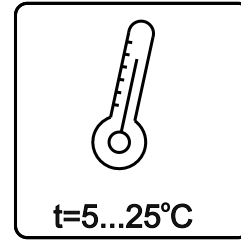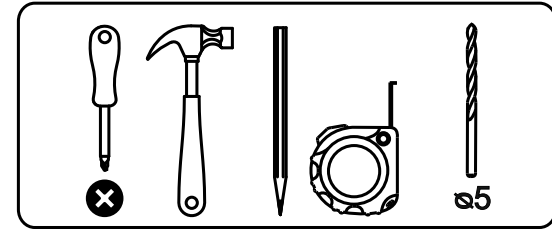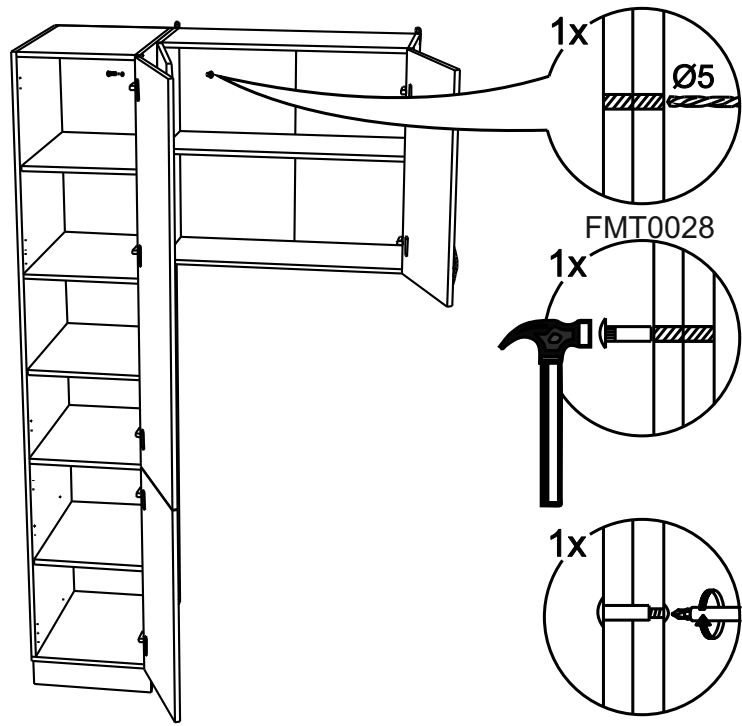


14

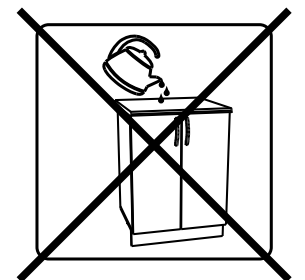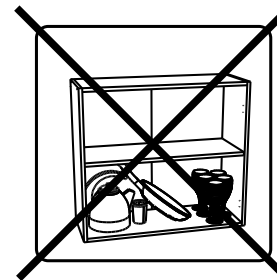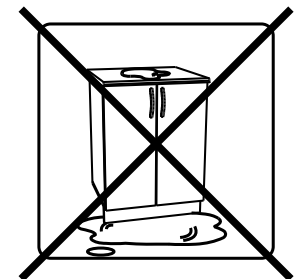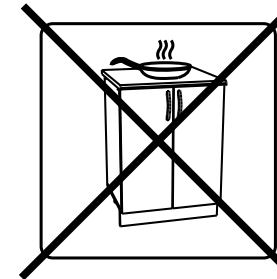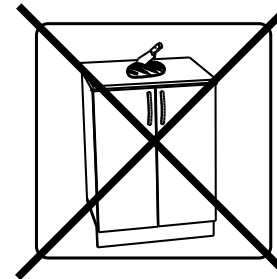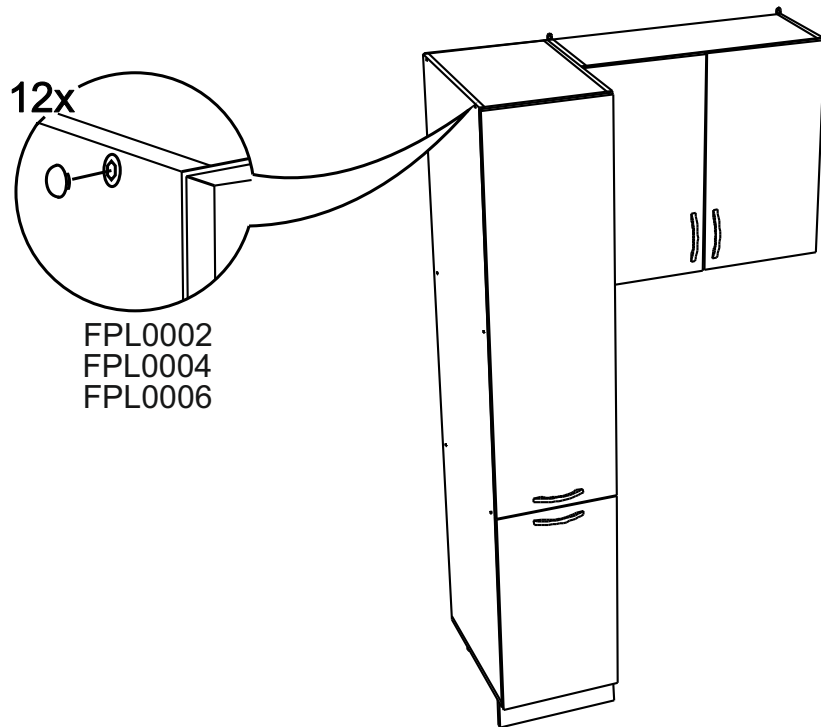


1

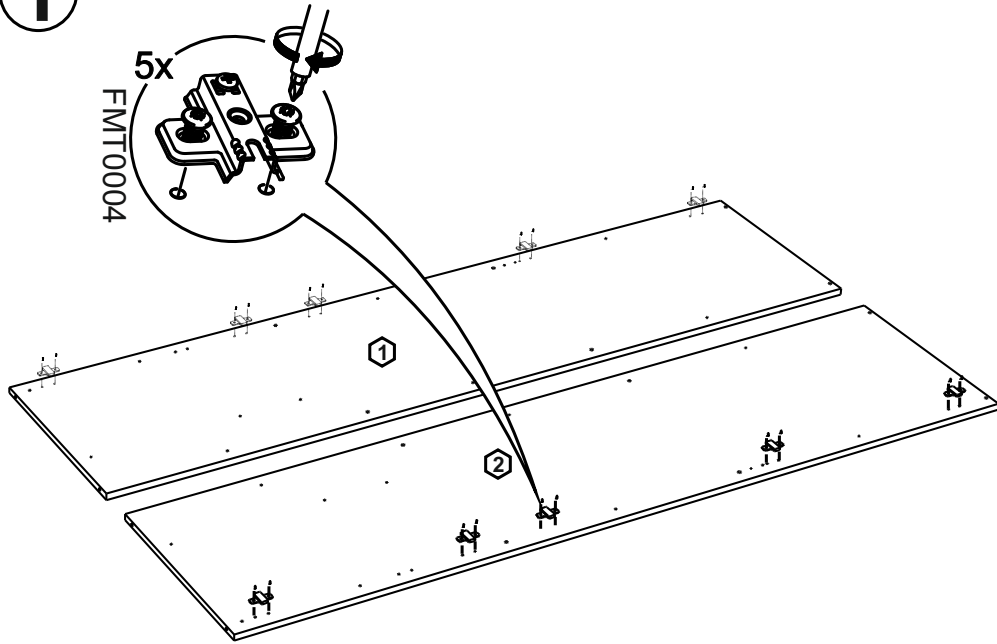


11

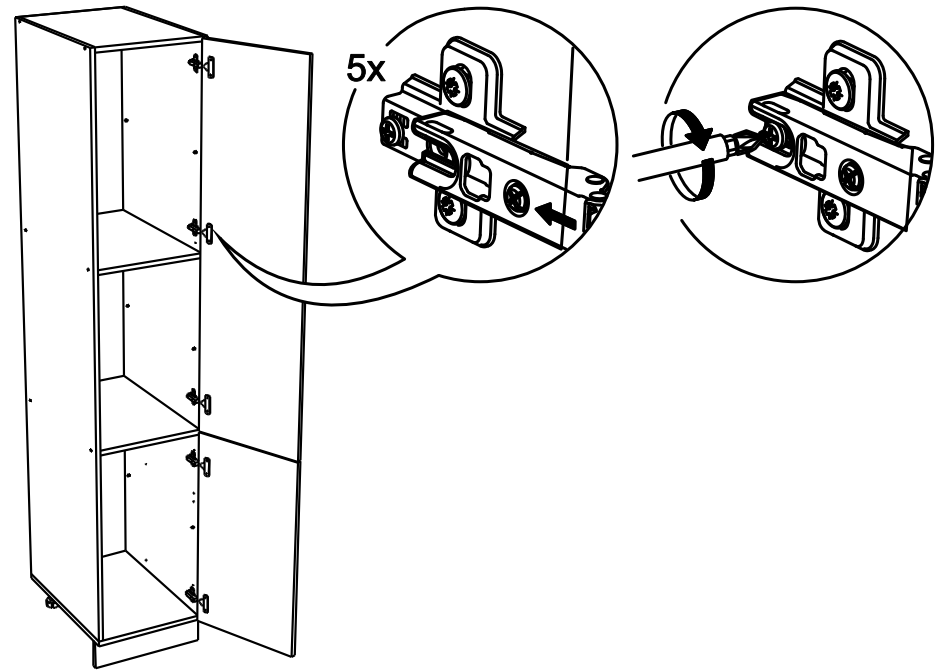


2

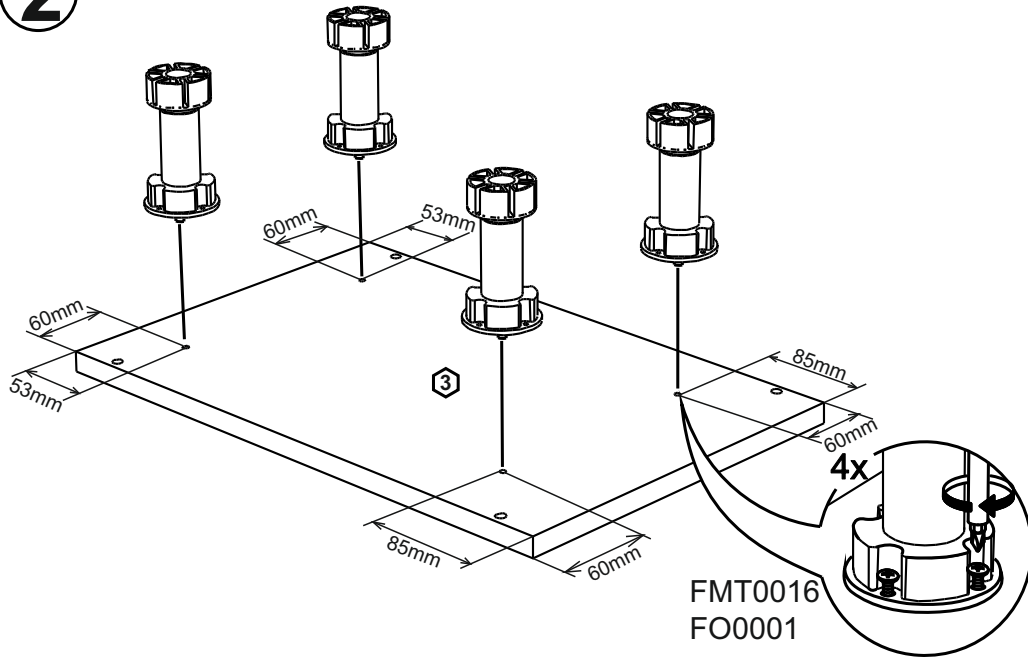


12

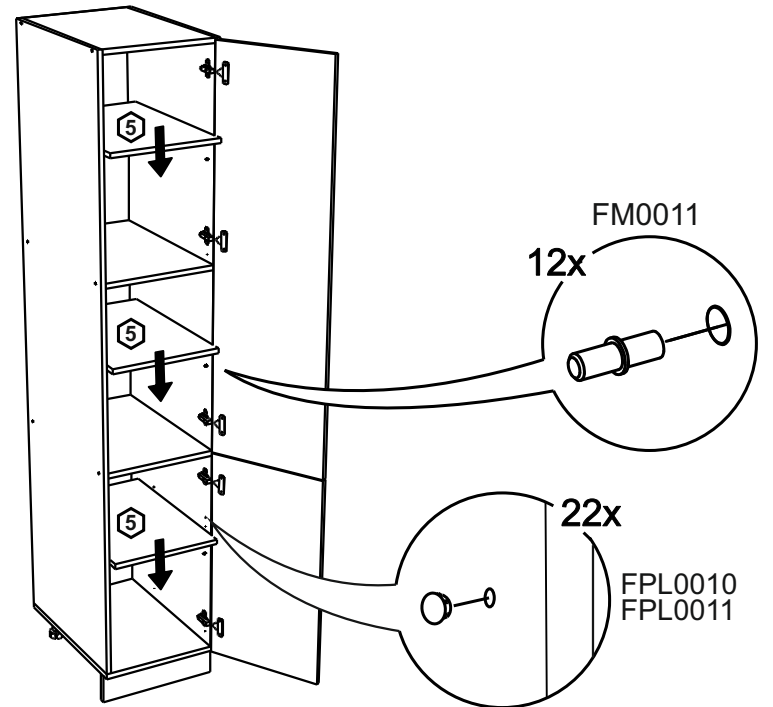


9

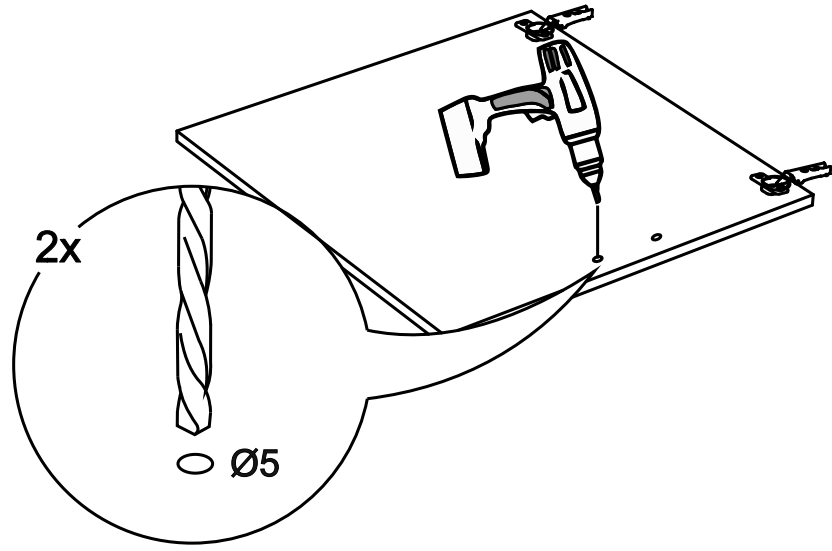


10

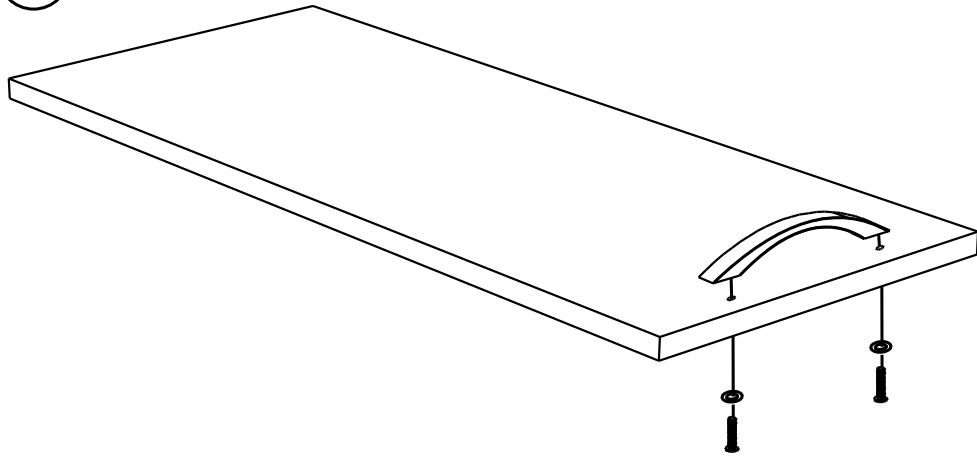


3

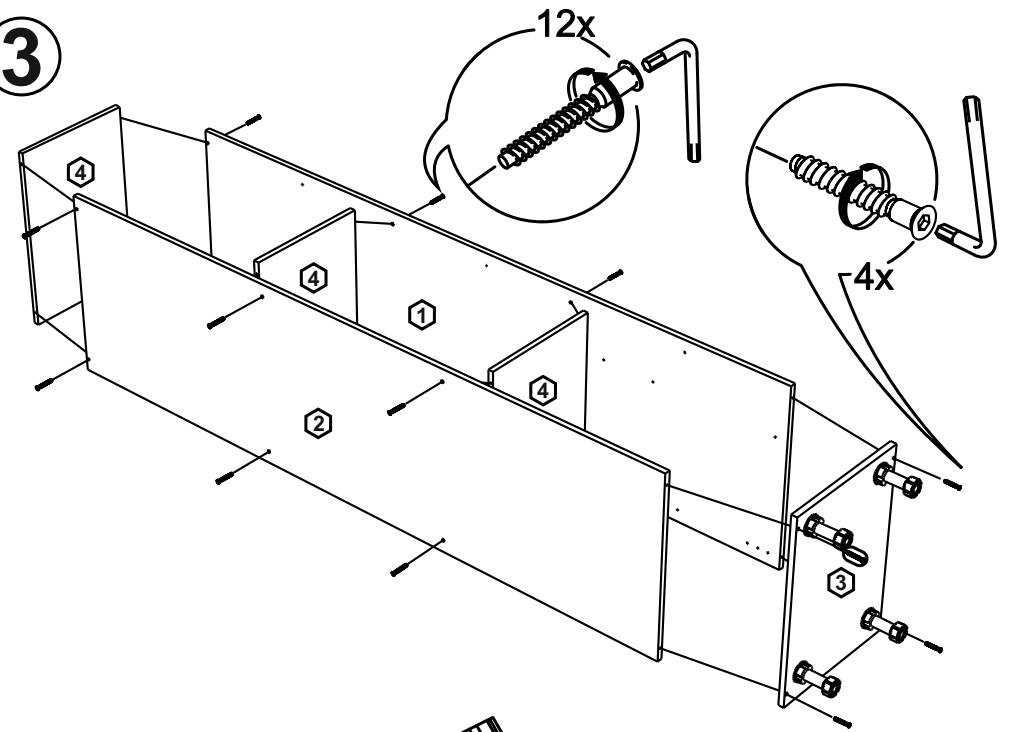


4

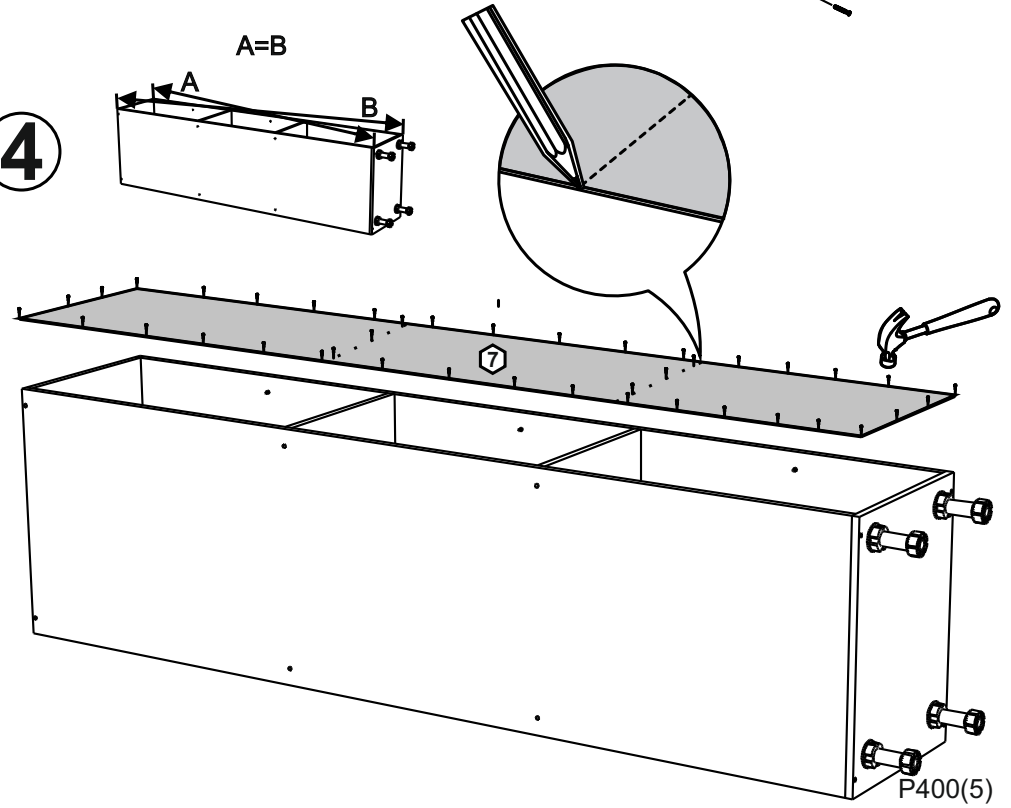


5

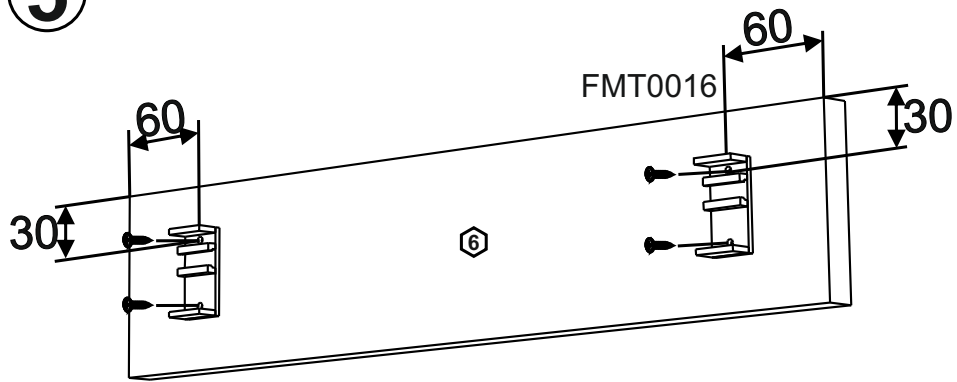


6

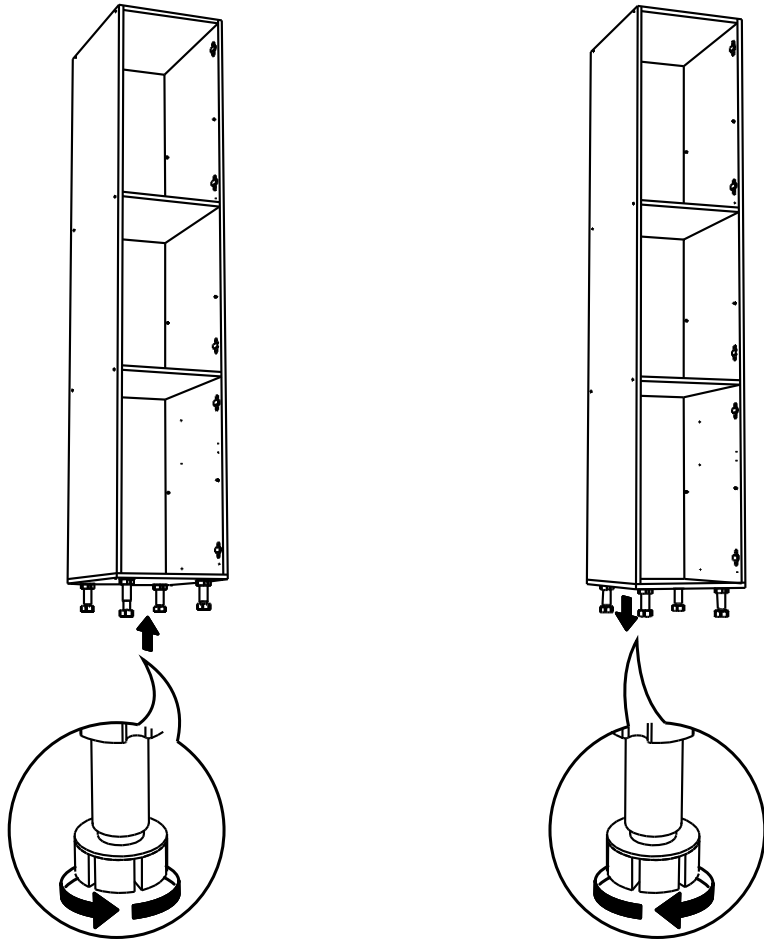

7

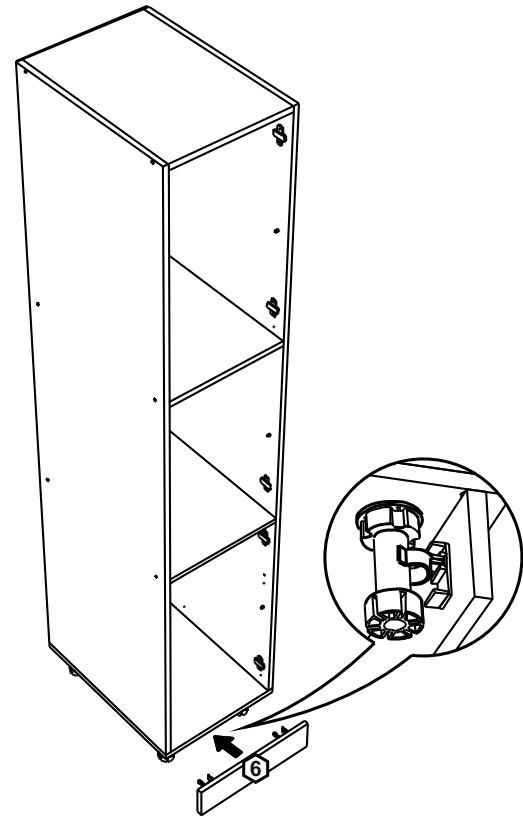


8

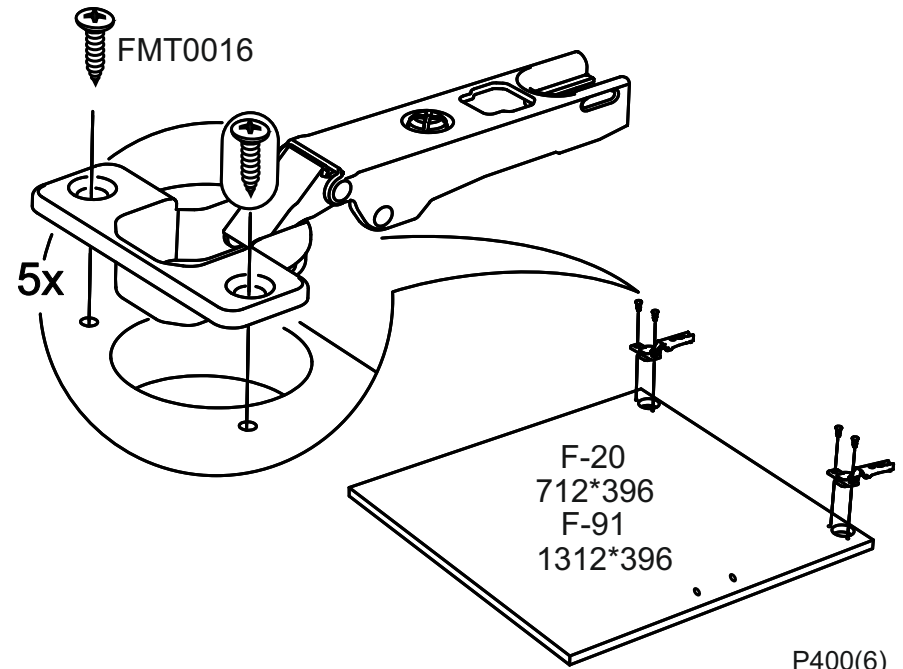


15

12x

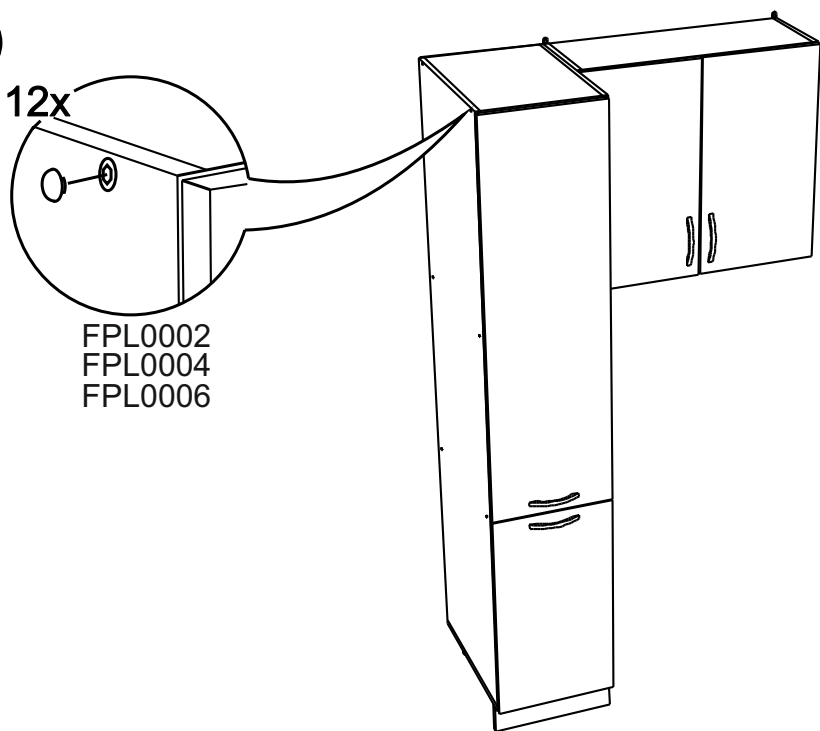



FPL0002
 FPL0004
 FPL0006

16



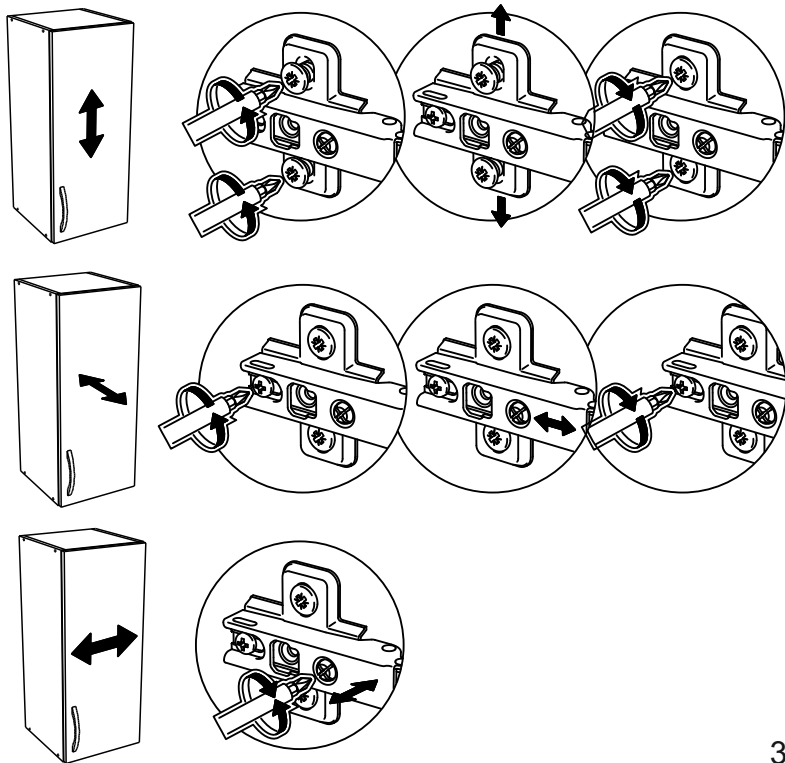


P400H

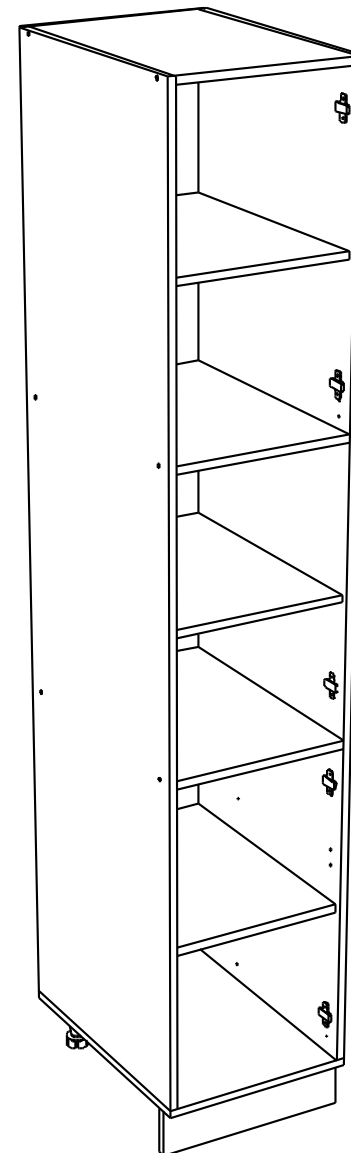

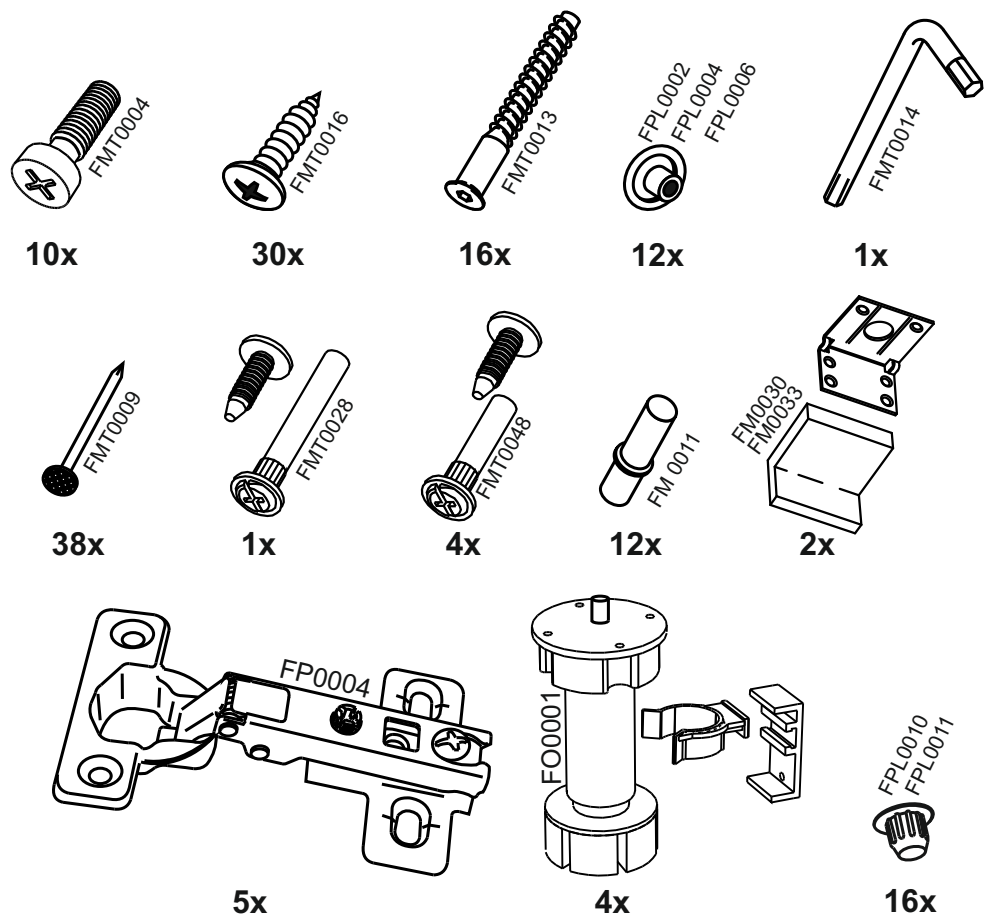

14

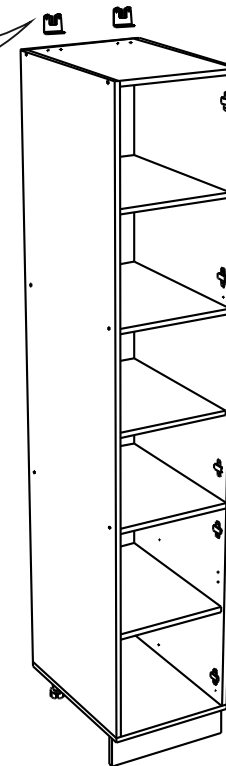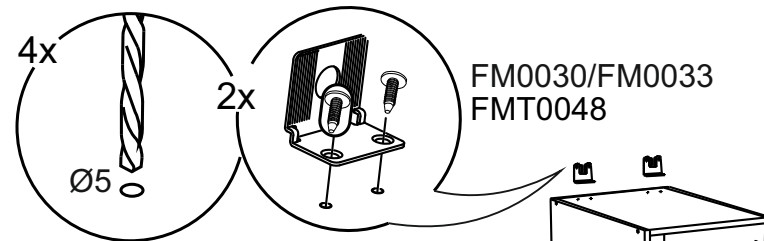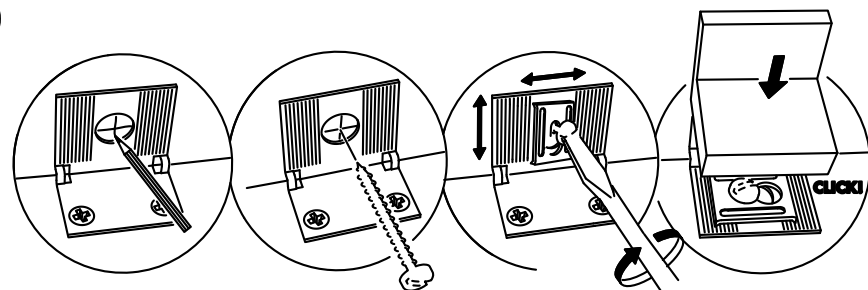

№	code	a*b	x
1	P400H.01	2220*554	1
2	P400H.02	2220*554	1
3	P400.03	400*554	1
4	P400.04	368*554	3
5	P400.05	368*540	3
6	N400.05	400*100	1
7	P400H.03	2235*395	1

В мебельном наборе могут быть конструктивные изменения, не ухудшающие качество изделия, но не указанные в данной инструкции.














In furniture KIT, there may be changes, not specified in this manual, which don't deteriorate the quality of the produkt.



Внимание! Крепление пенала к стене крепёжным уголком обязательно! Крепёжные средства для крепления к стене не прилагаются, для разных материалов стен требуются различные крепления. Используйте крепёжные средства, подходящие для материала стен в Вашем доме.


Attention! Use mounting angle to mount high cabinet to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home.

13

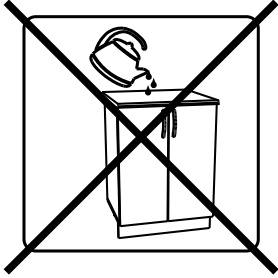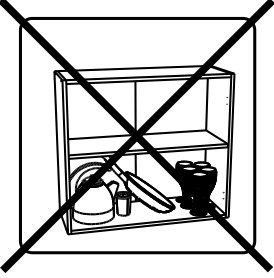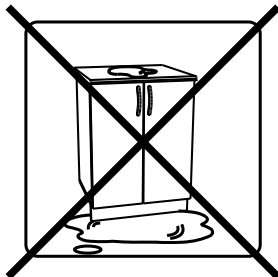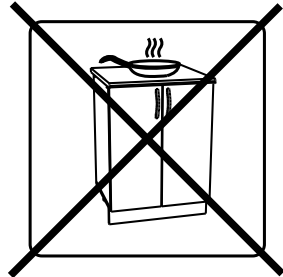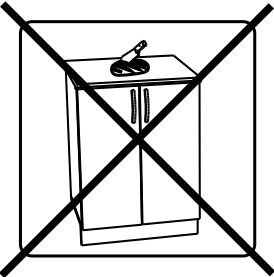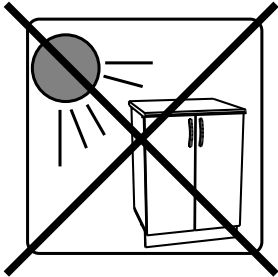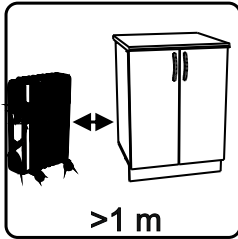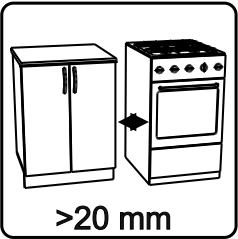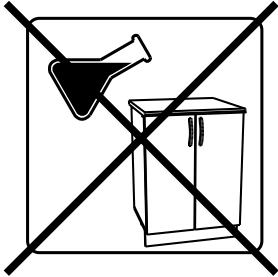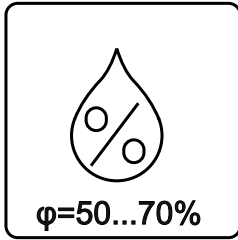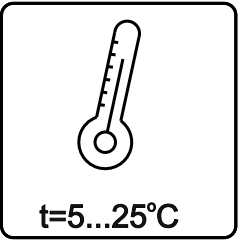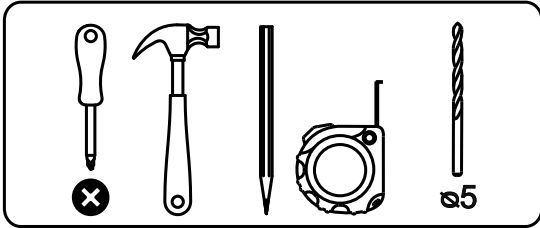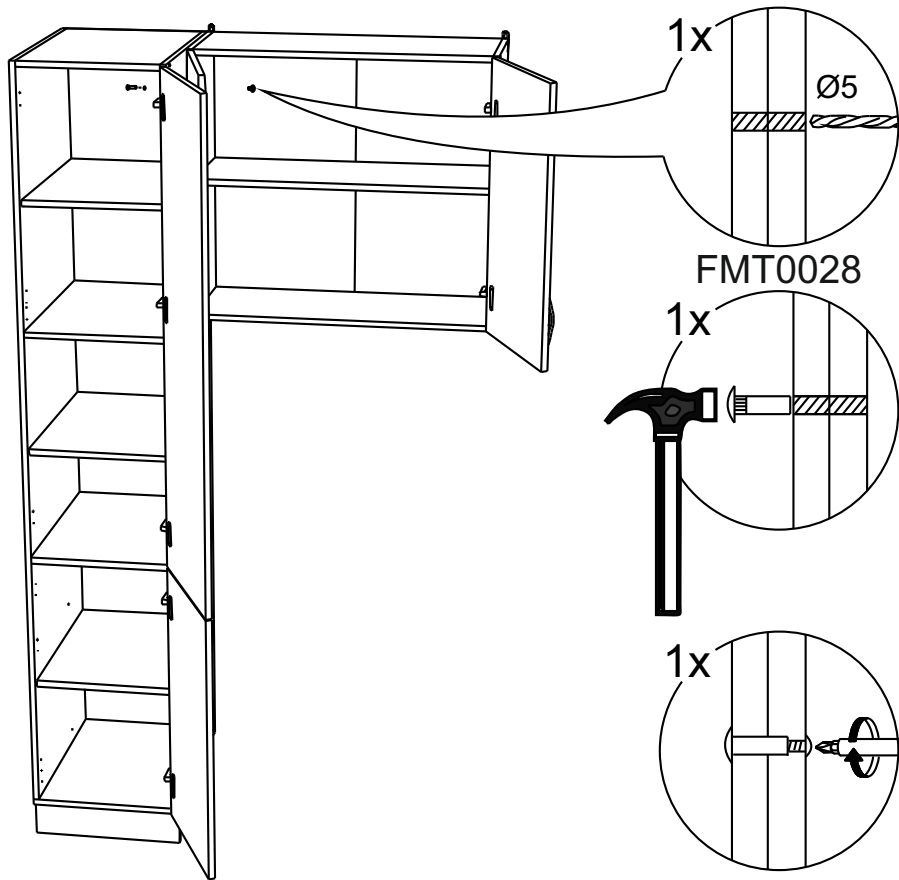


! Внимание! Крепление пенала к рядомстоящим модулям межсекционной стяжкой обязательно!
 Attention! Use connection screw to mount high cabinet to the nearest base and wall cabinets.


1

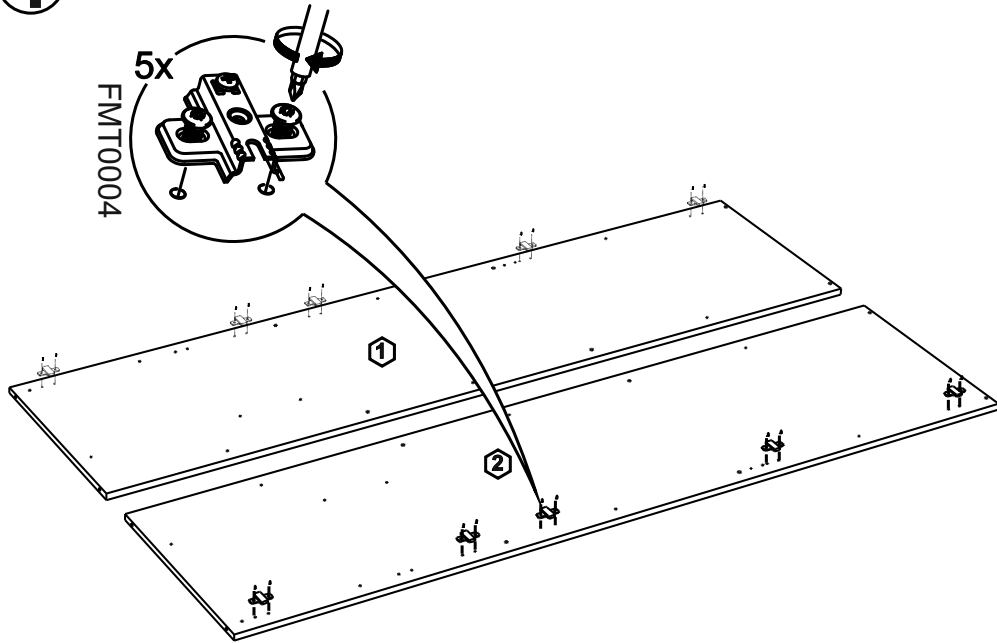


2

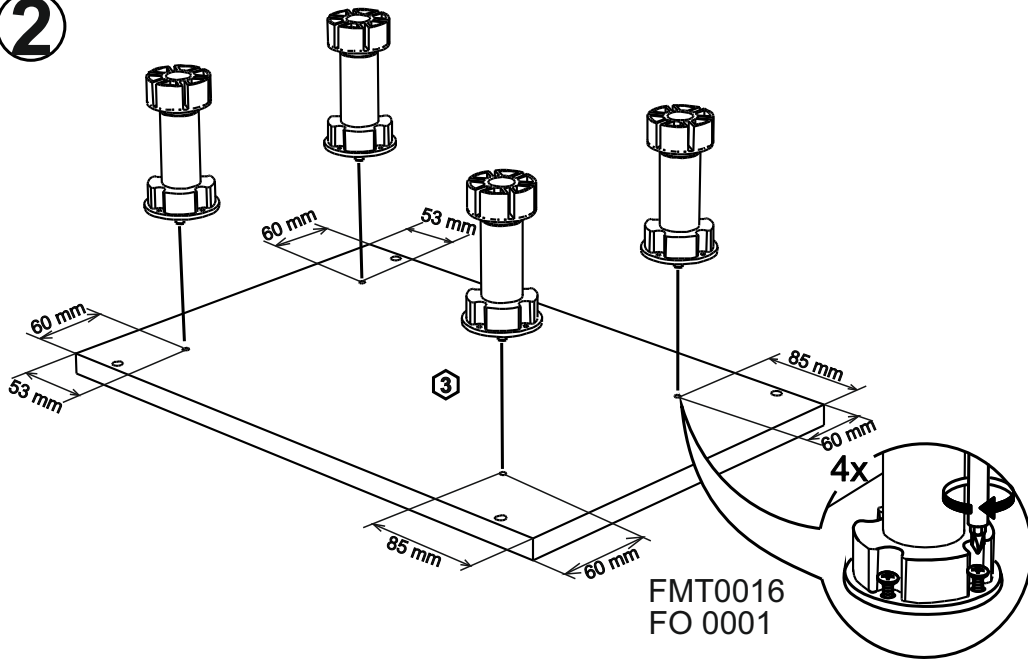


11

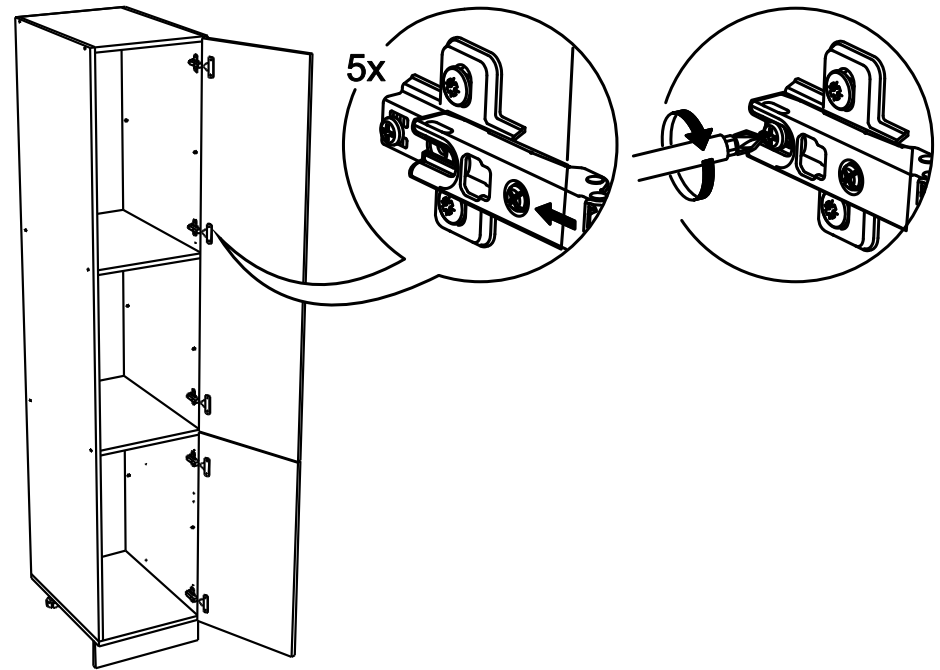


12

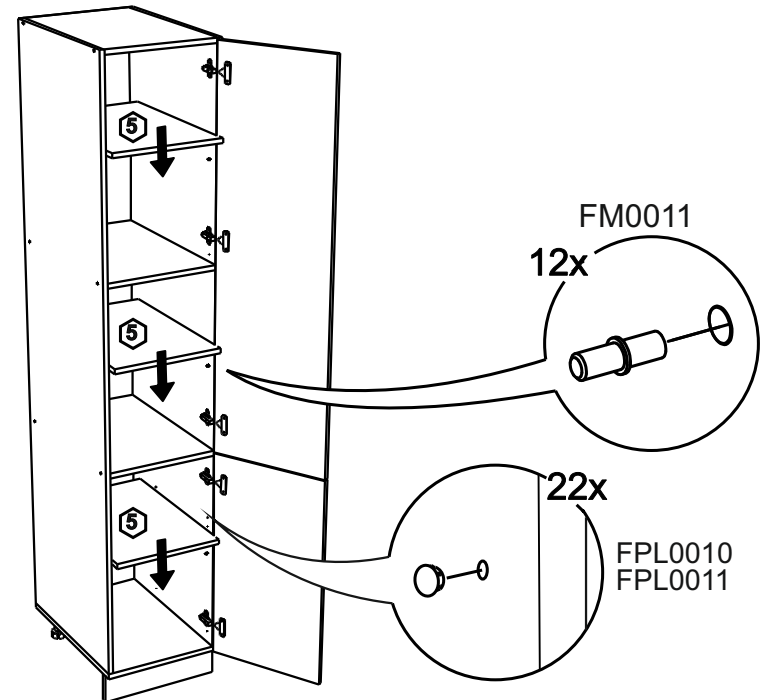


9

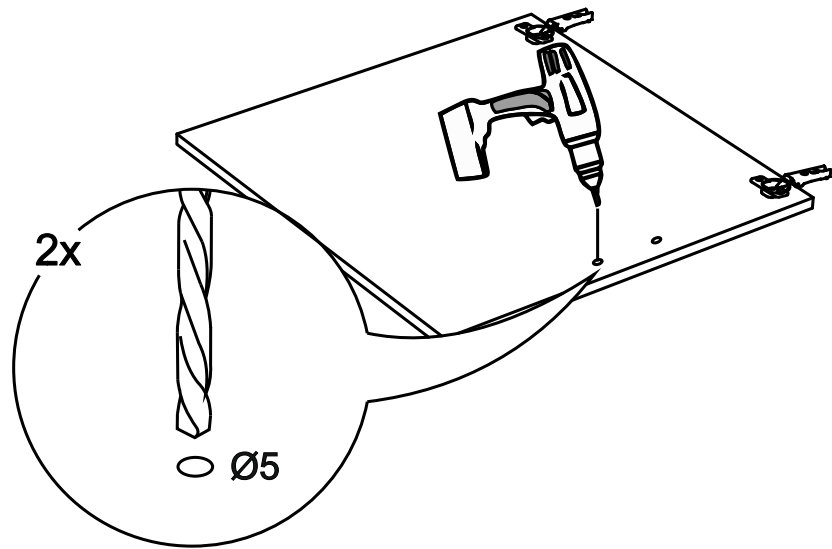


3

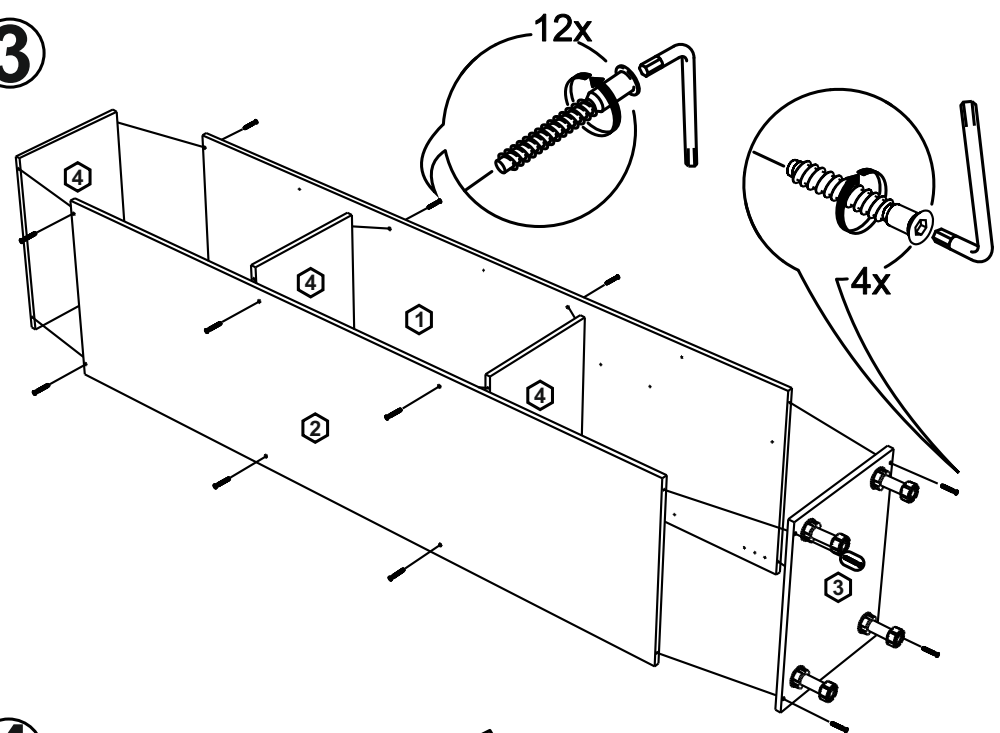


10

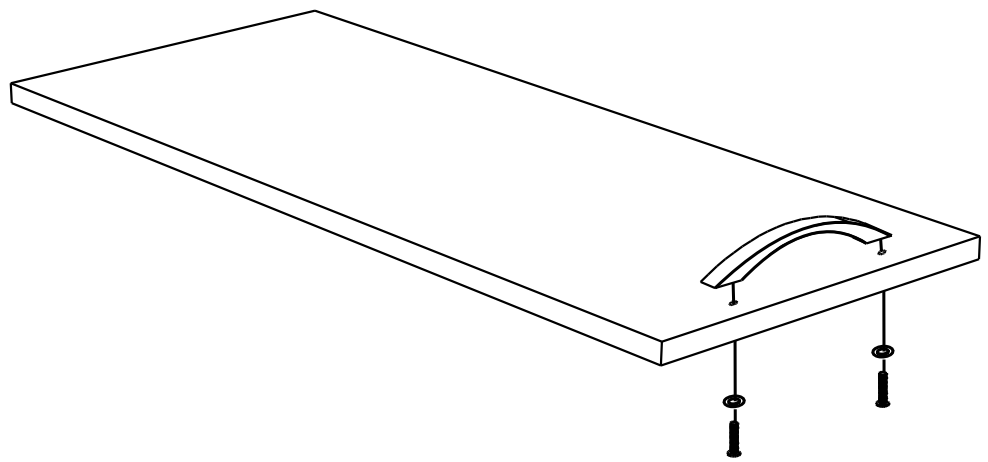


4

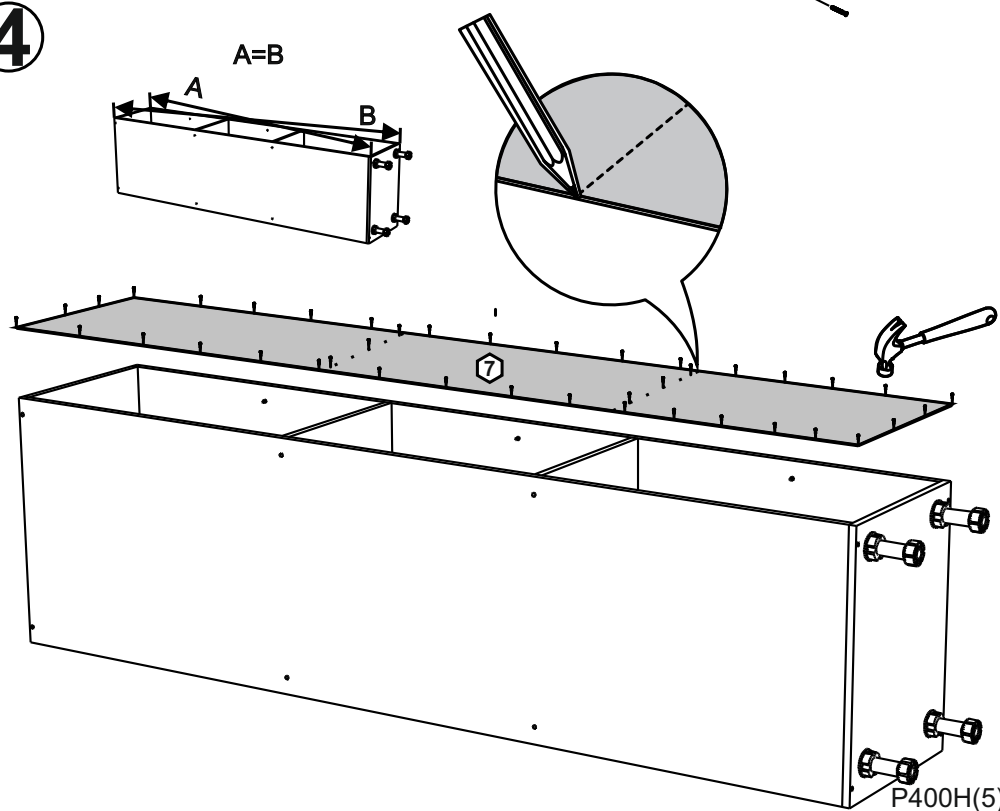


5

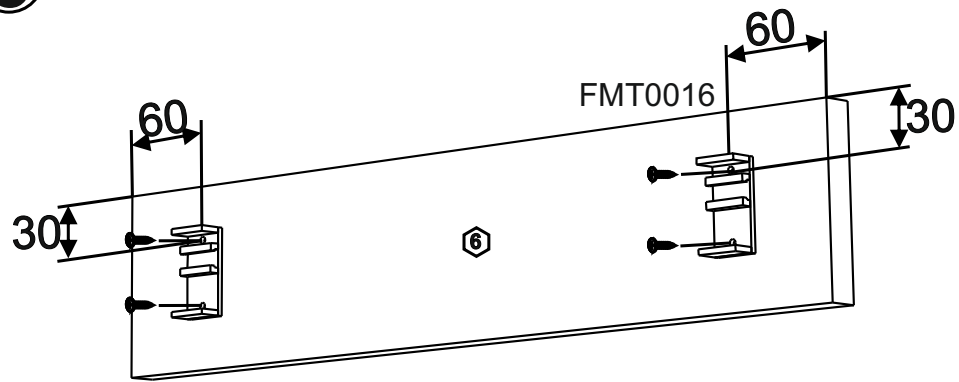


6

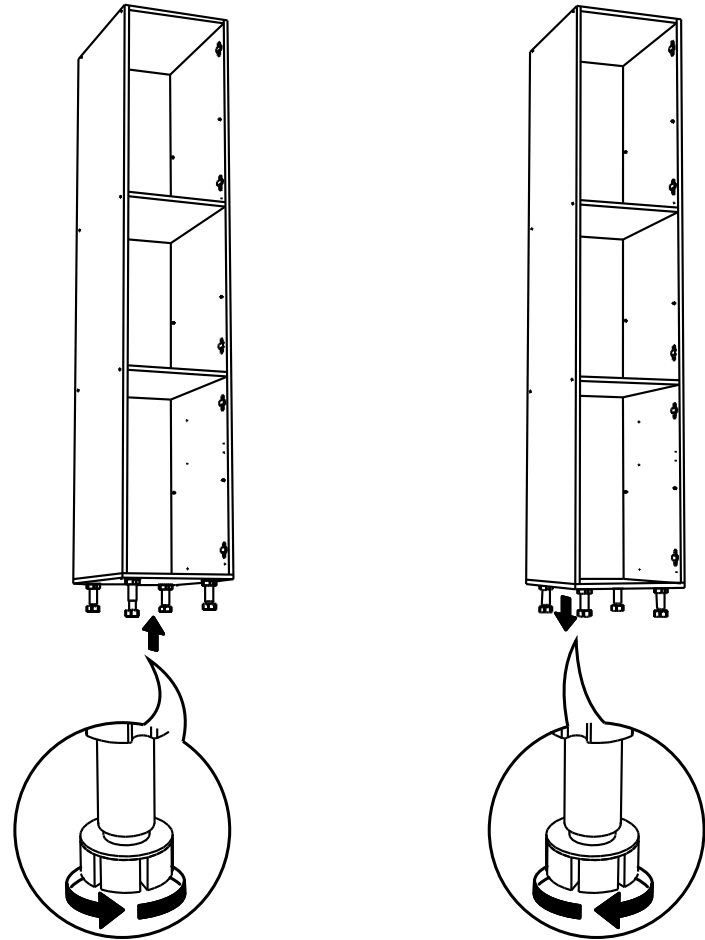


7




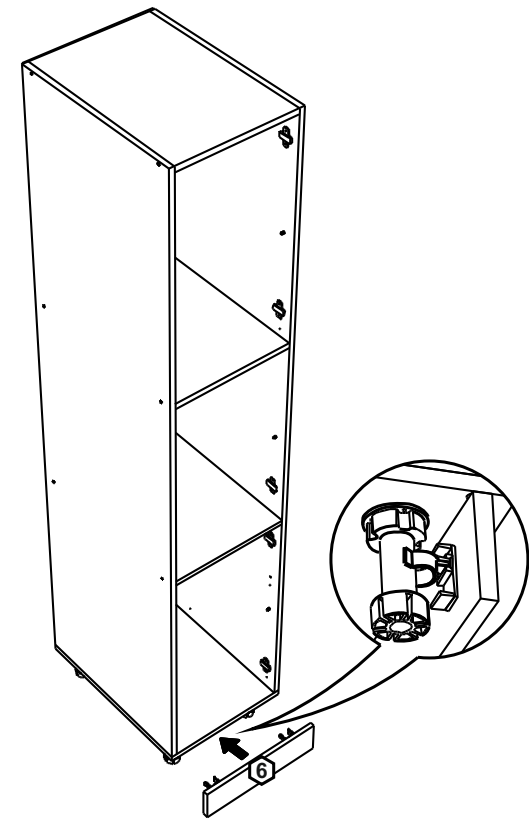


8

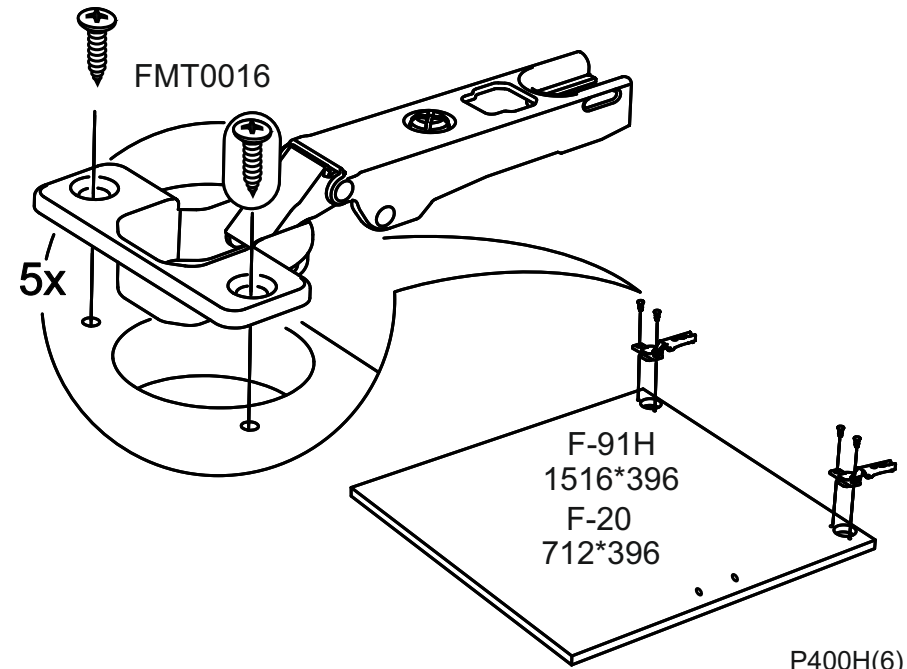

P600

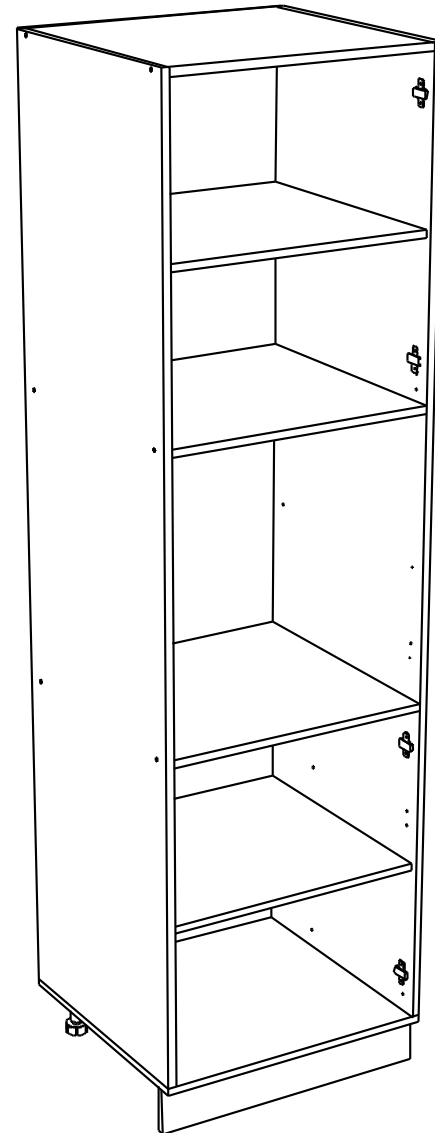










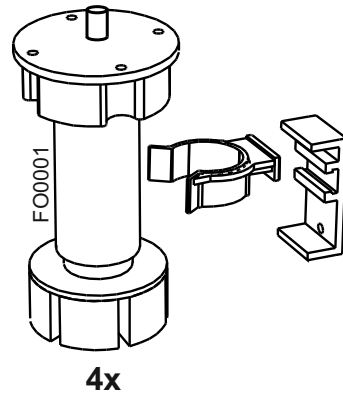
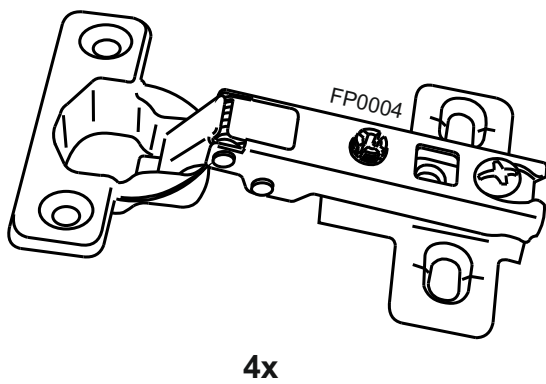
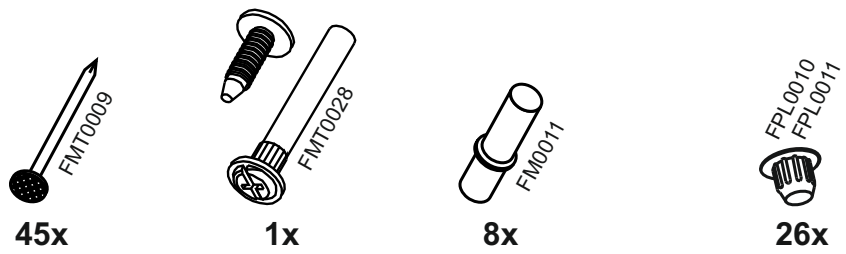
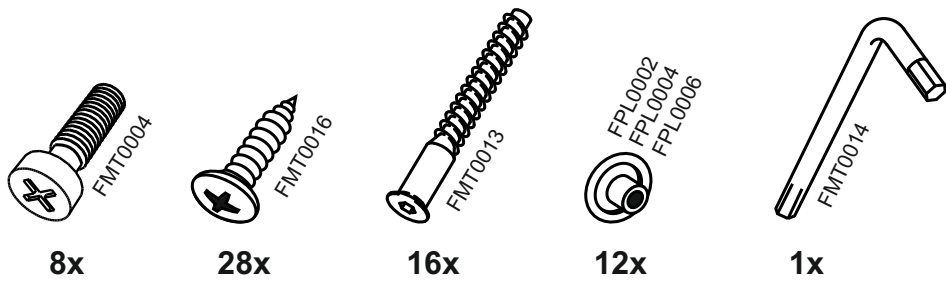


В мебельном наборе могут быть конструктивные изменения, не ухудшающие качество изделия, но не указанные в данной инструкции.




In furniture KIT, there may be changes, not specified in this manual, which don't deteriorate the quality of the produkt.

No	code	a*b	x
1	P400.01	2016*554	1
2	P400.02	2016*554	1
3	P600.01	600*554	1
4	P600.02	568*554	3
5	P600.03	568*540	2
6	N600.05	600*100	1
7	P600.04	2030*295	2
8	P600.05	2000 mm	1

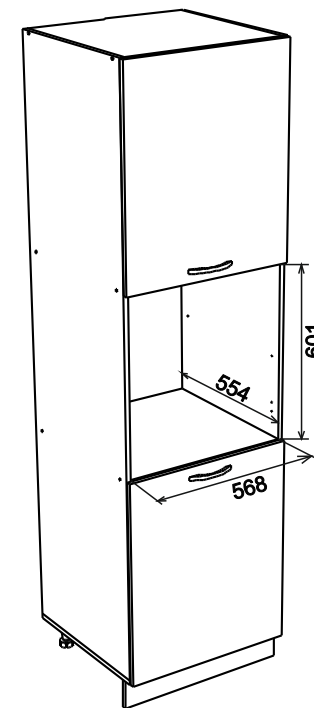


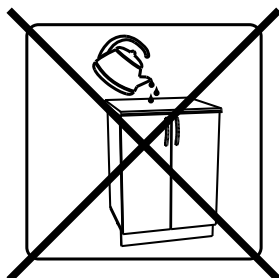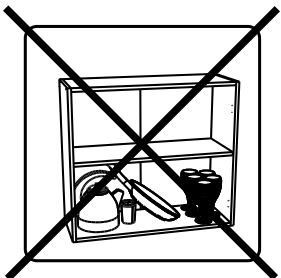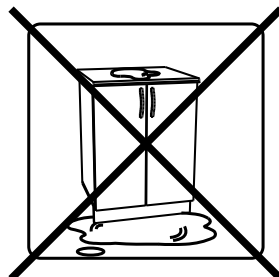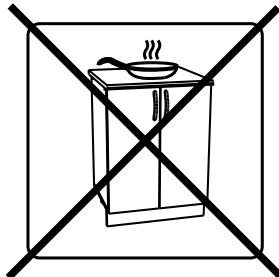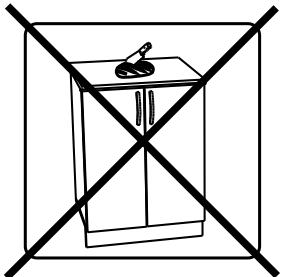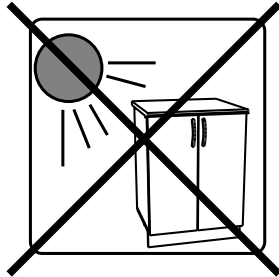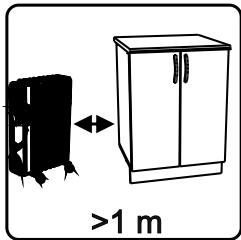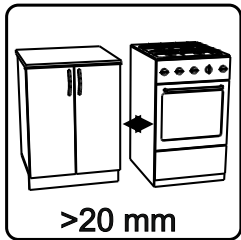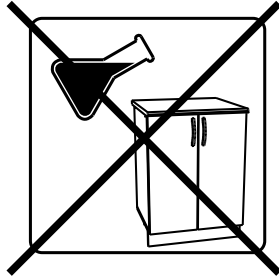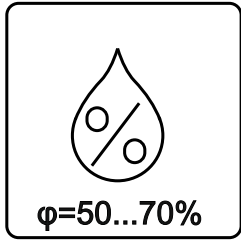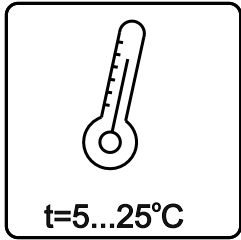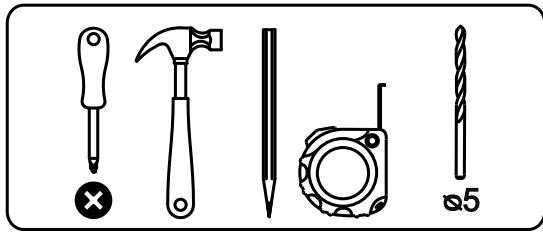


16

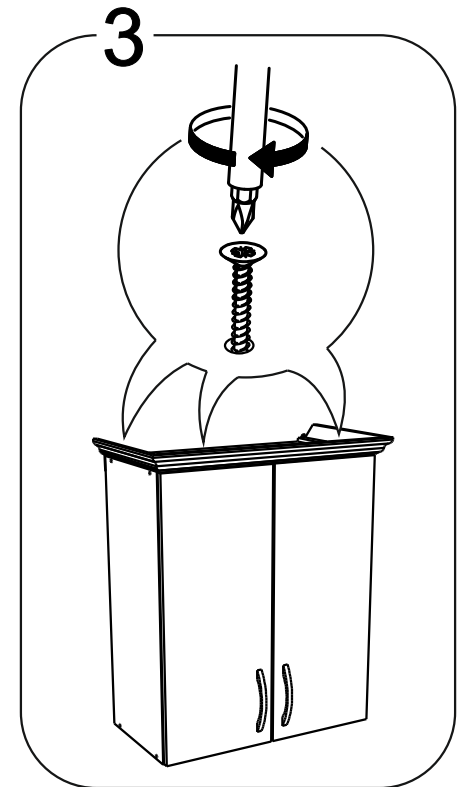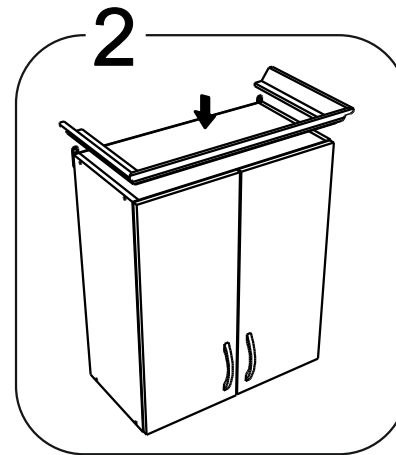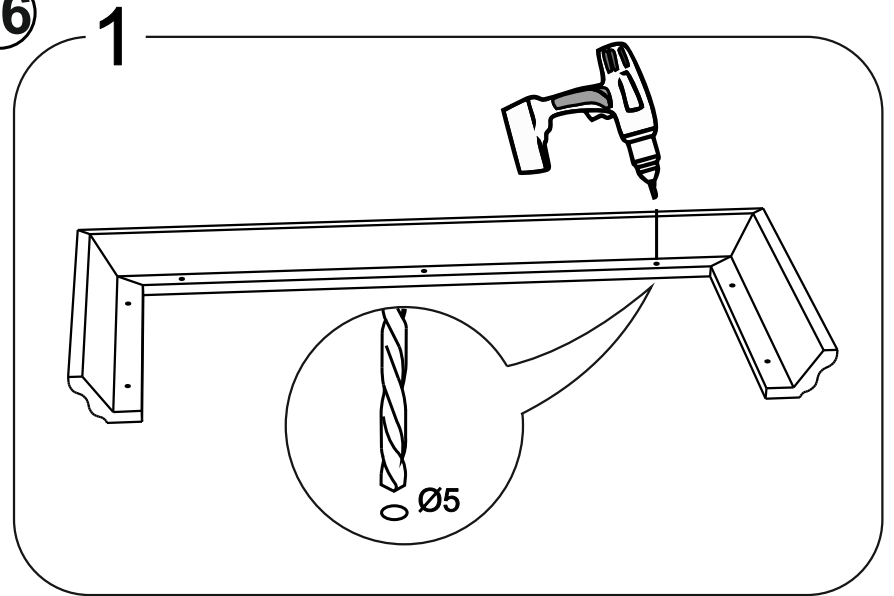


15

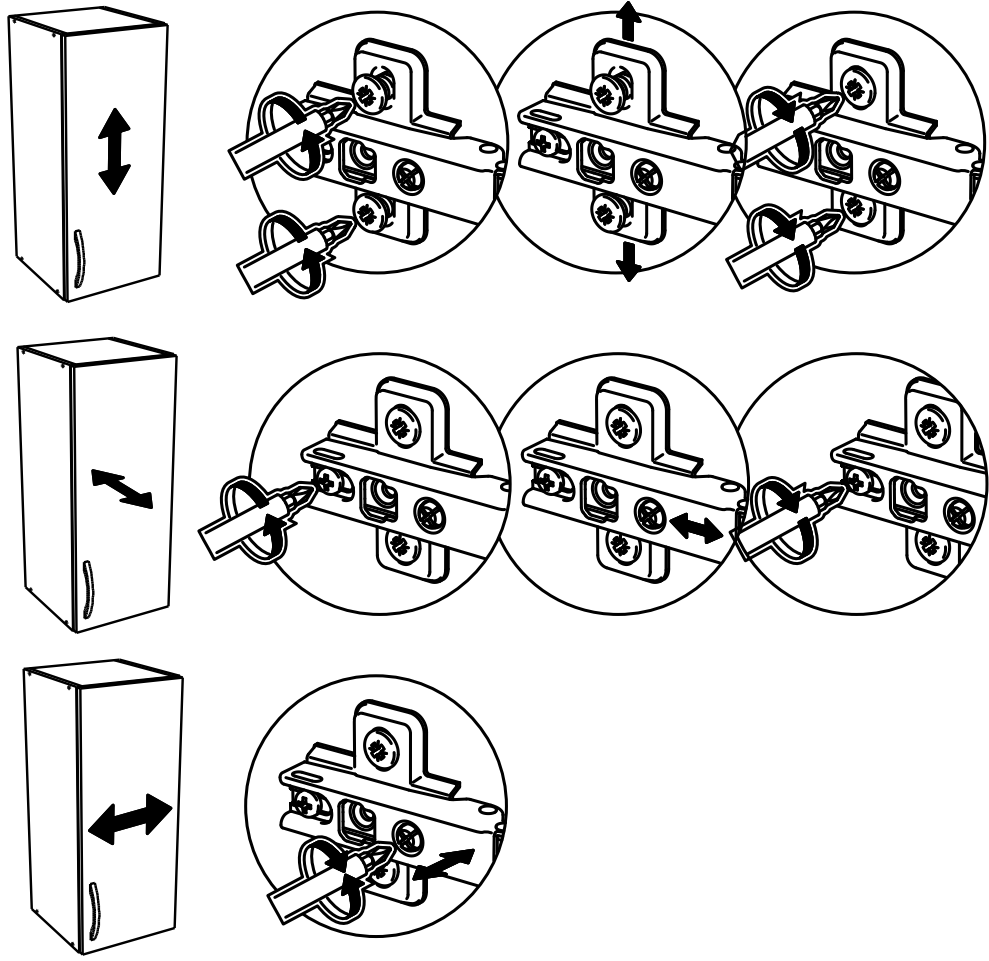


1

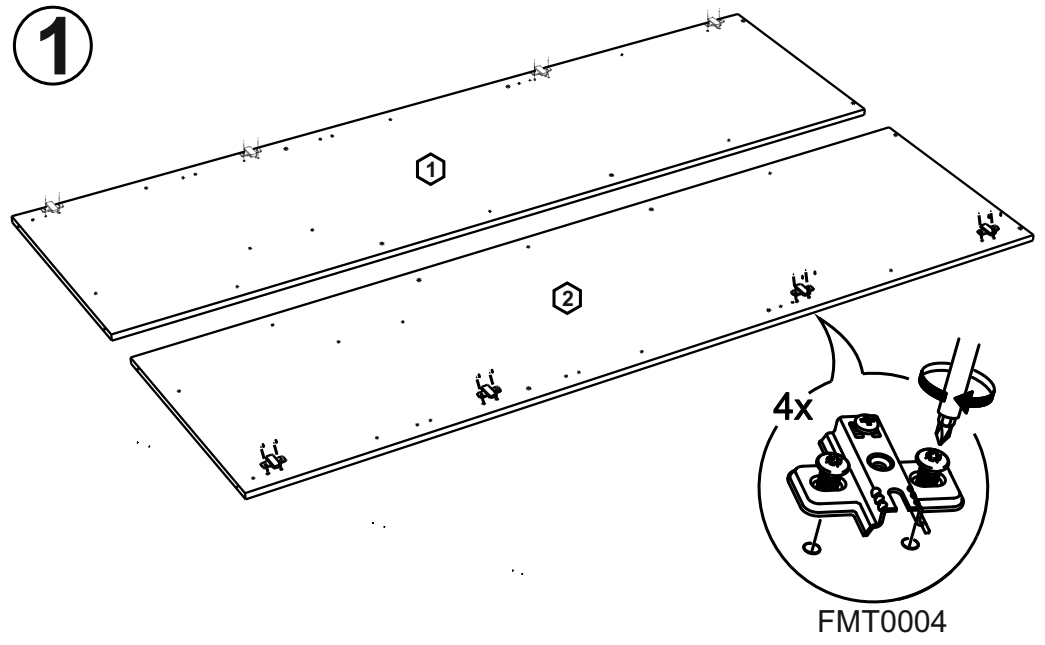


2

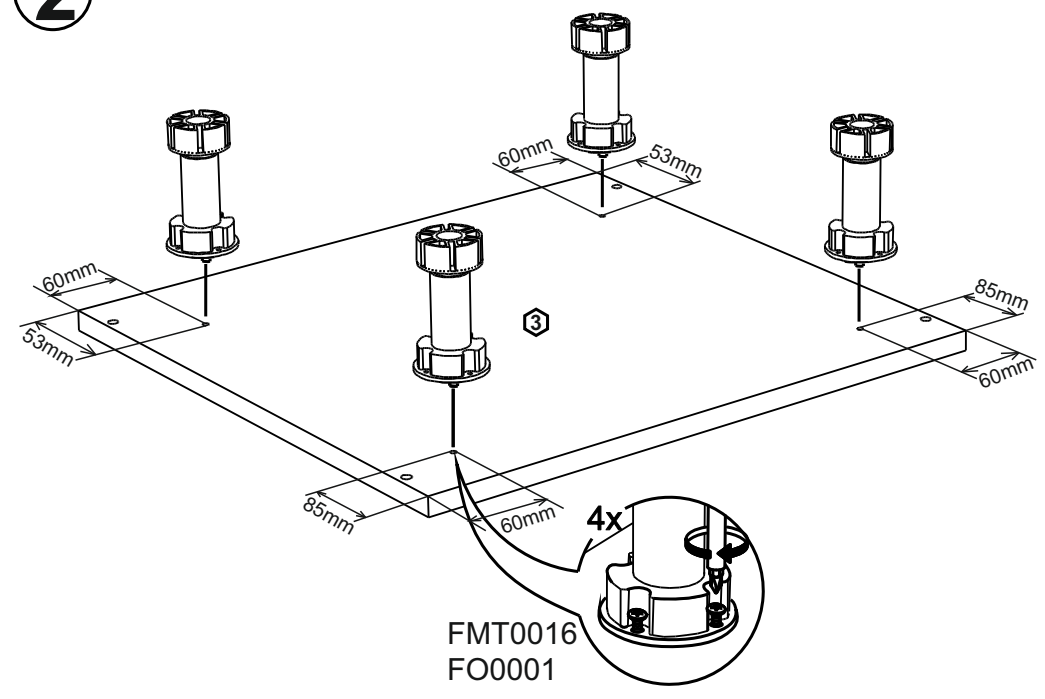


3

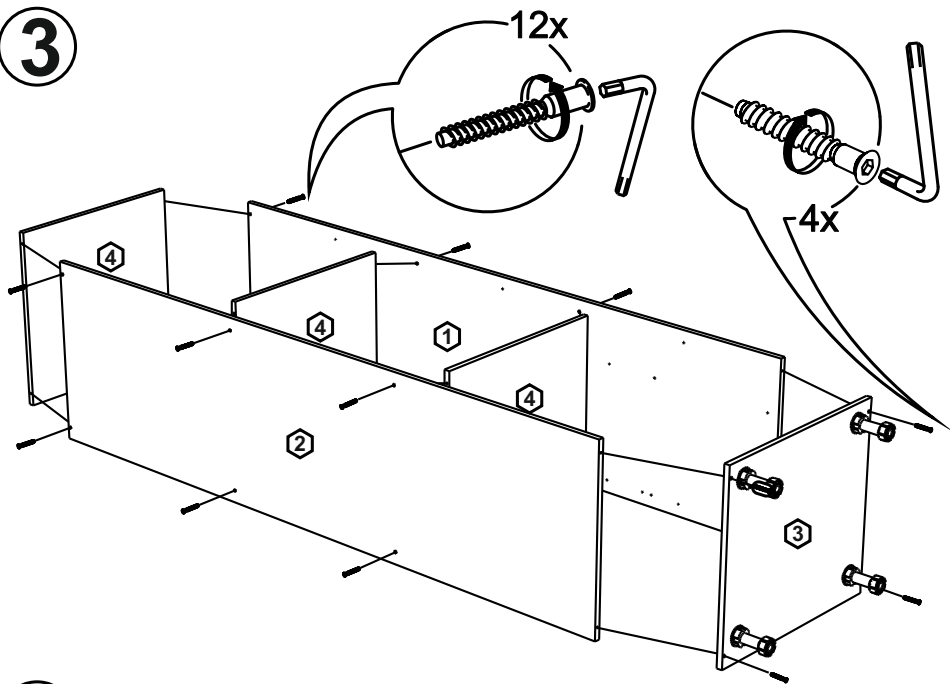


4

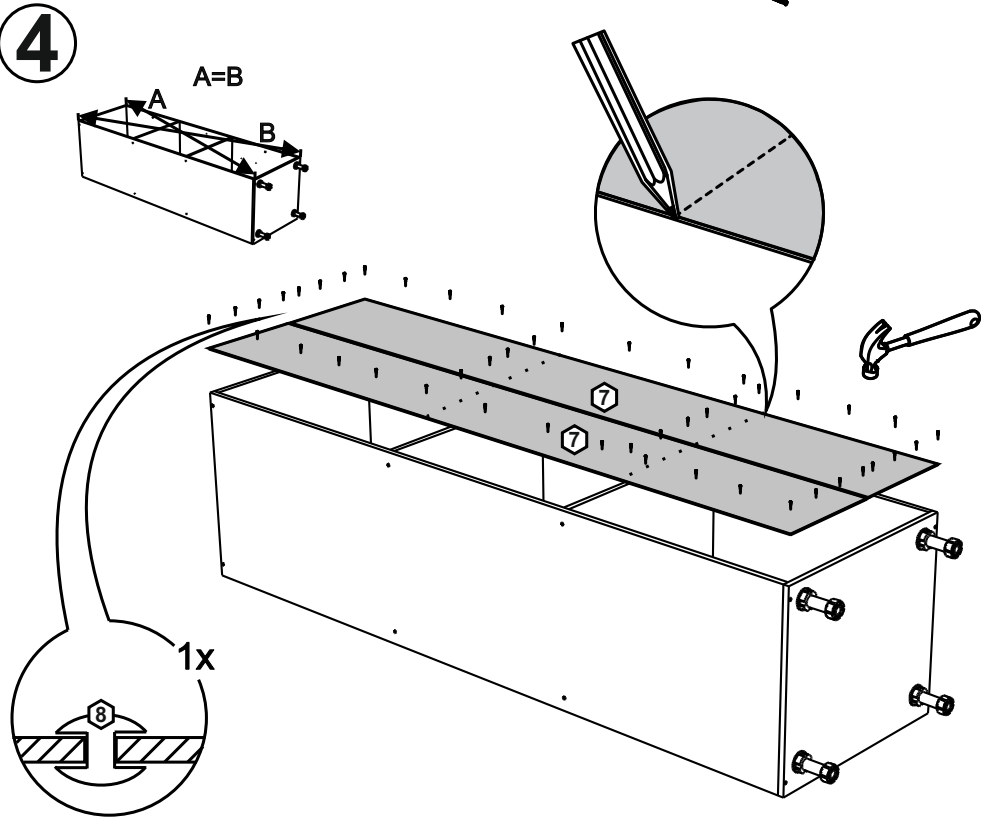


13

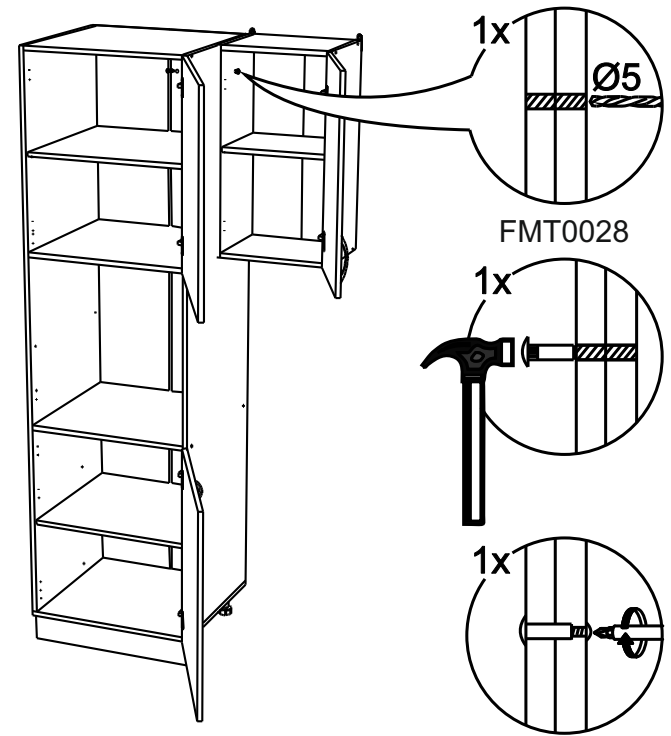


14

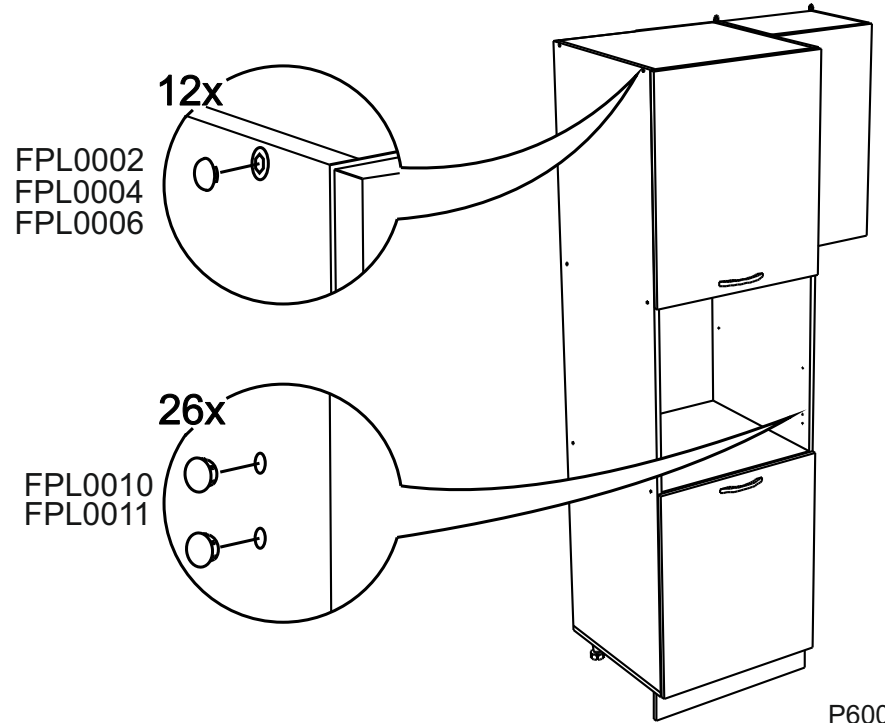


11

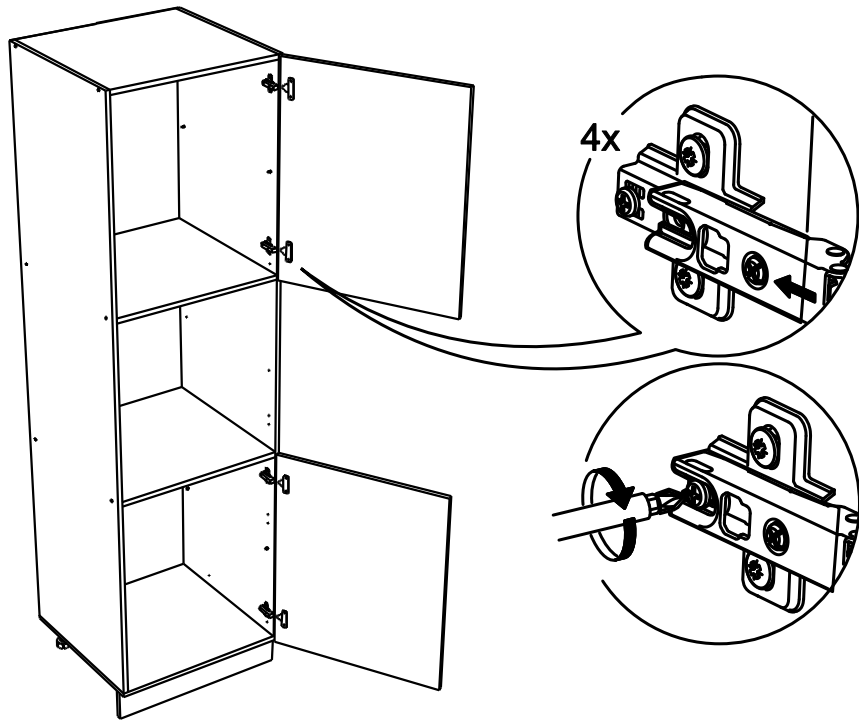


5

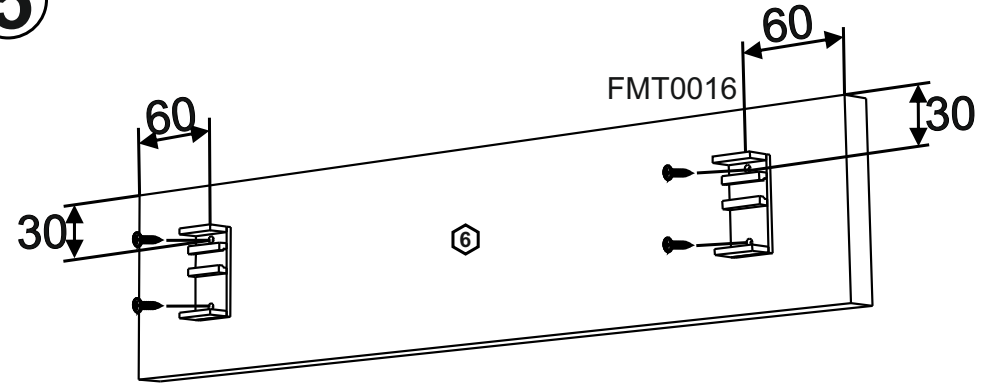


12

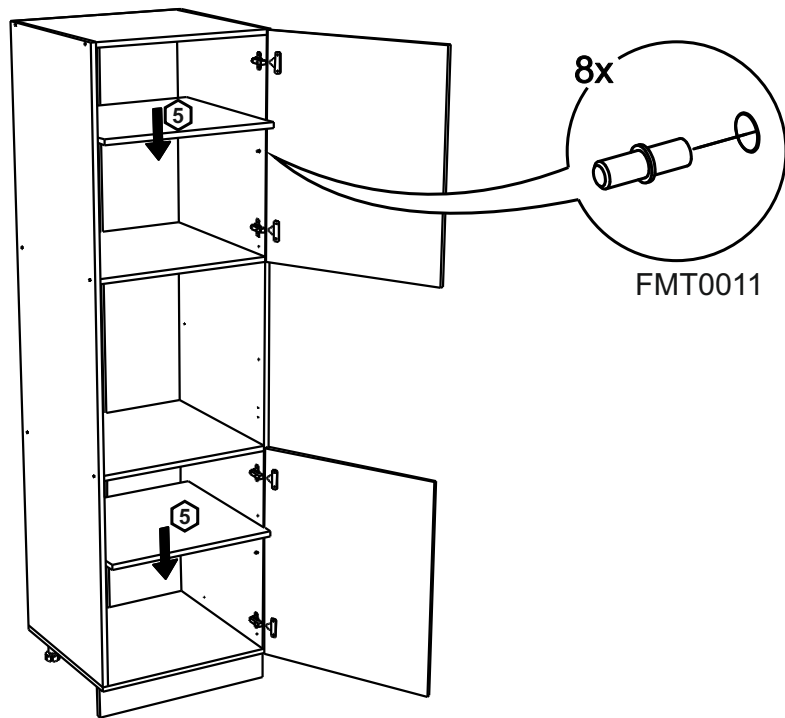


6

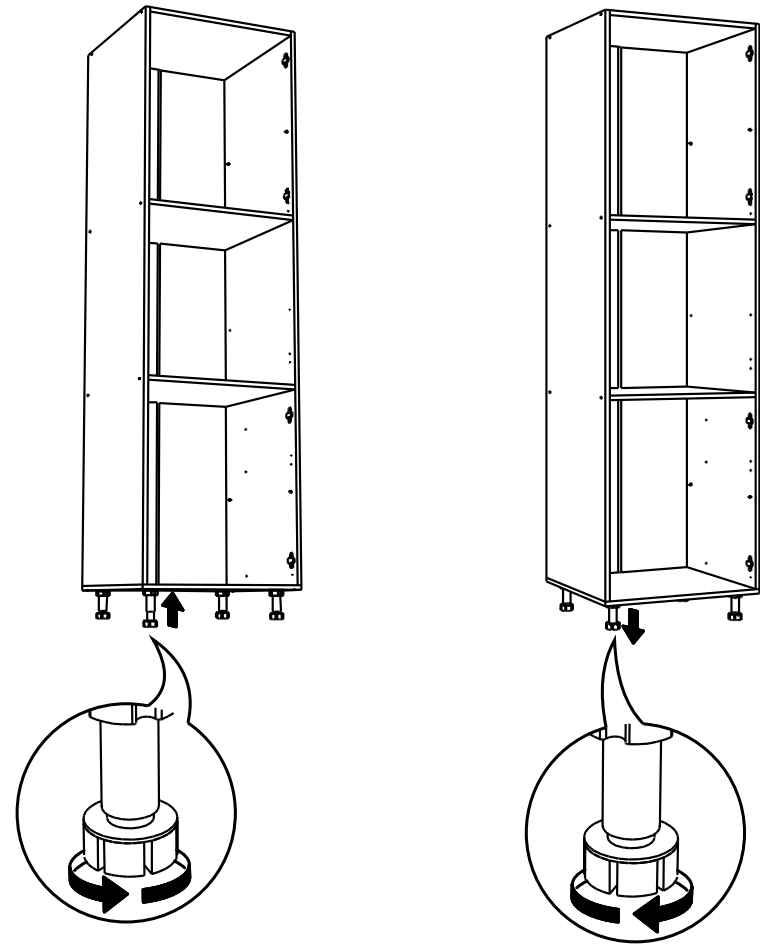



7

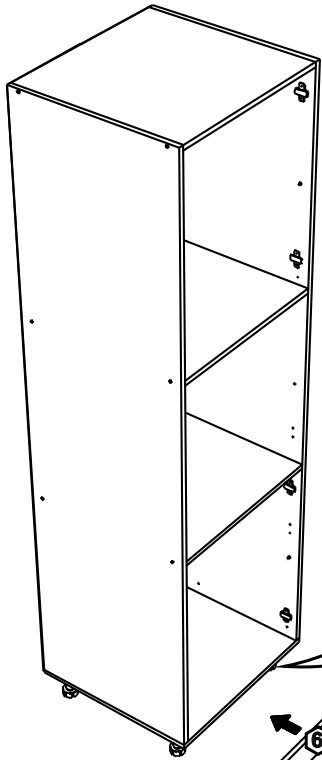

F-92
1312*596



F-46
712*596

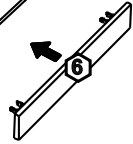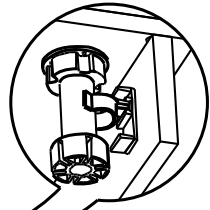


F-46
712*596



F-46
712*596


8

FMT0016

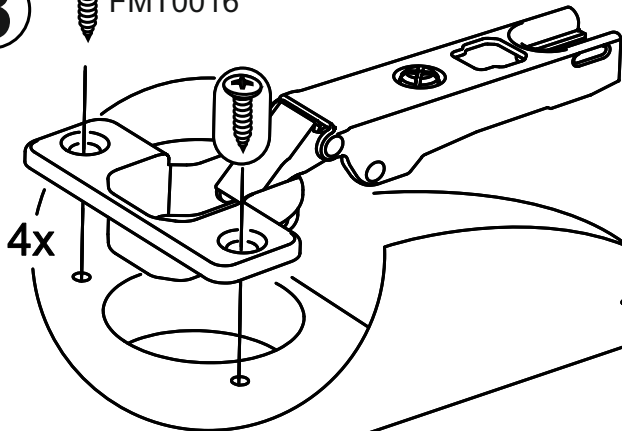

4x


9

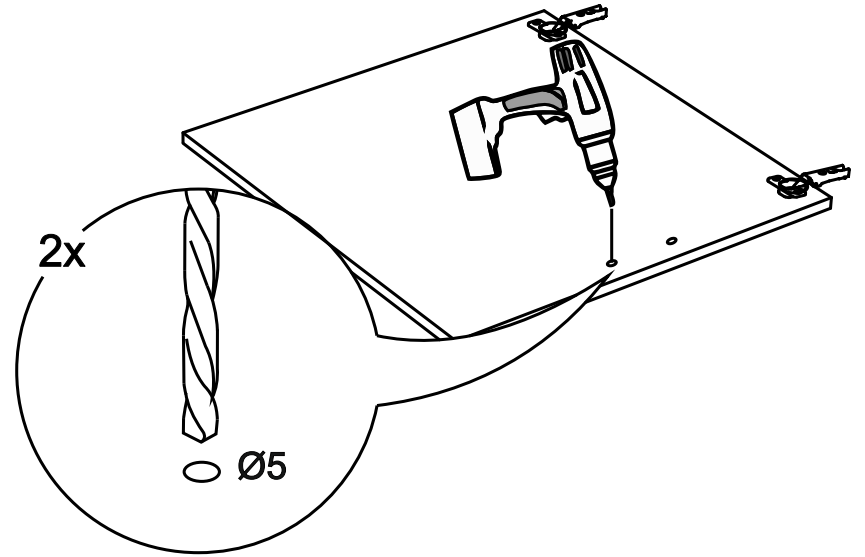


2x





Ø5

10



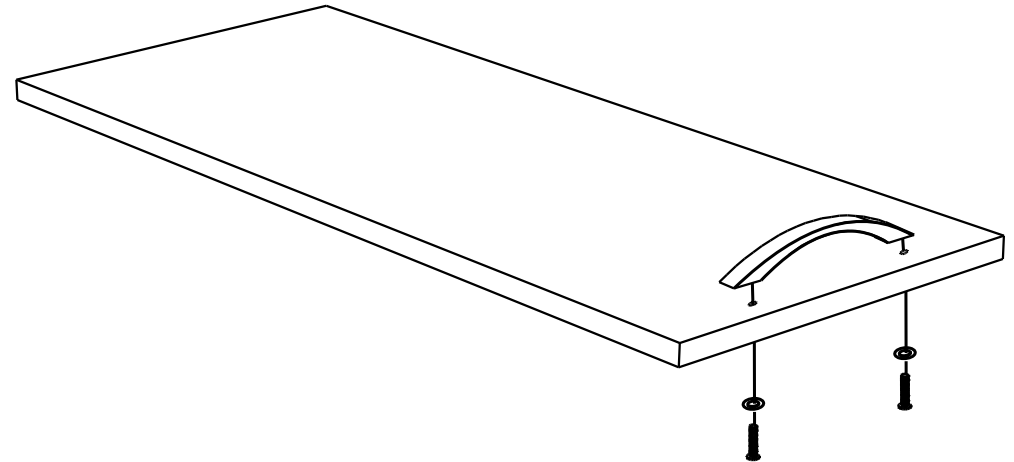


P600H

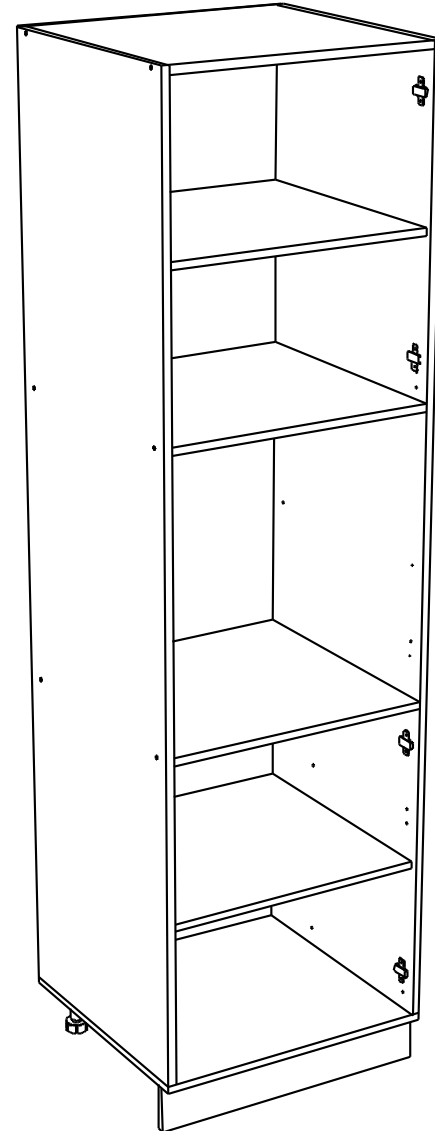

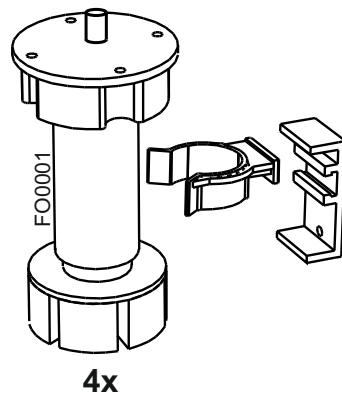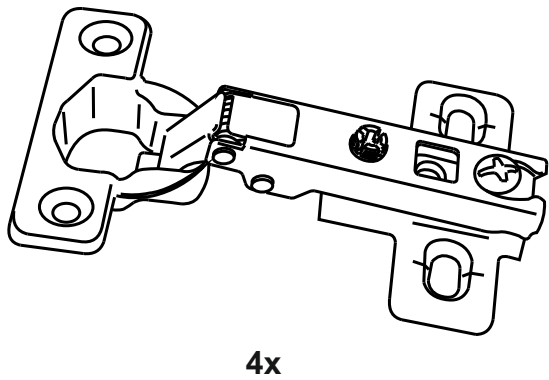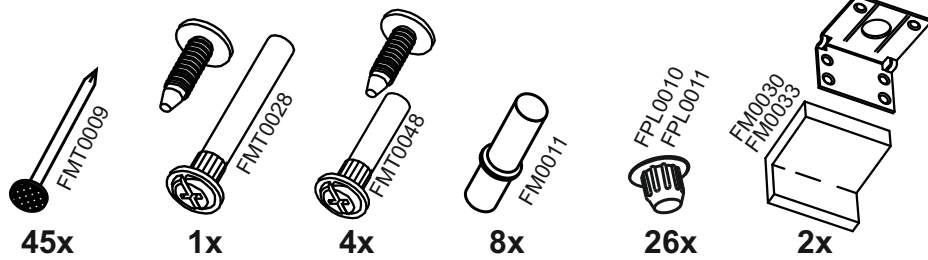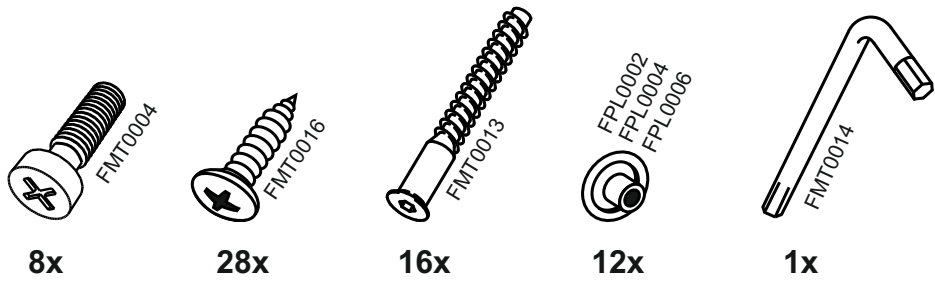


17

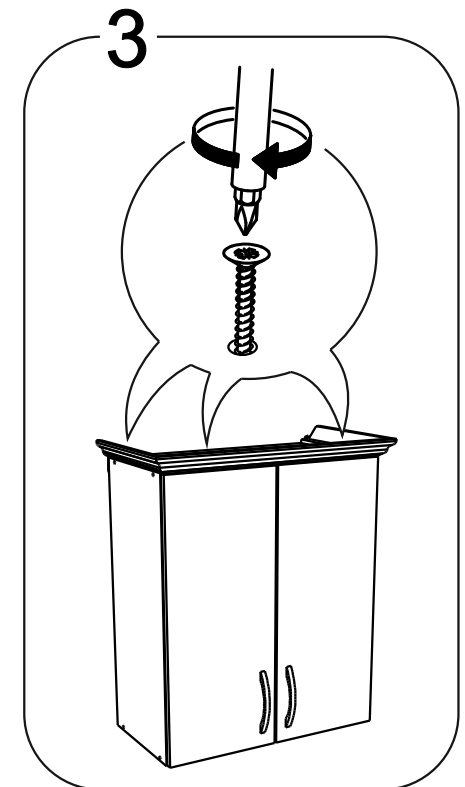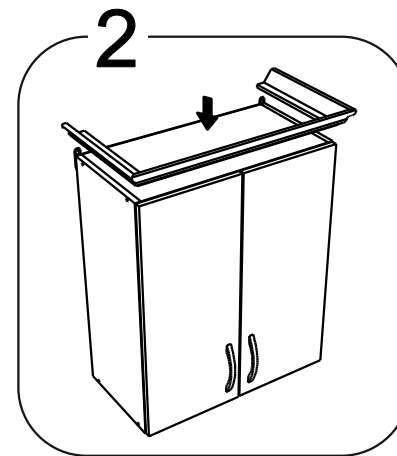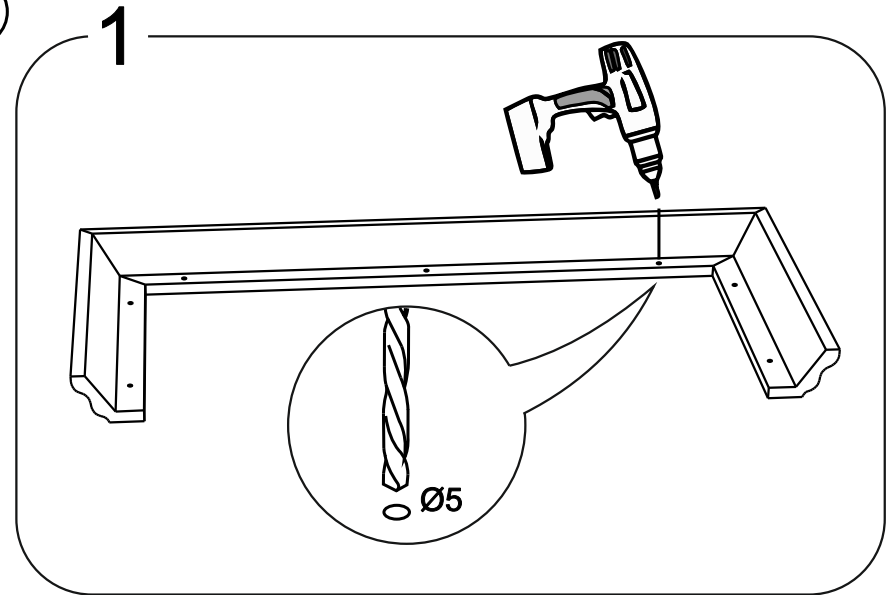


В мебельном наборе могут быть конструктивные изменения, не ухудшающие качество изделия, но не указанные в данной инструкции.












In furniture KIT, there may be changes, not specified in this manual, which don't deteriorate the quality of the produkt.

16



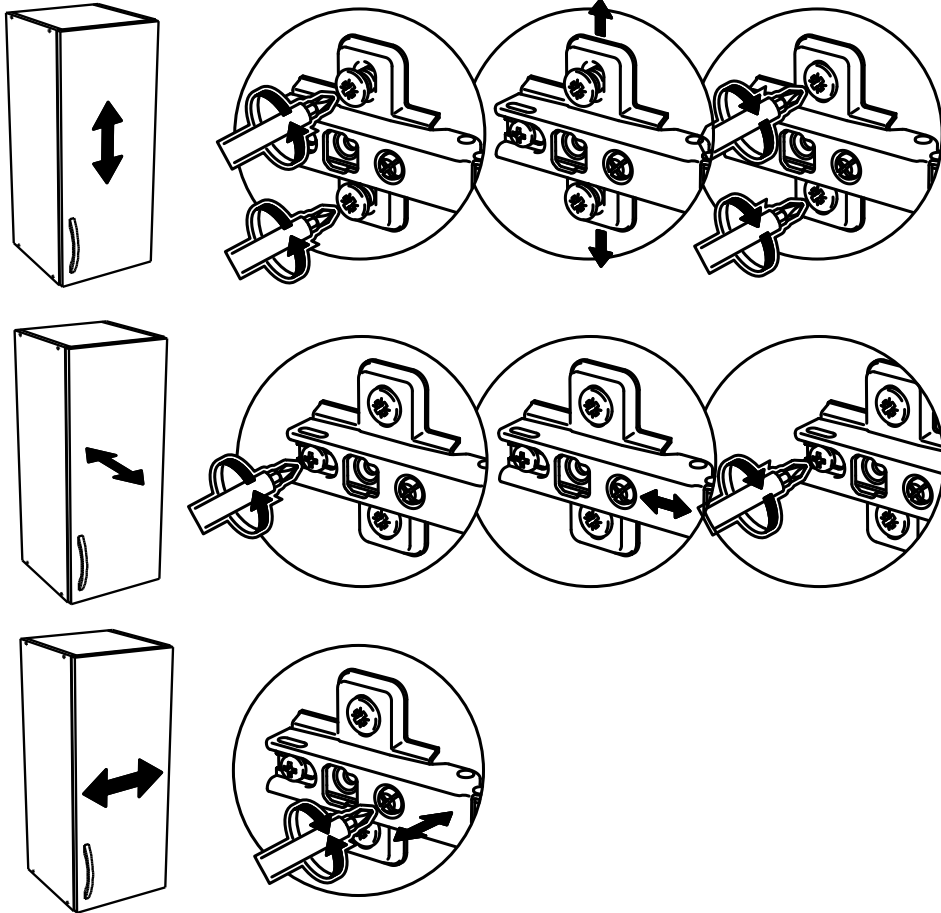


No	code	a*b	x
1	P400H.01	2220*554	1
2	P400H.02	2220*554	1
3	P600.01	600*554	1
4	P600.02	568*554	3
5	P600.03	568*540	2
6	N600.05	600*100	1
7	P600H.01	2235*295	2
8	P600H.02	685 mm	1
9	P600H.03	601 mm	1
10	P600H.04	886 mm	1

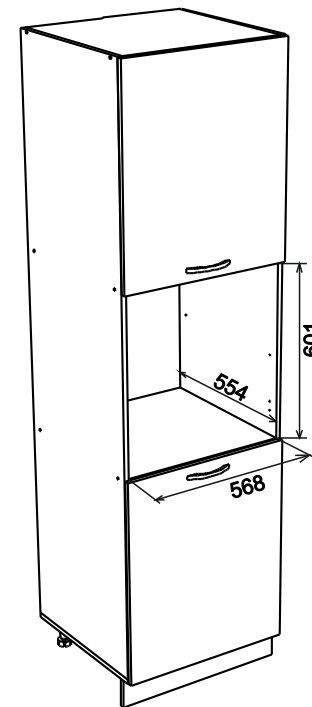


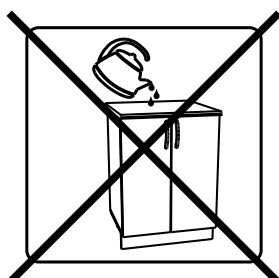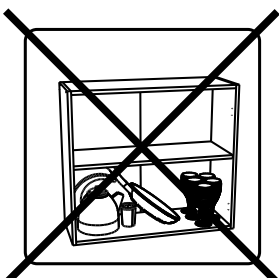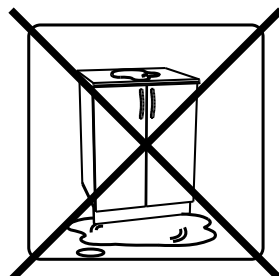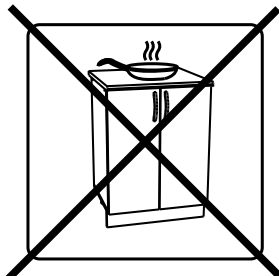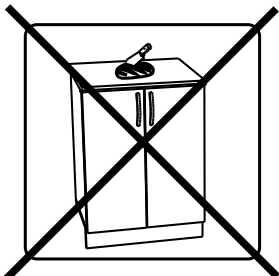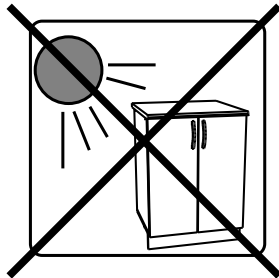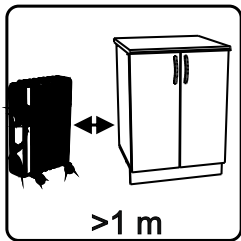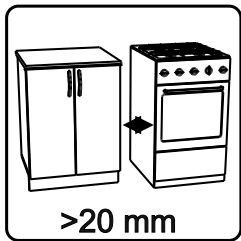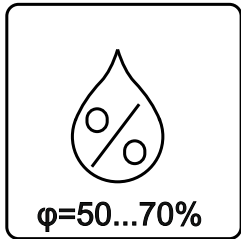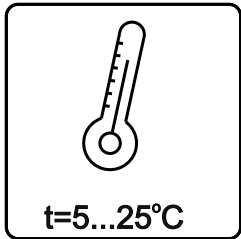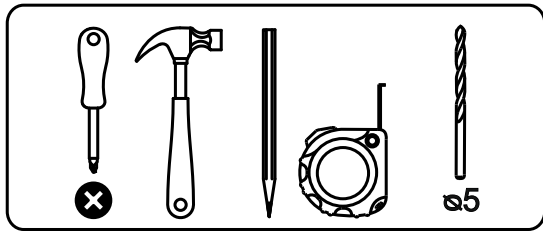

15

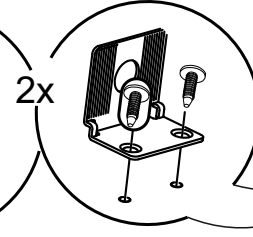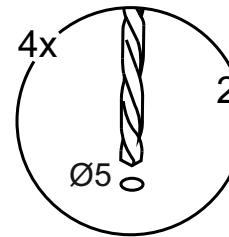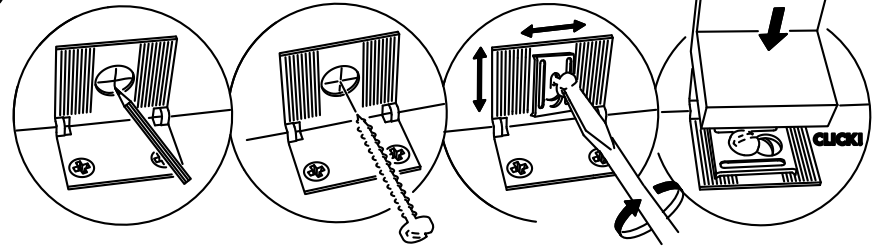


FM0030/FM0033
FMT0048

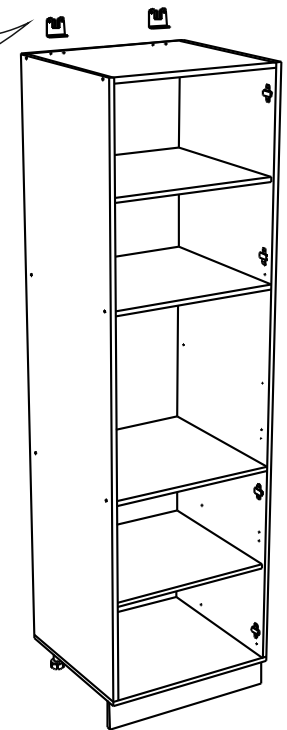


Внимание! Крепление пенала к стене крепёжным уголком обязательно! Крепёжные средства для крепления к стене не прилагаются, для разных материалов стен требуются различные крепления. Используйте крепёжные средства, подходящие для материала стен в Вашем доме.

Attention! Use mounting angle to mount high cabinet to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home.


14

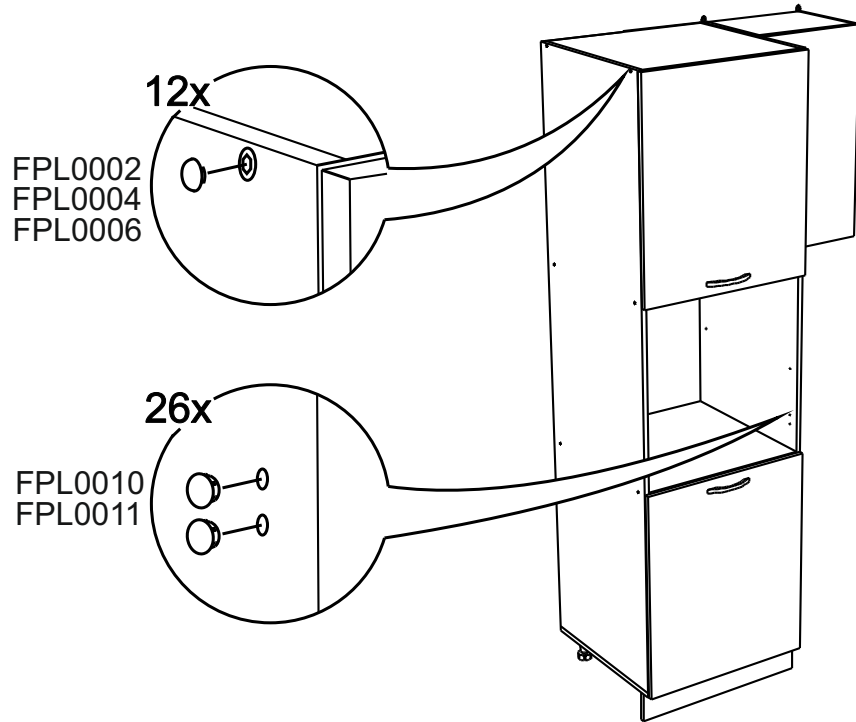


1

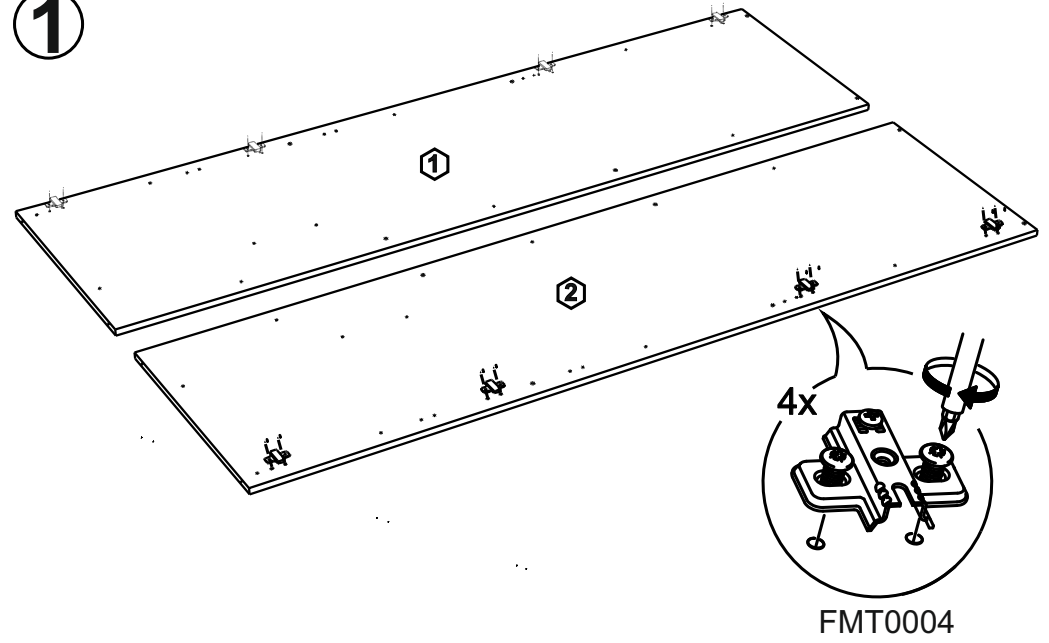


2

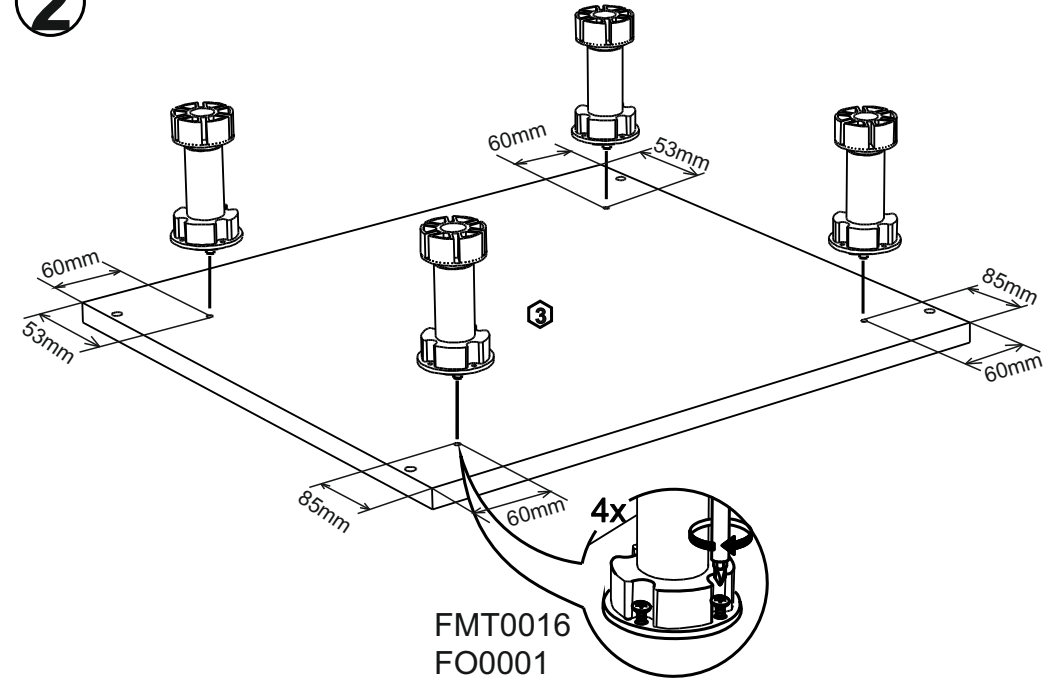


3

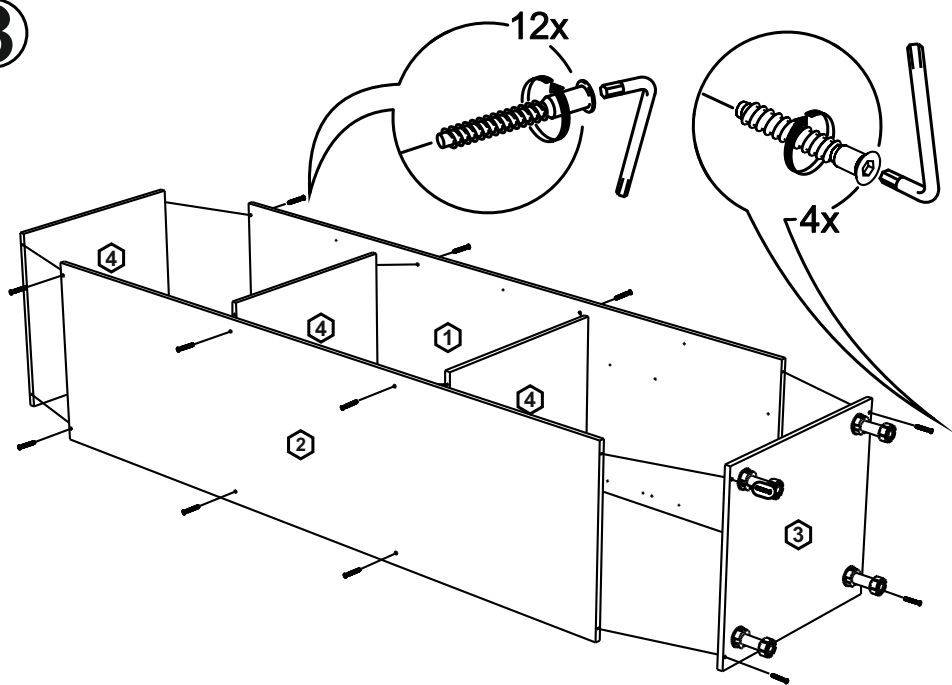

4

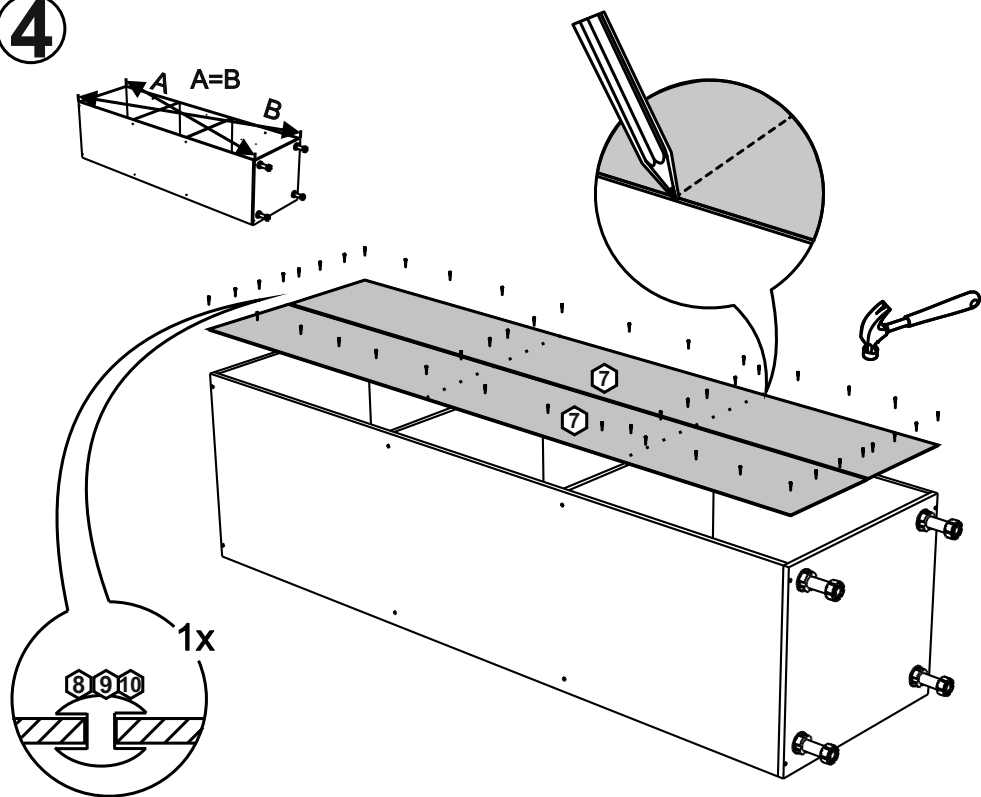


13

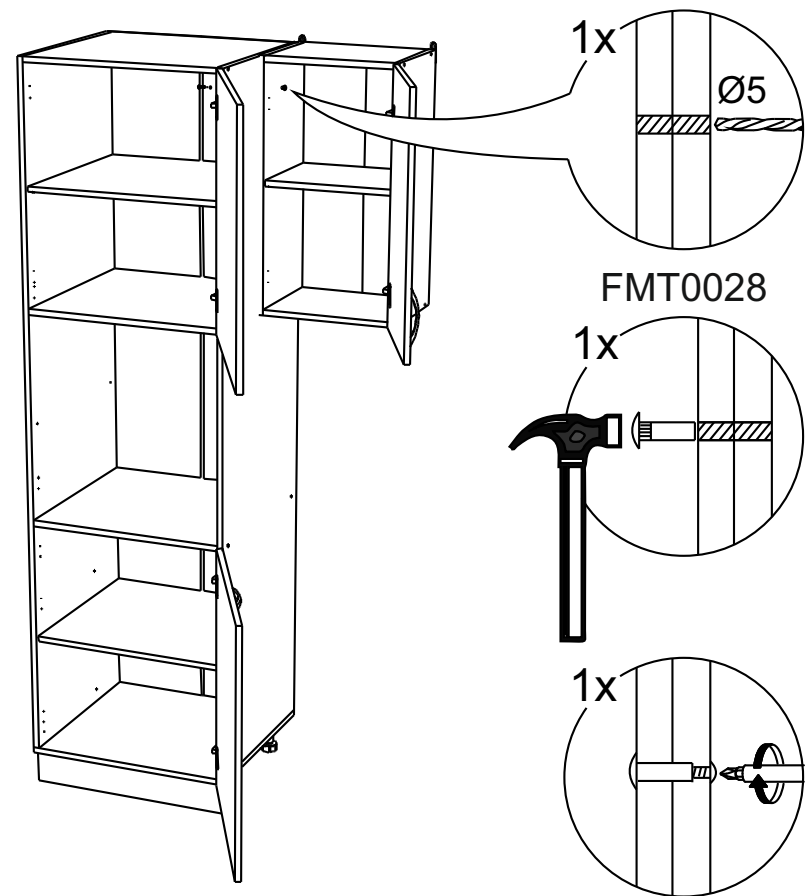


Внимание! Крепление пенала к рядомстоящим модулям межсекционной стяжкой обязательно!

Attention! Use connection screw to mount high cabinet to the nearest base and wall cabinets.


11

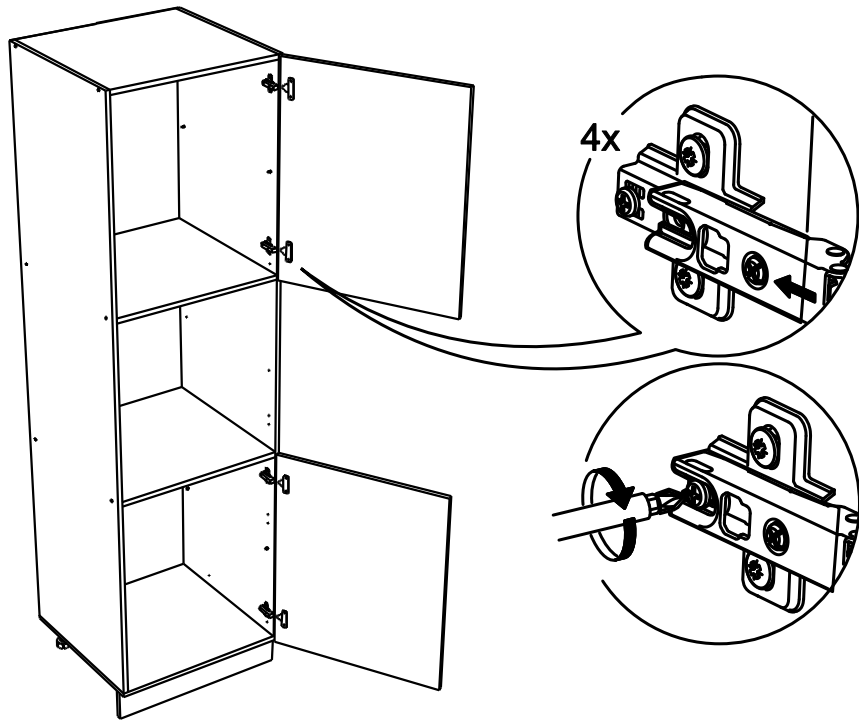


5

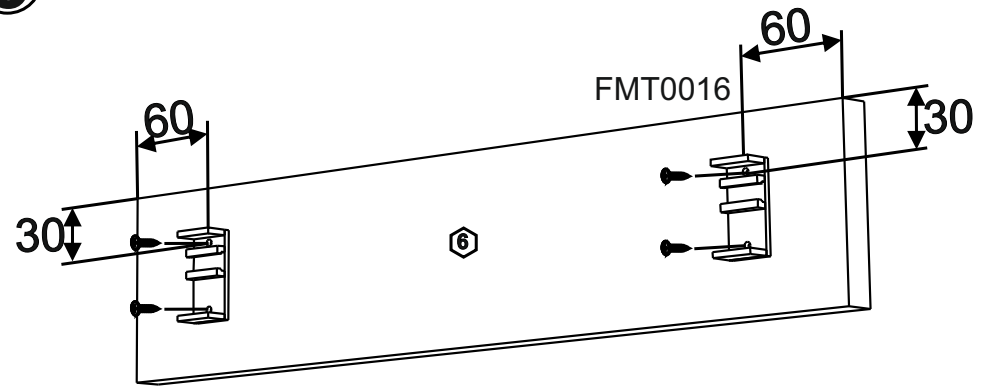


12

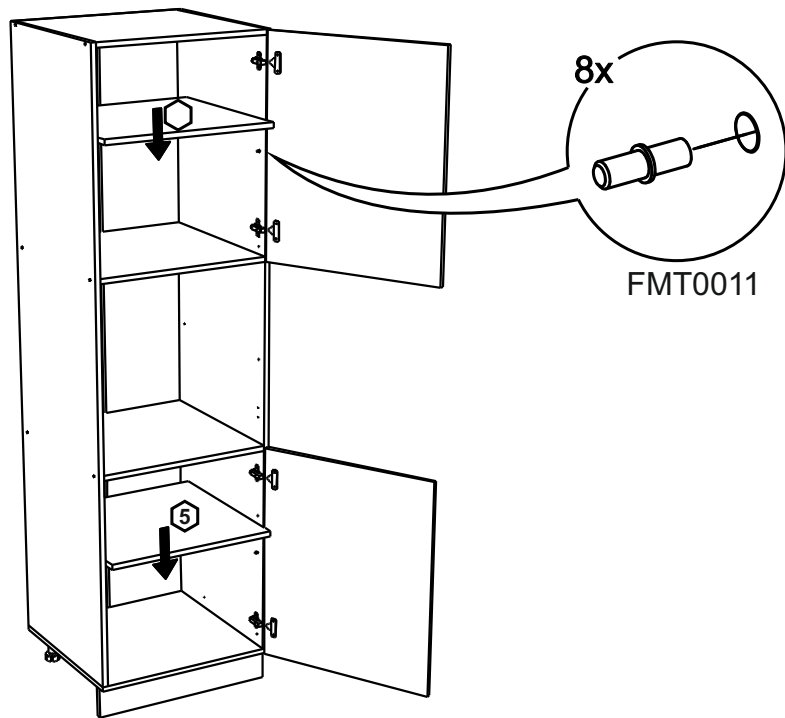


6

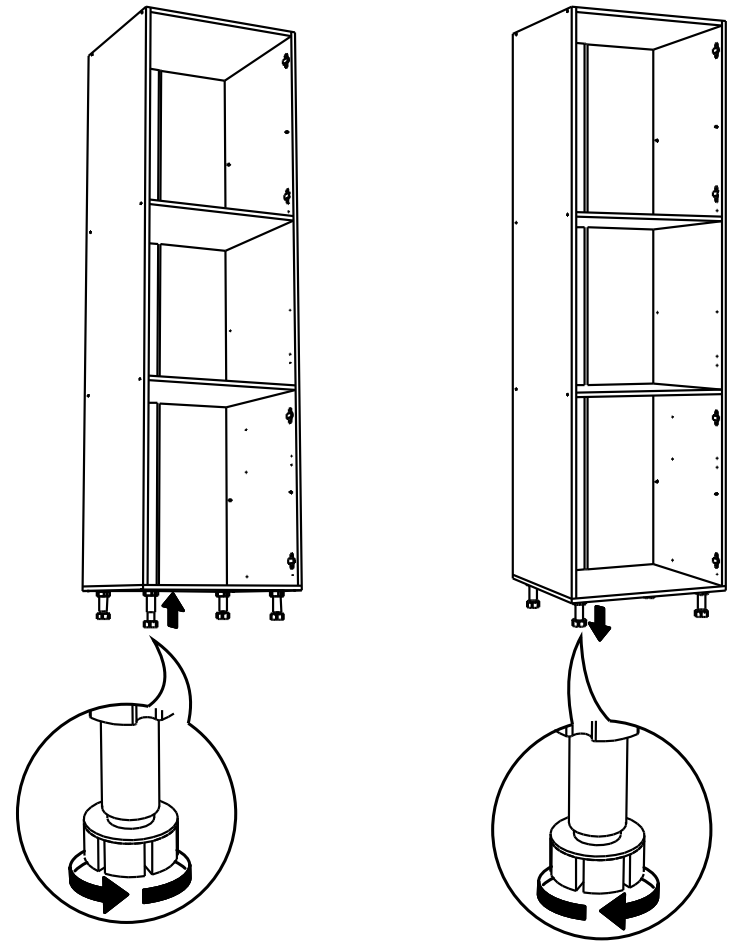

7

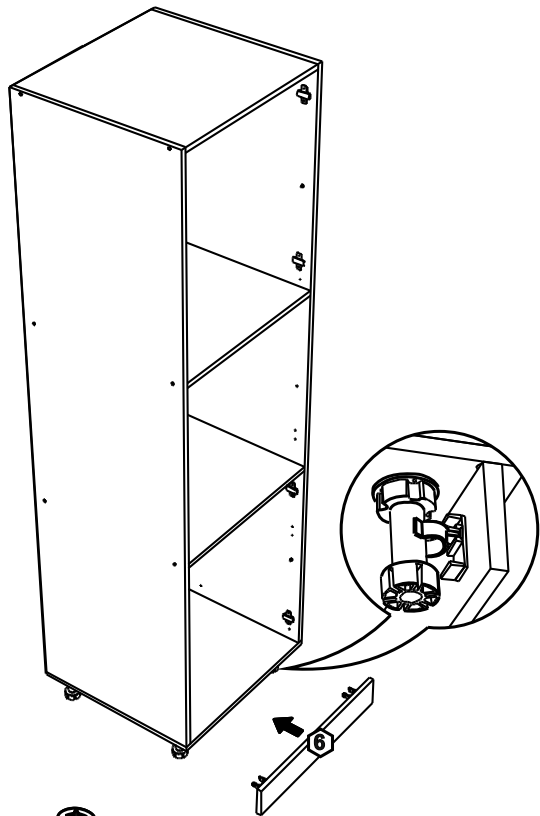

F-92H
1516*596




F-46
712*596

F-46H
916*596




F-46
712*596


8

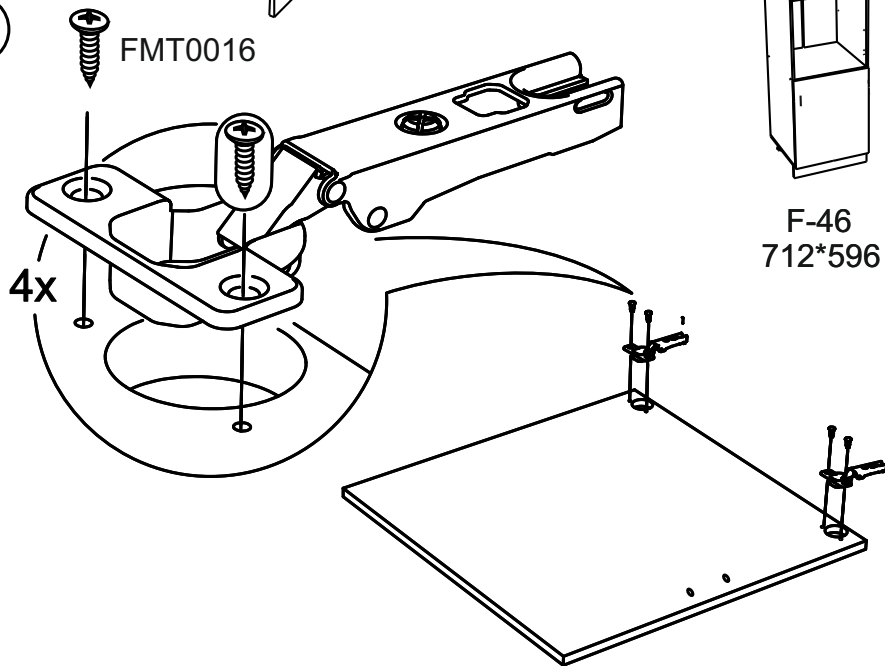


9




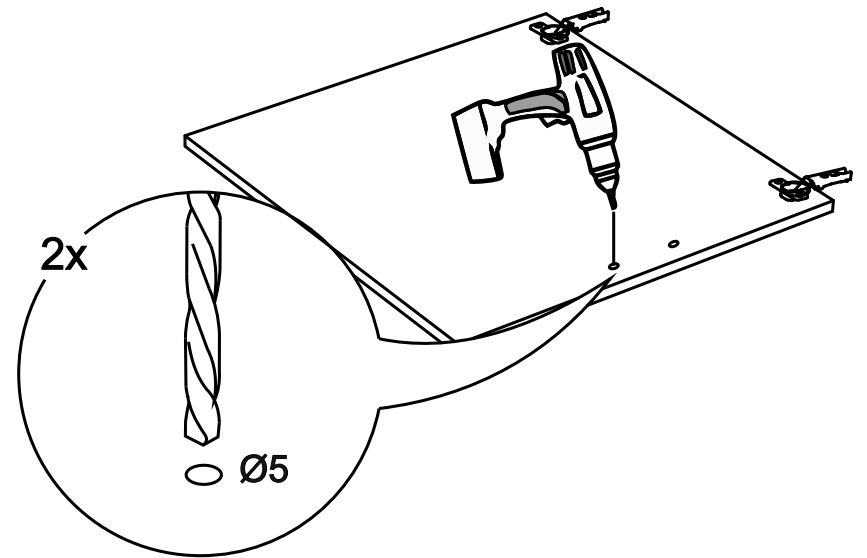


10

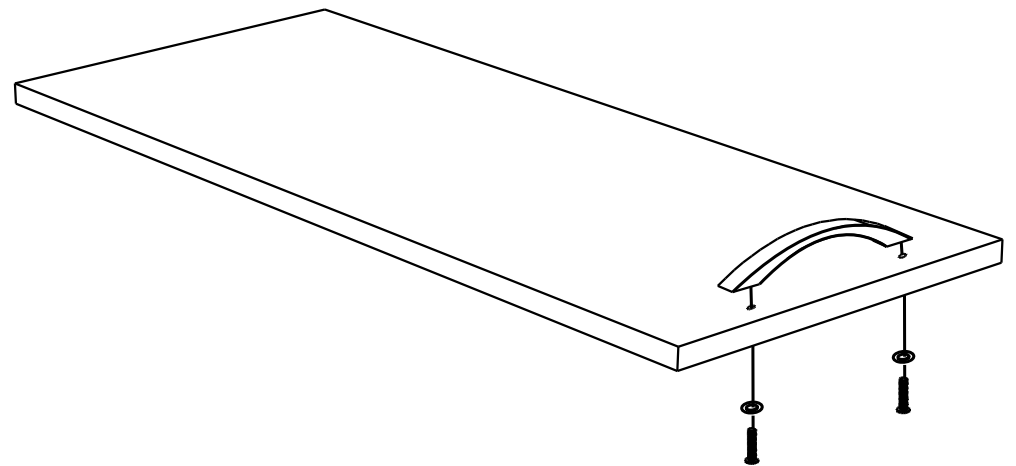

P606M

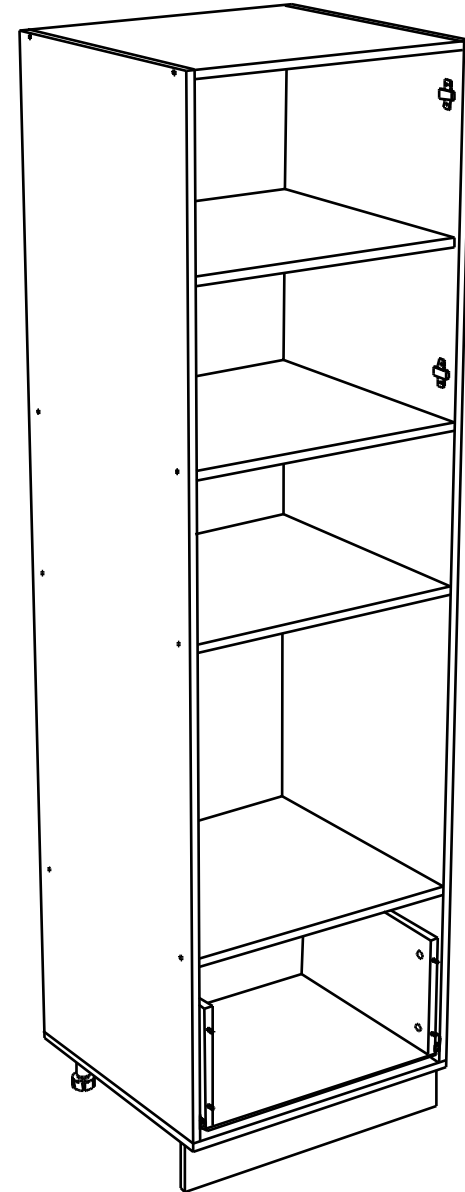












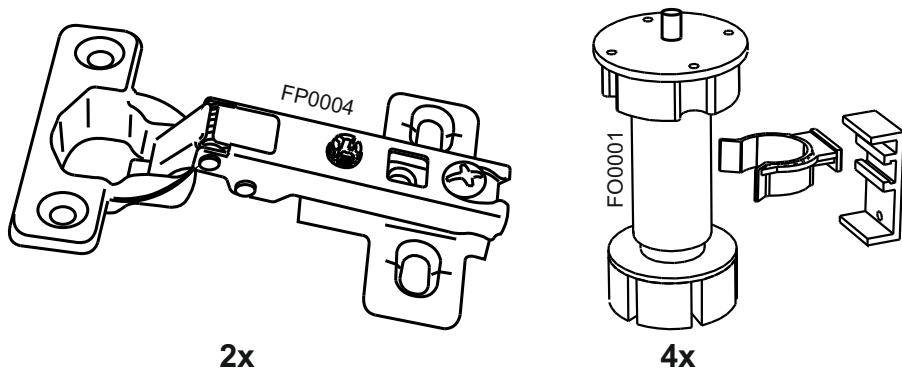
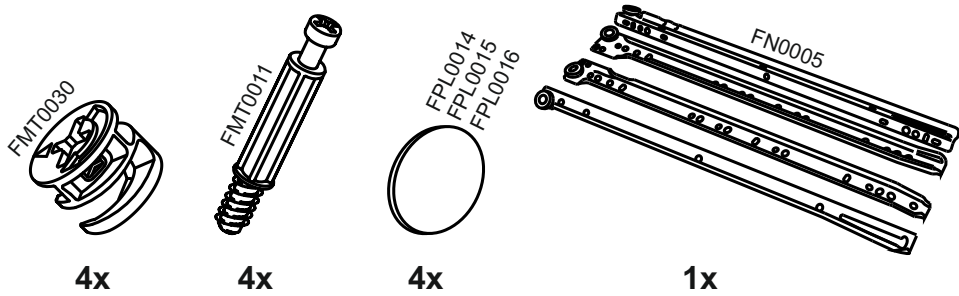
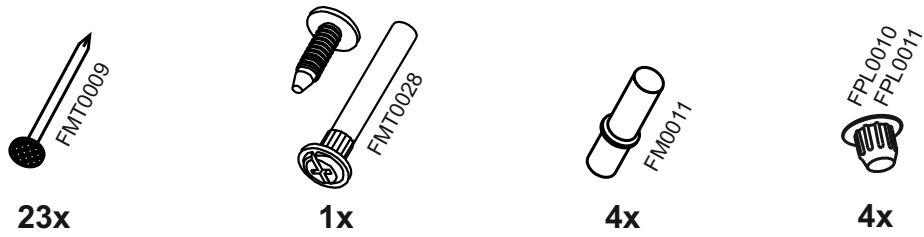
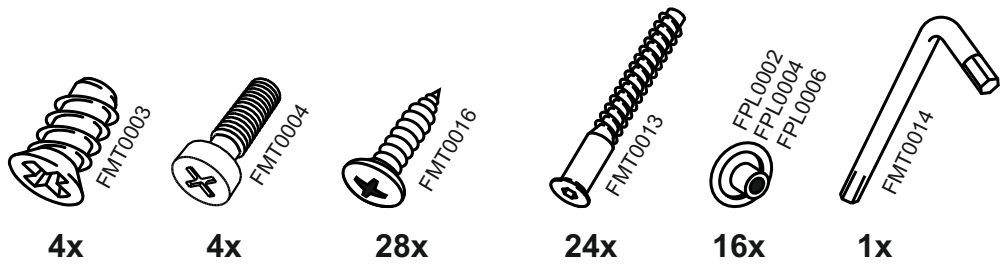


В мебельном наборе могут быть конструктивные изменения, не ухудшающие качество изделия, но не указанные в данной инструкции.

In furniture KIT, there may be changes, not specified in this manual, which don't deteriorate the quality of the produkt.

No	code	a*b	x
1	P606M.01	2016*554	1
2	P606M.02	2016*554	1
3	P600.01	600*554	1
4	P600.02	568*554	3
5	P600.03	568*540	1
6	N600.05	600*100	1
7	N302.01	450*250	2
8	N602.01	511*250	1
9	P606M.03	395*595	1
10	P606M.04	635*295	2
11	N601.02	540*455	1
12	P606M.05	606 mm	1
13	P606M.06	568*554	1

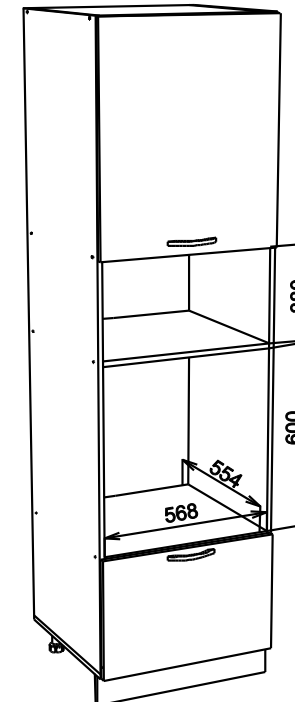


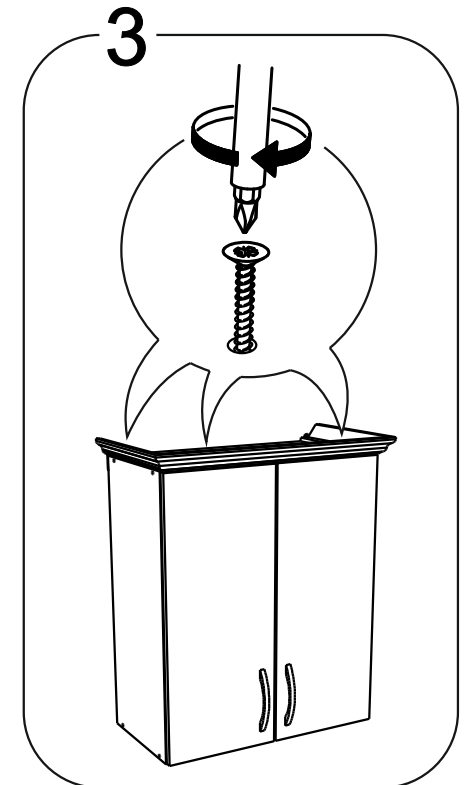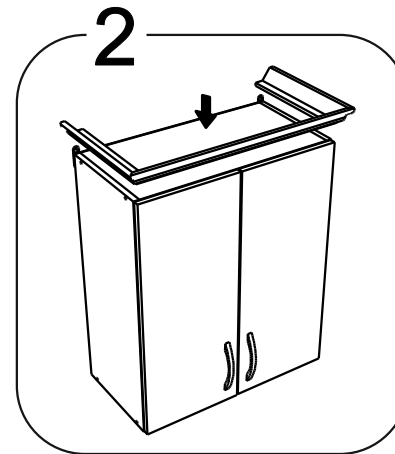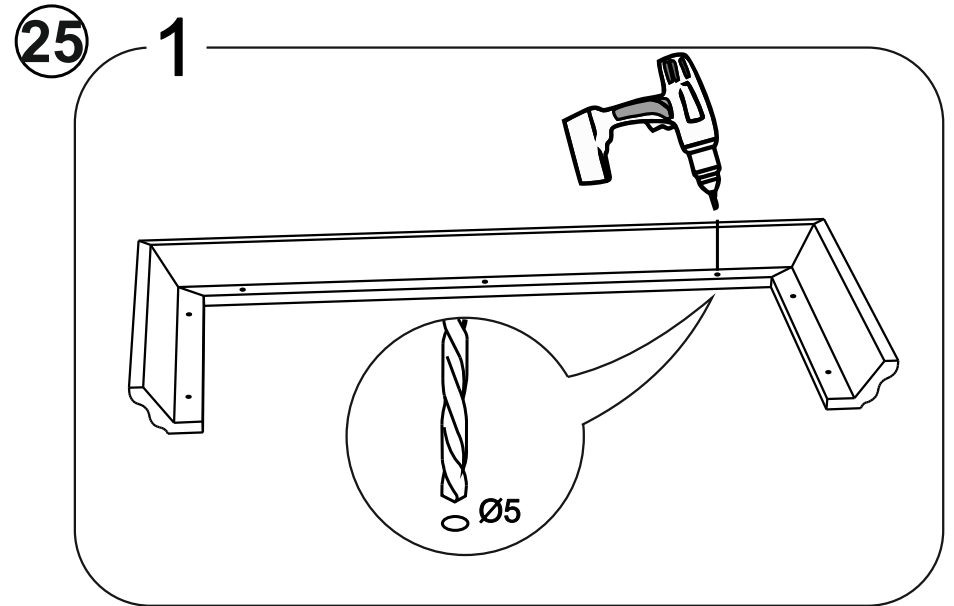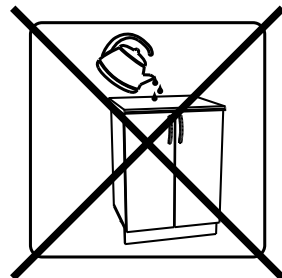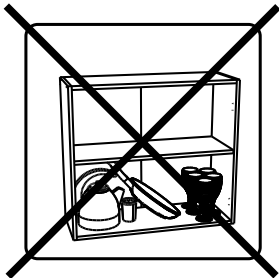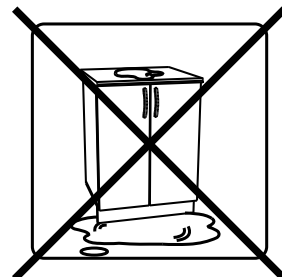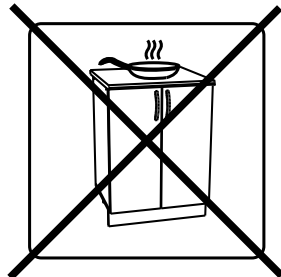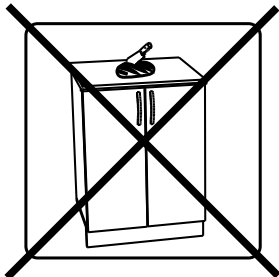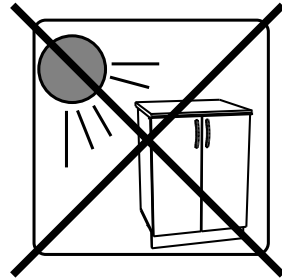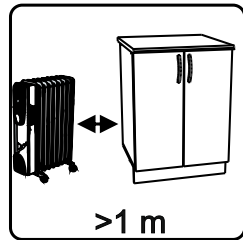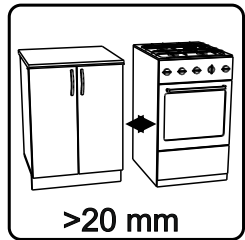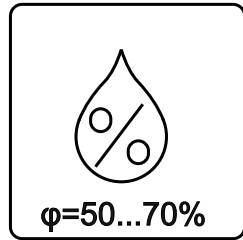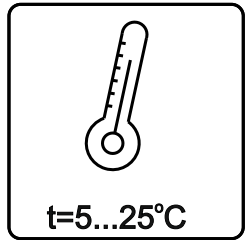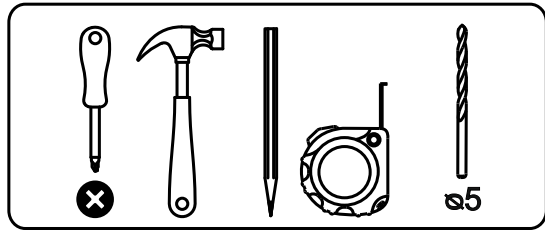


23

FPL0002
FPL0004
FPL0006


16x

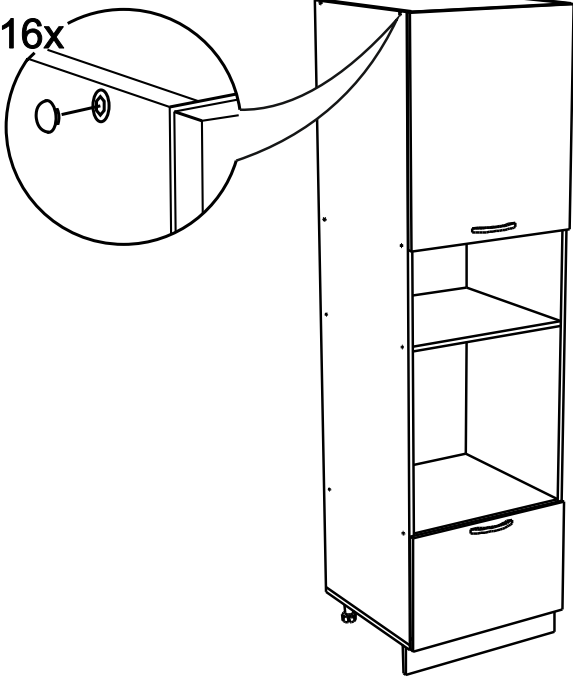


1

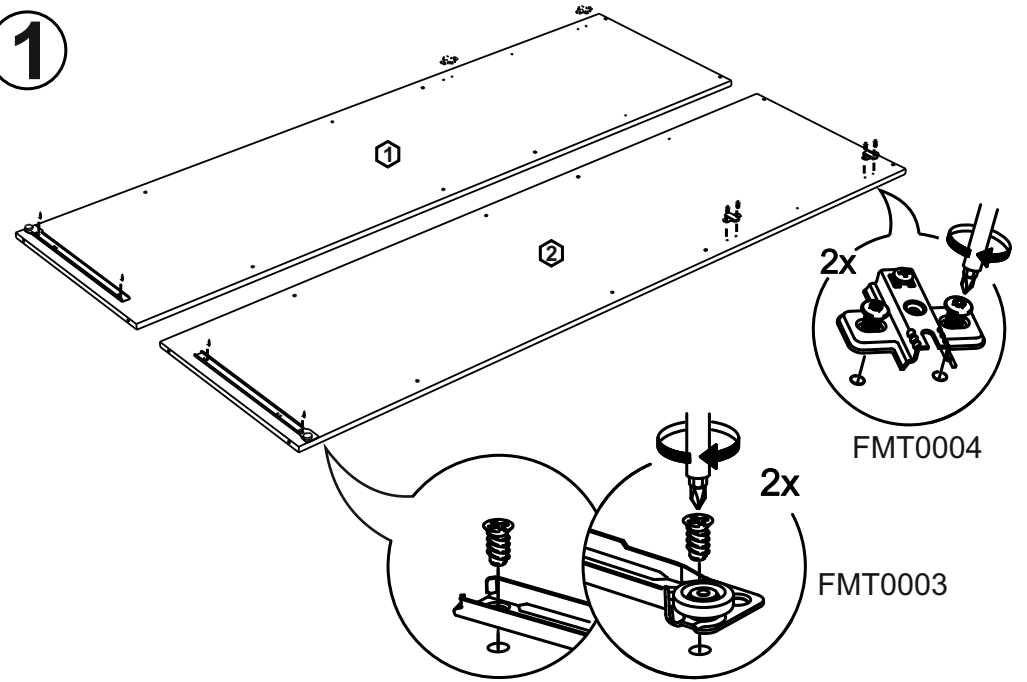


24

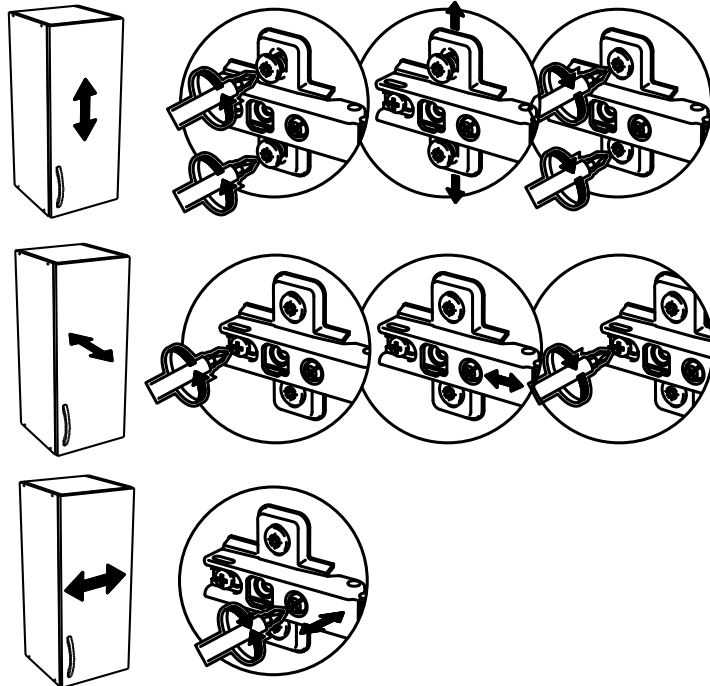


2

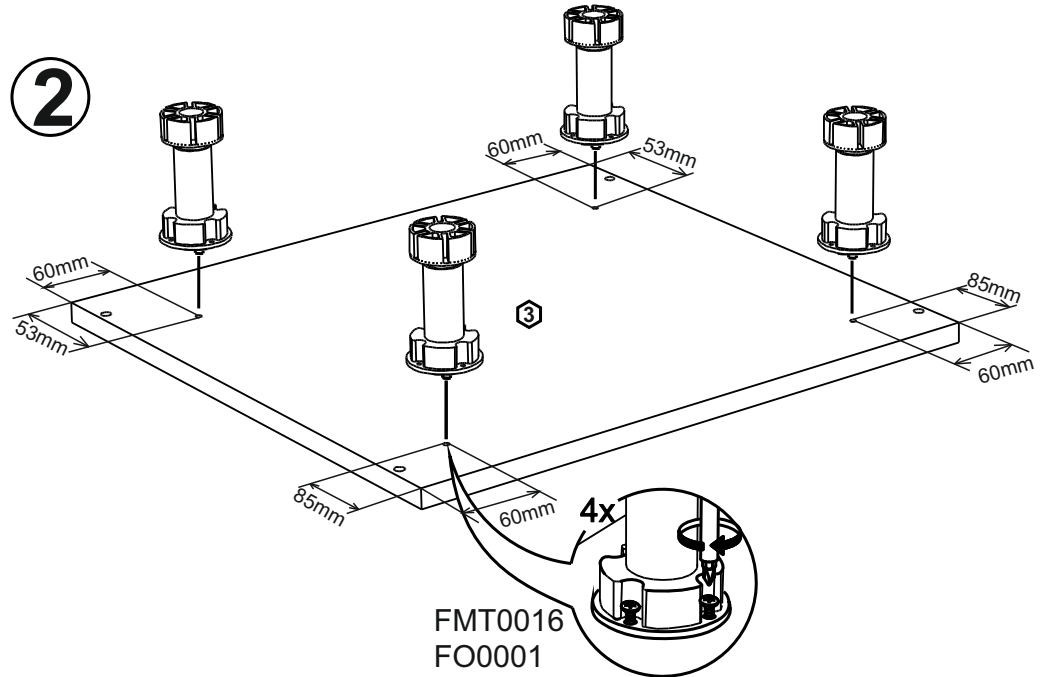


3

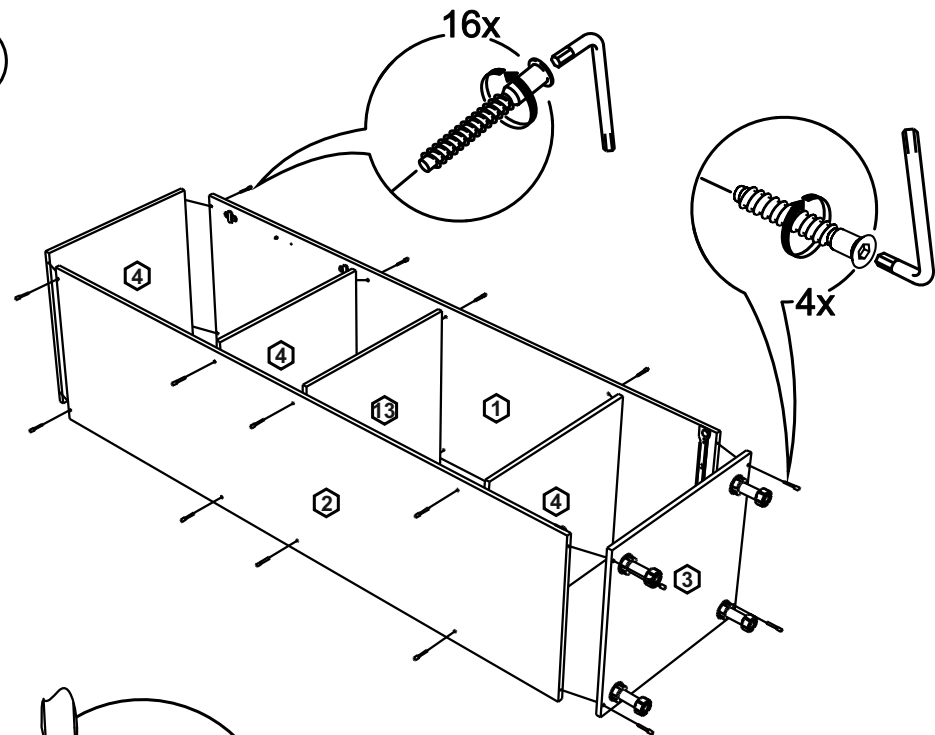


4

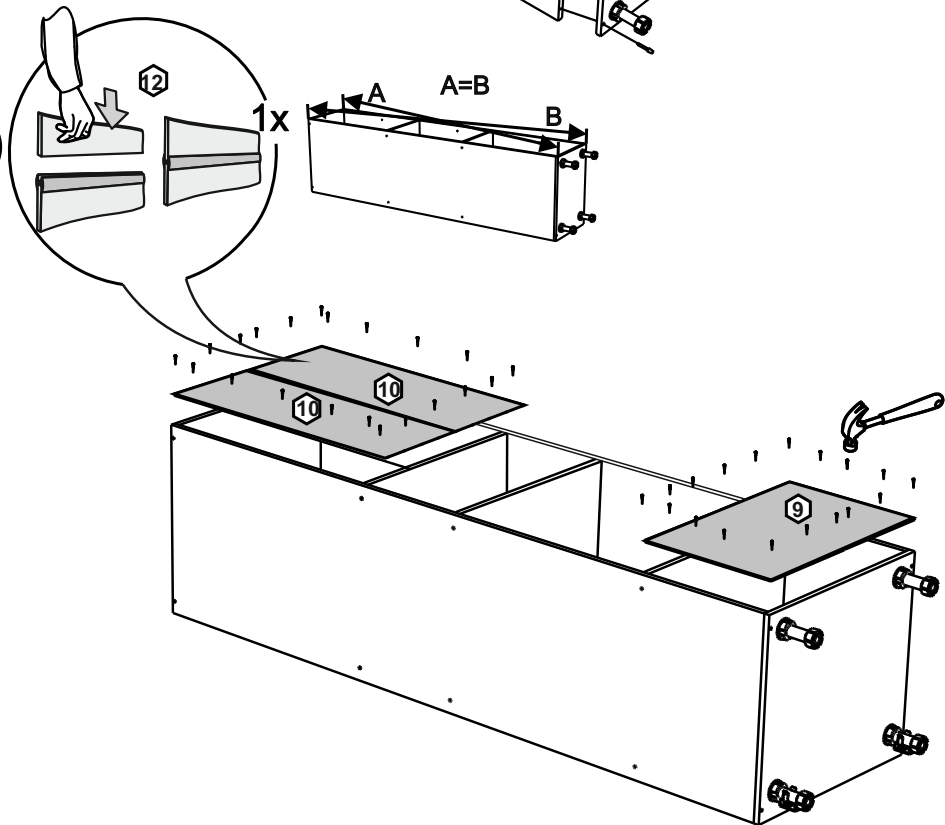


21

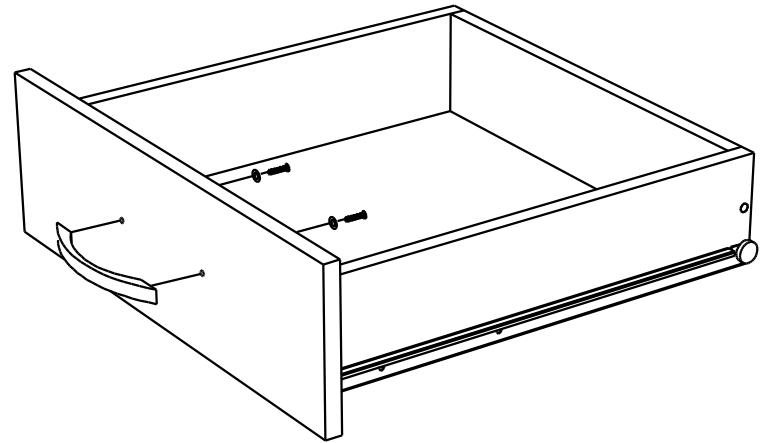


22

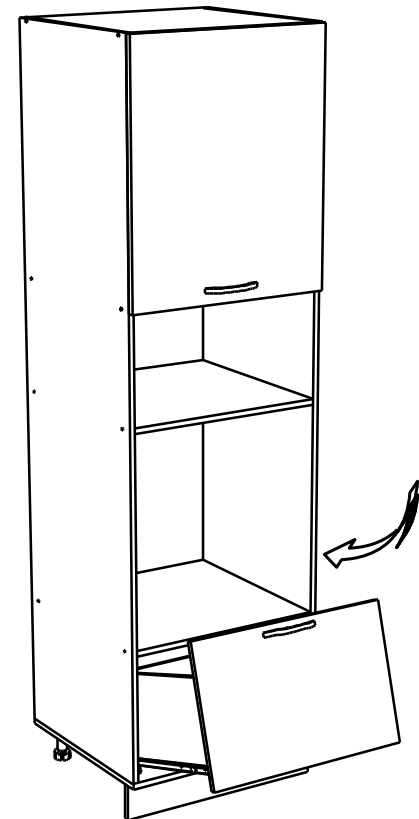


19

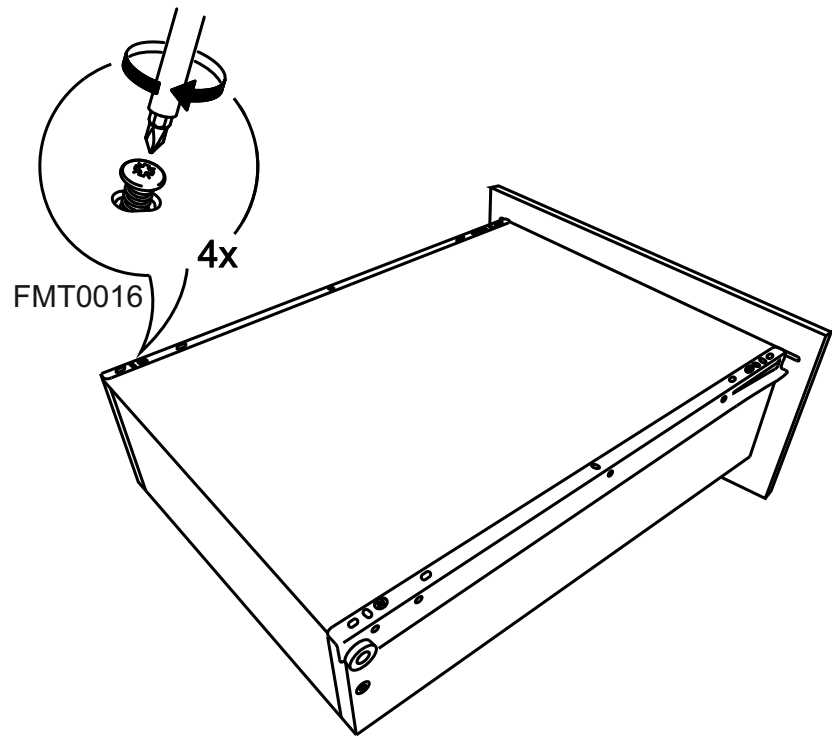


5

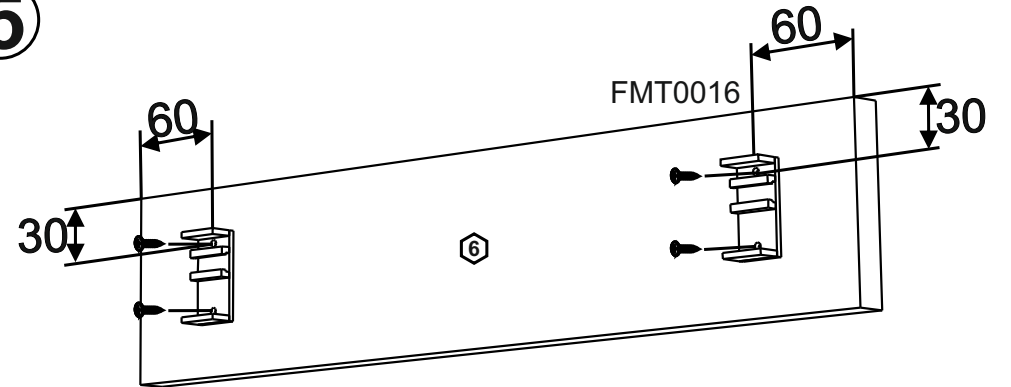


20

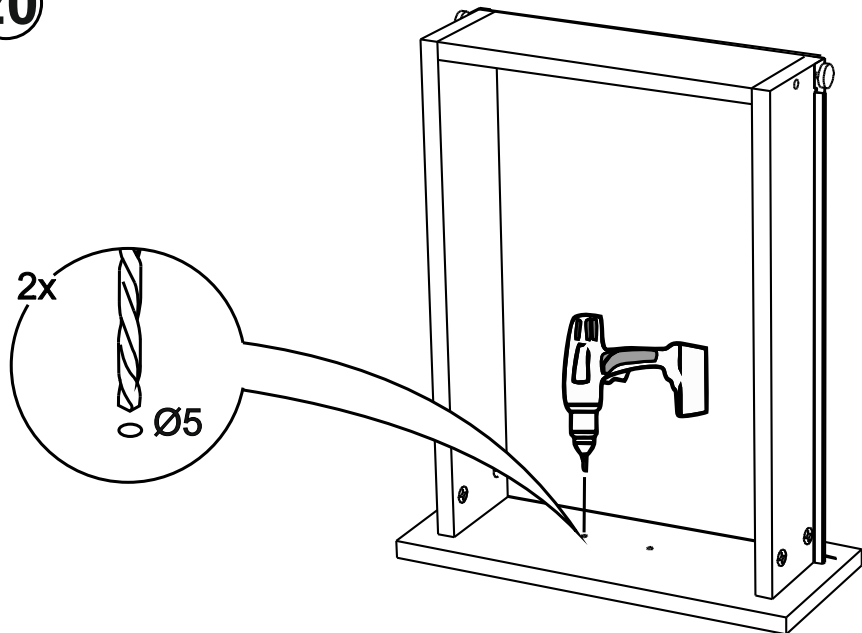


6

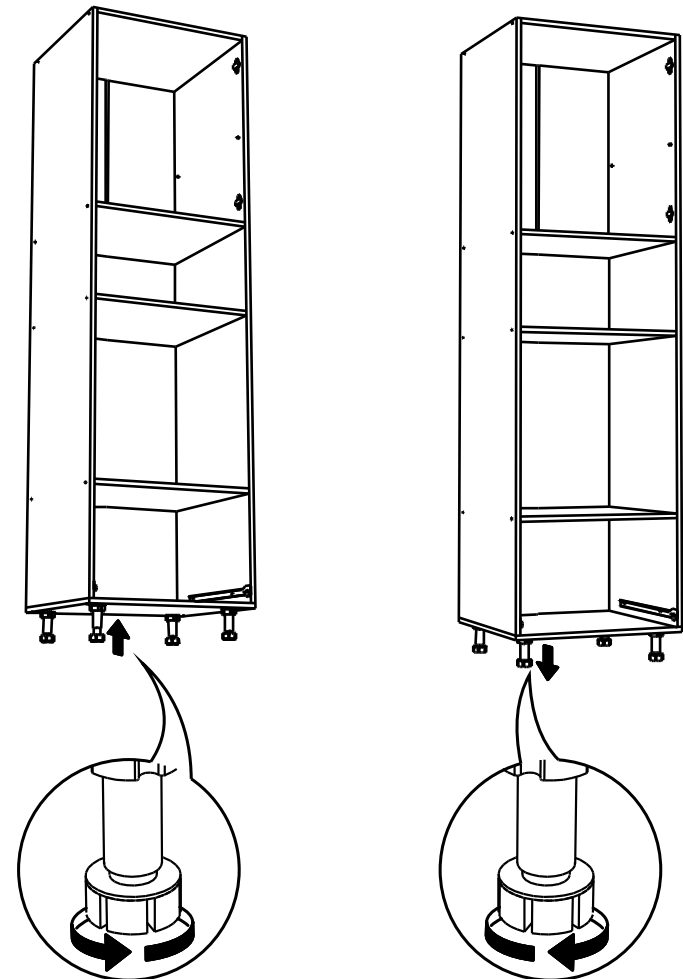

7

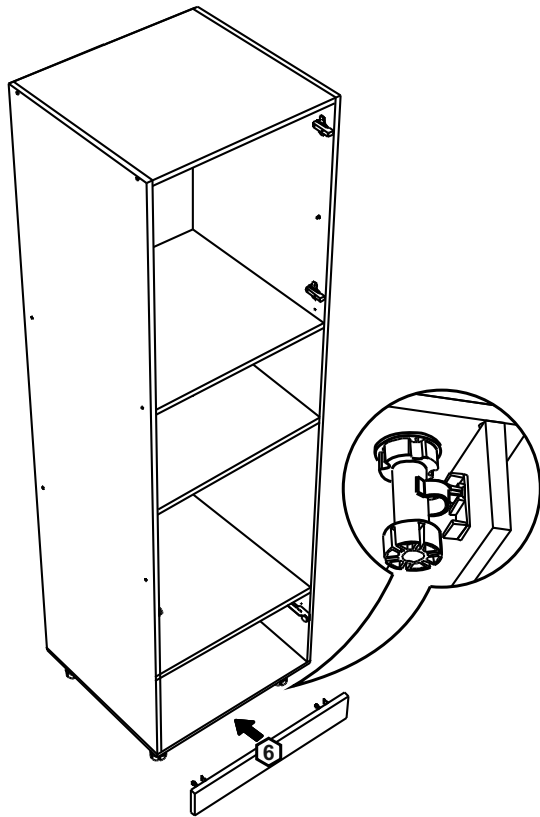


17

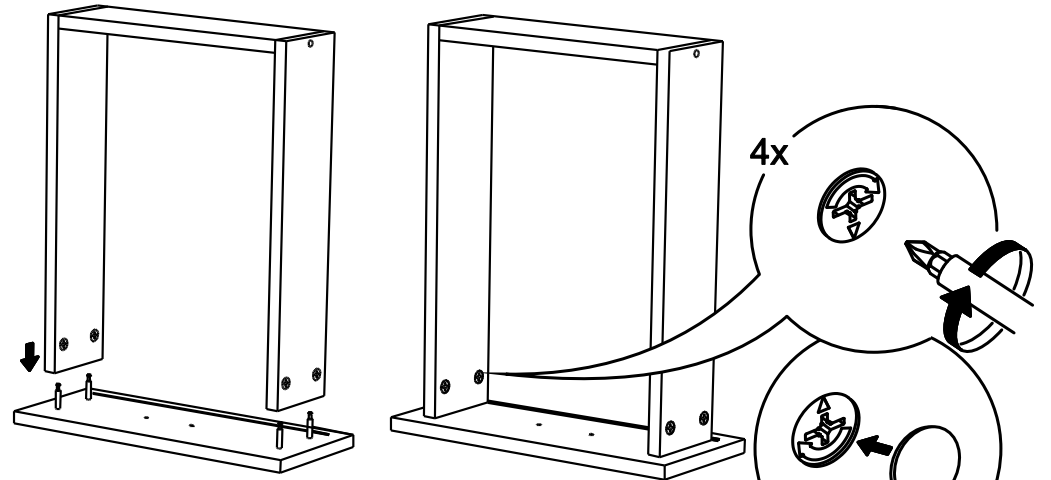

4x

FPL0014
 FPL0015
 FPL0016

8

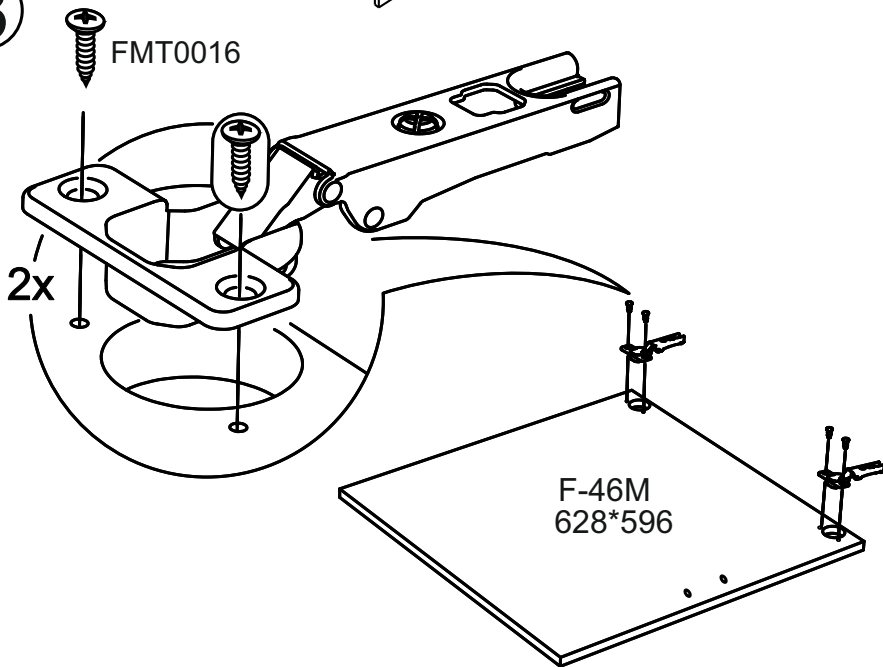


FMT0016

2x

F-46M
 628*596


18

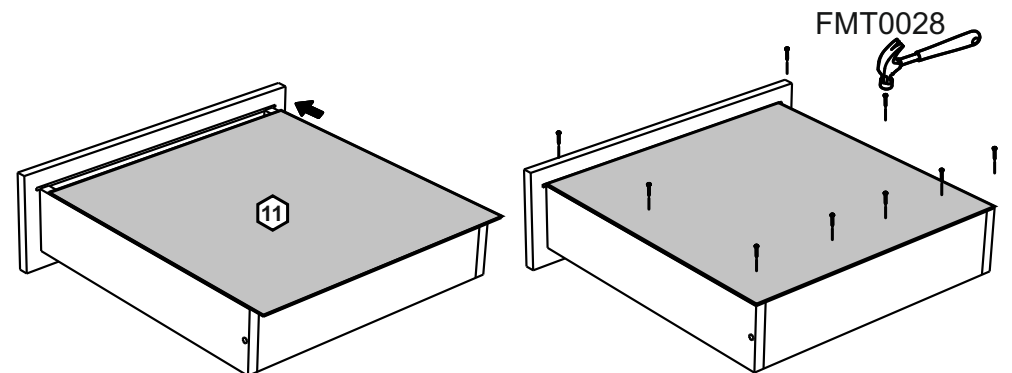


FMT0028

11


15

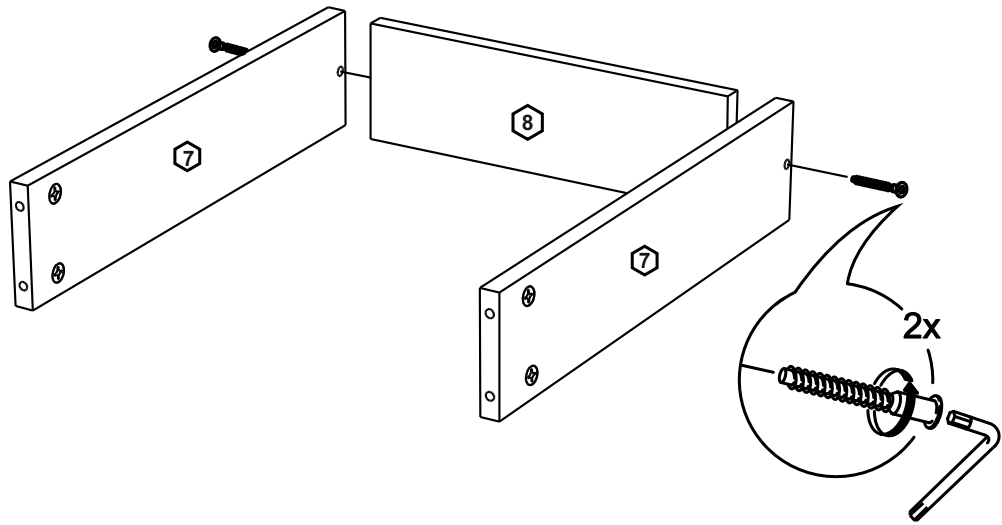


9

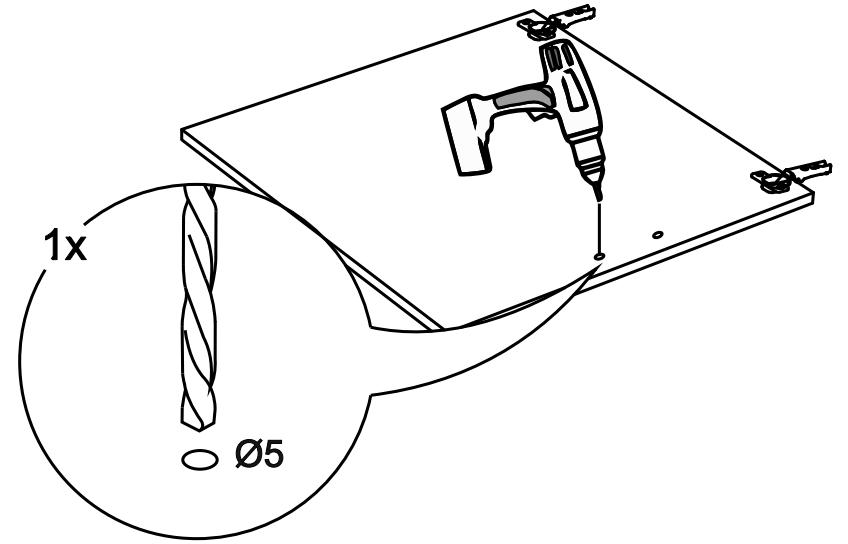


16

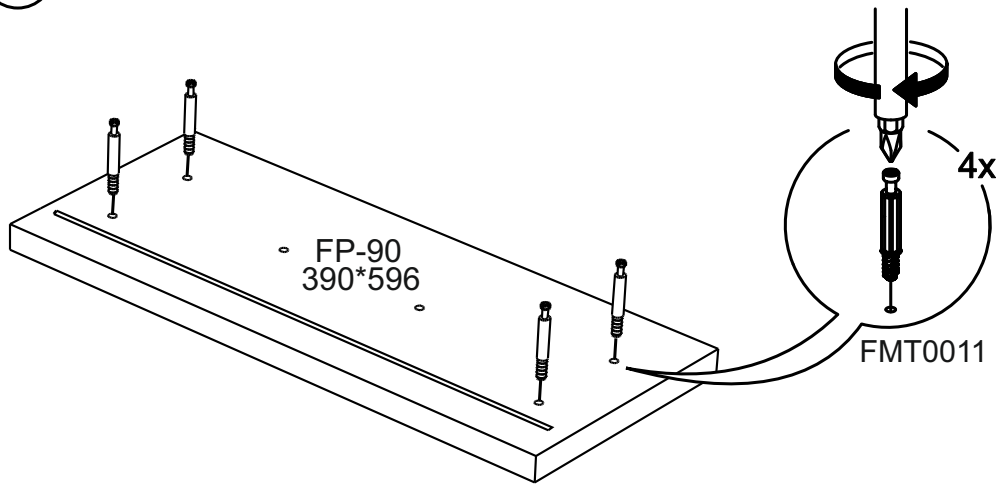


10

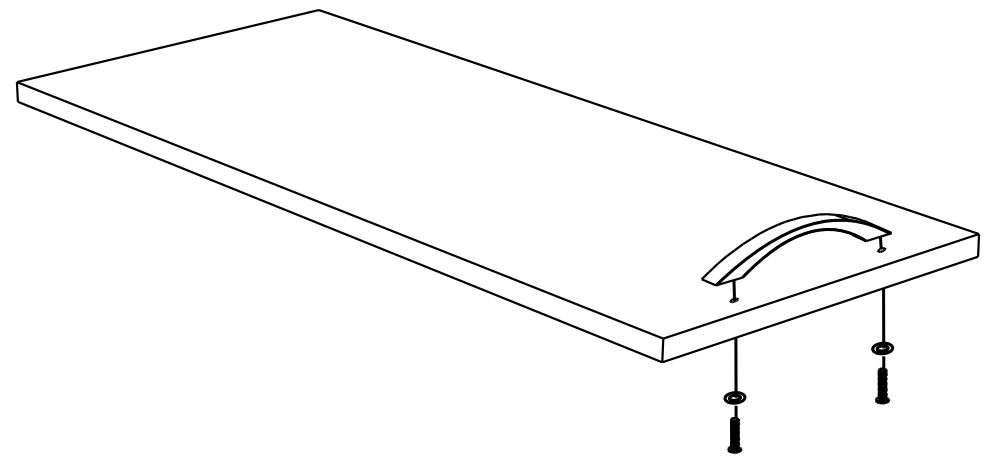


11

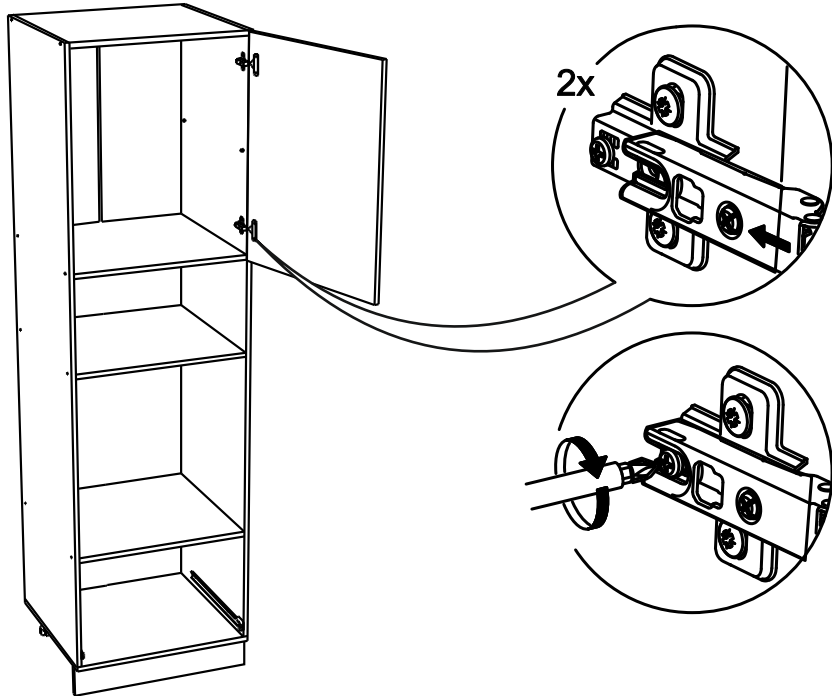


12

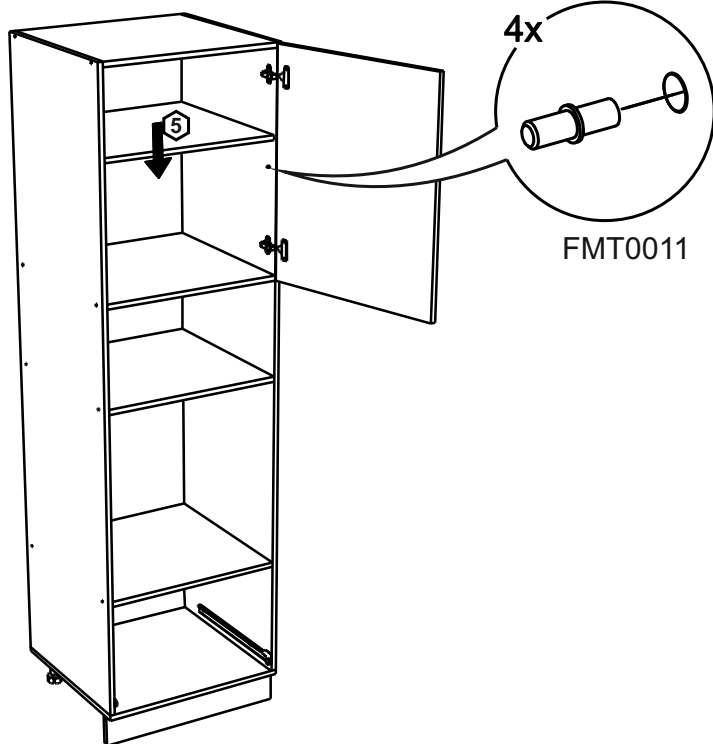


13

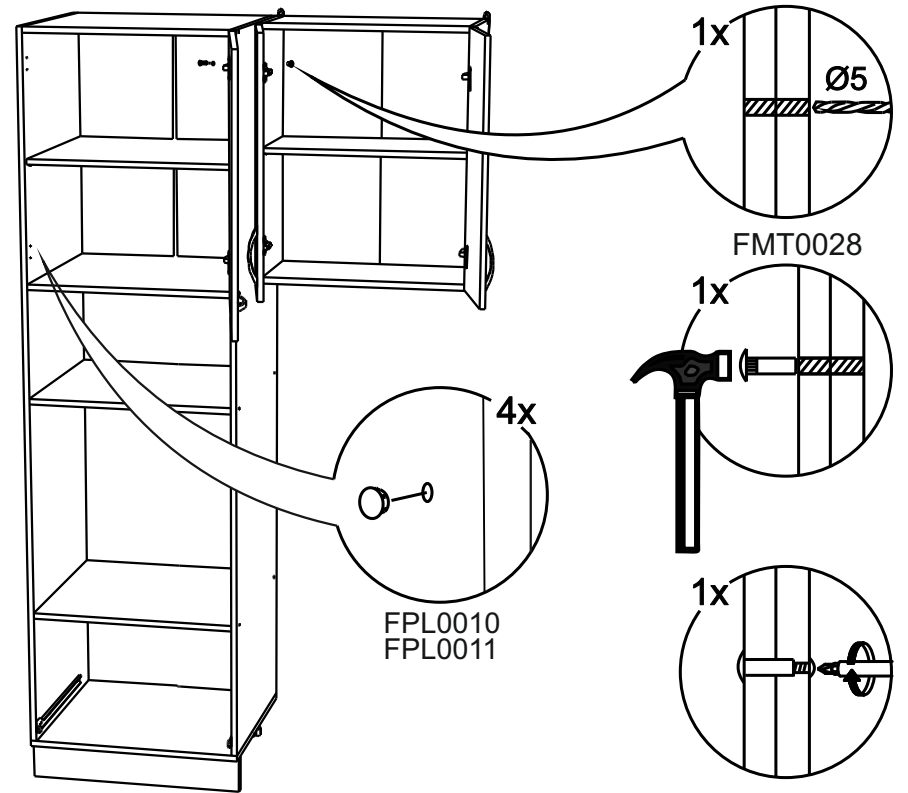


14

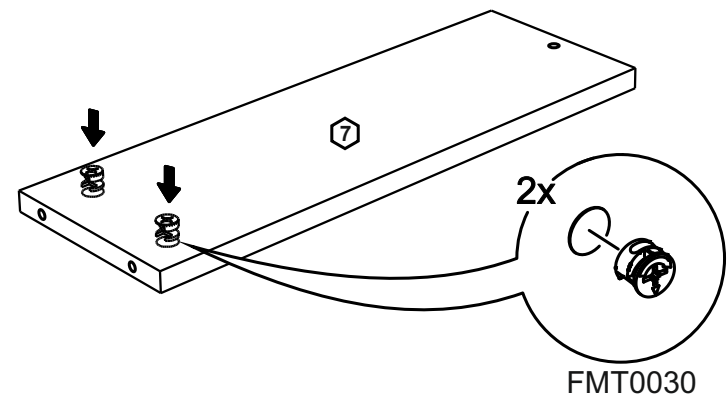



P606MH

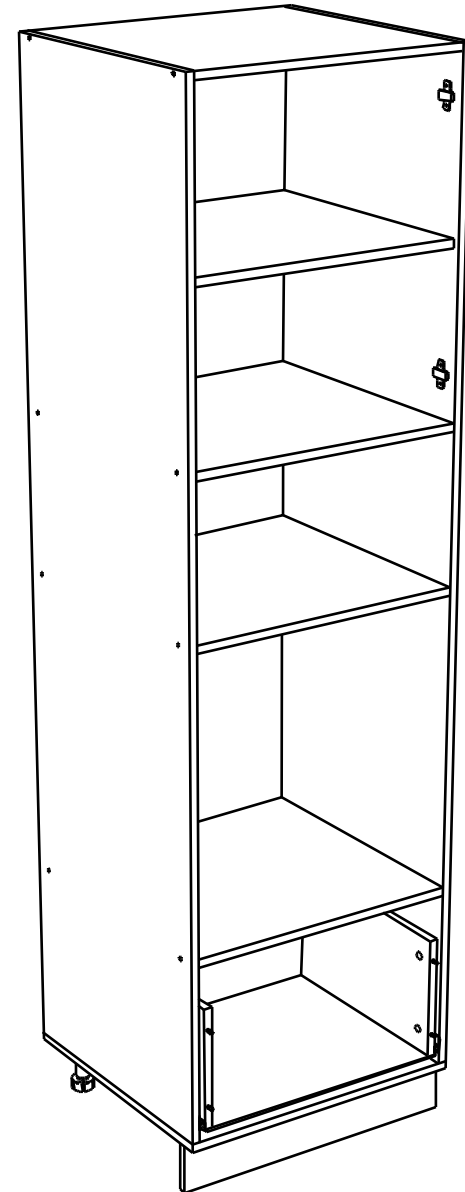



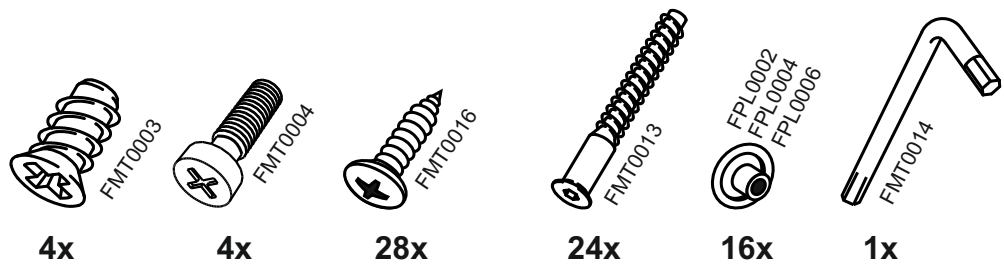


26

16x
FPL0002
FPL0004
FPL0006

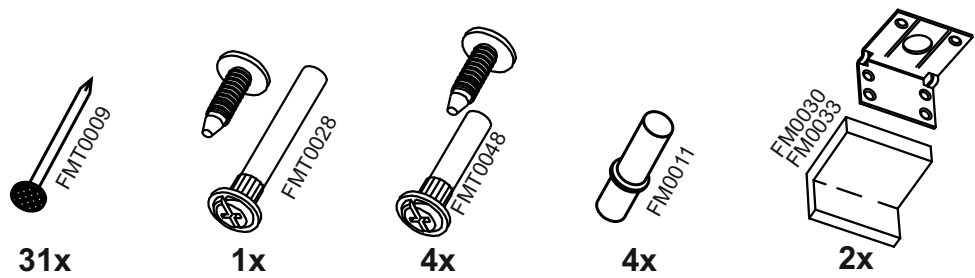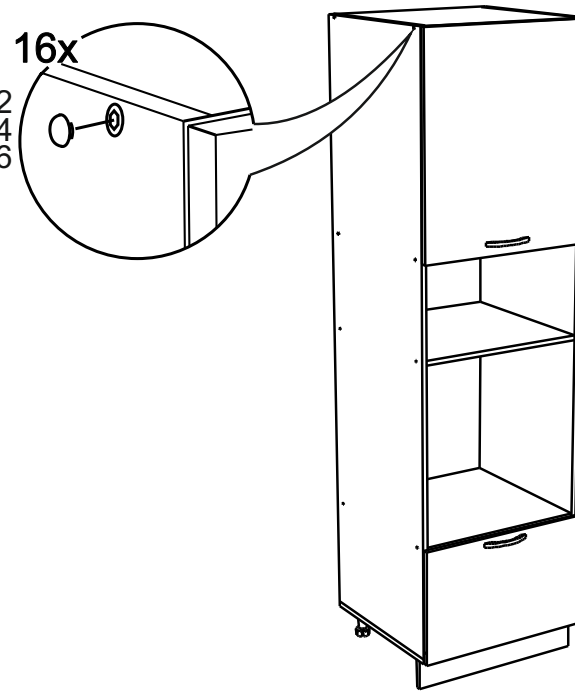




27

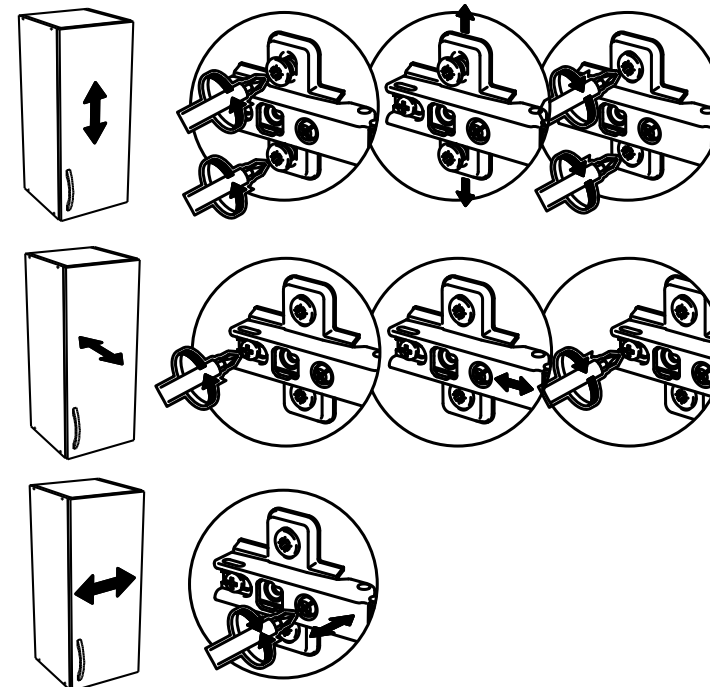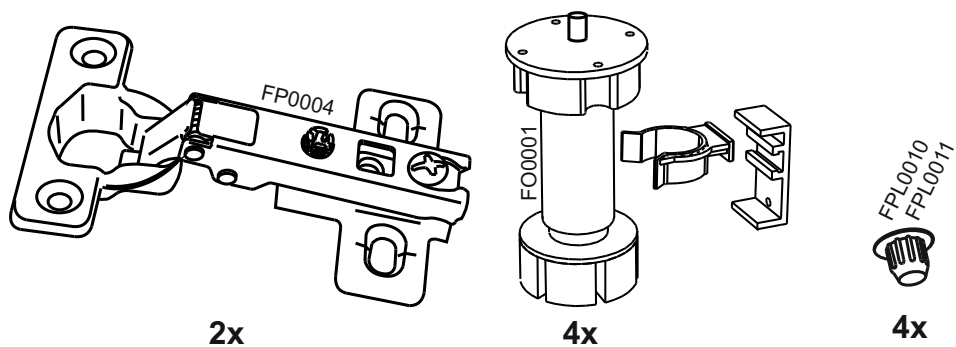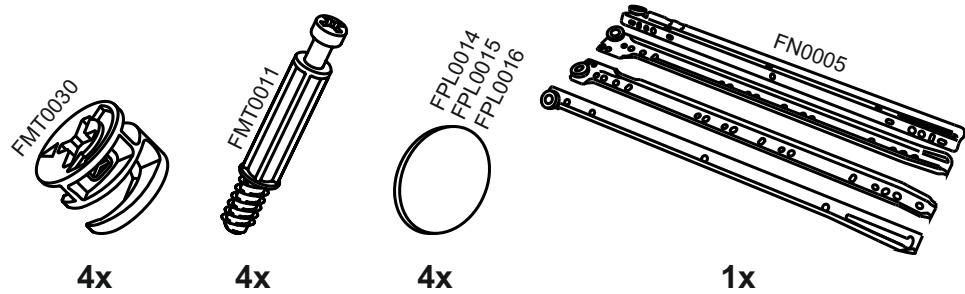


В мебельном наборе могут быть конструктивные изменения, не ухудшающие качество изделия, но не указанные в данной инструкции.











In furniture KIT, there may be changes, not specified in this manual, which don't deteriorate the quality of the product.

25

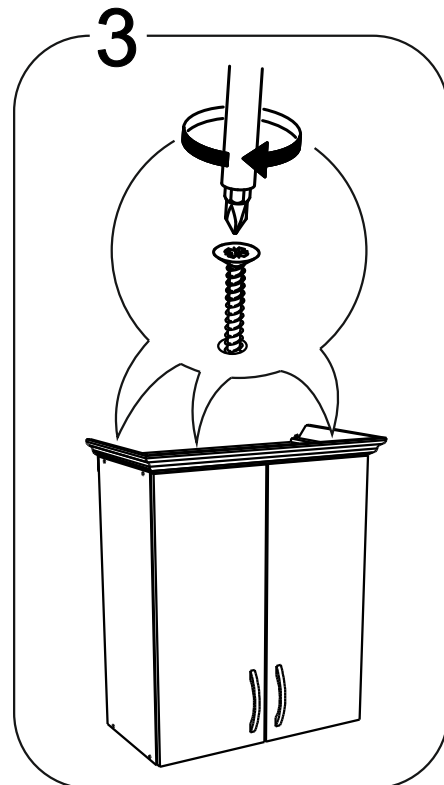
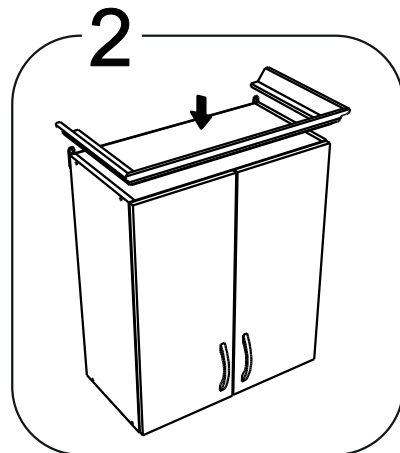
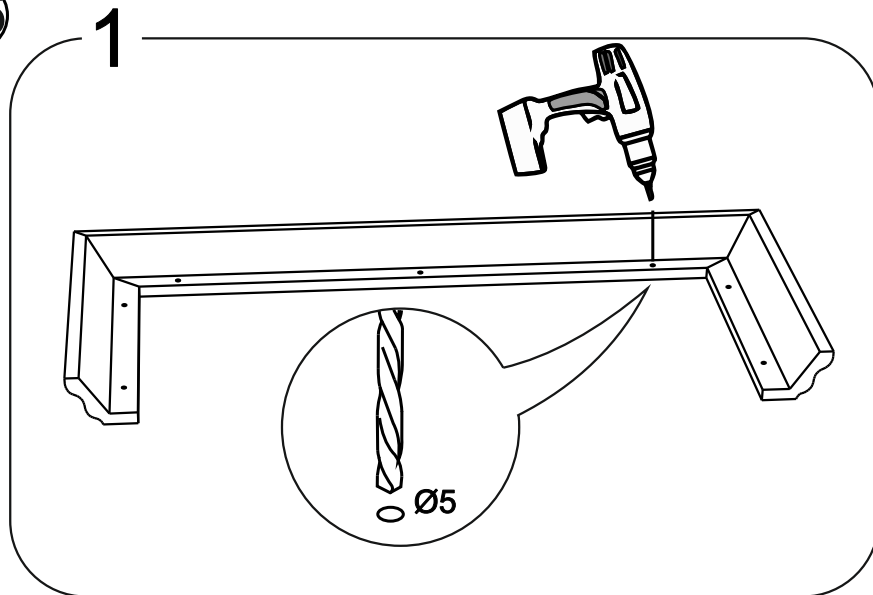


No	code	a*b	x
1	P606MH.01	2220*554	1
2	P606MH.02	2220*554	1
3	P600.01	600*554	1
4	P600.02	568*554	3
5	P600.03	568*540	1
6	N600.05	600*100	1
7	N302.01	450*250	2
8	N602.01	511*250	1
9	P606M.03	395*595	1
10	P606MH.03	840*295	2
11	N601.02	540*455	1
12	P606MH.04	811 mm	1
13	P606M.06	568*554	1

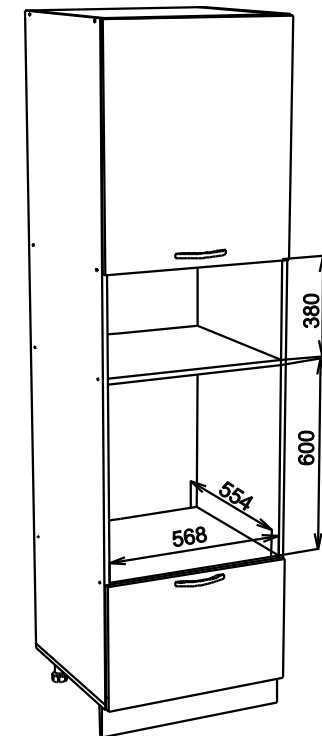


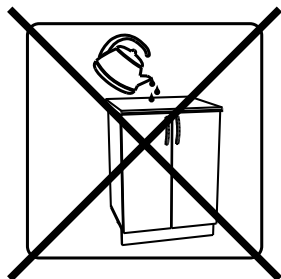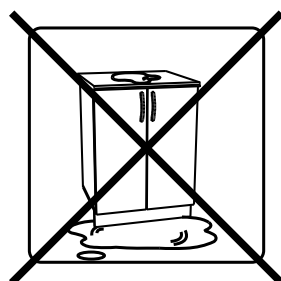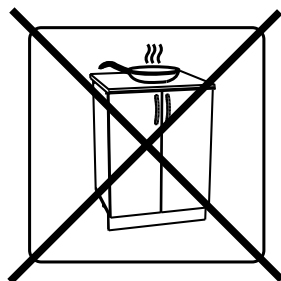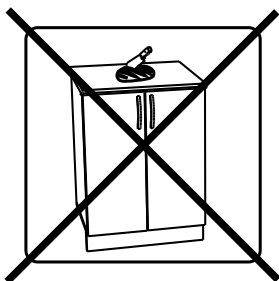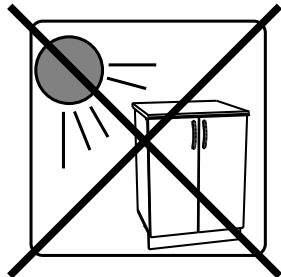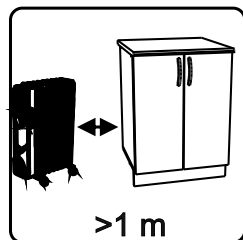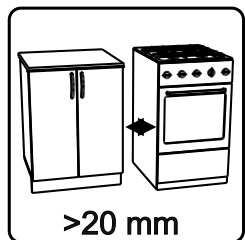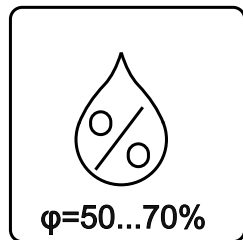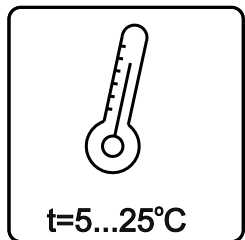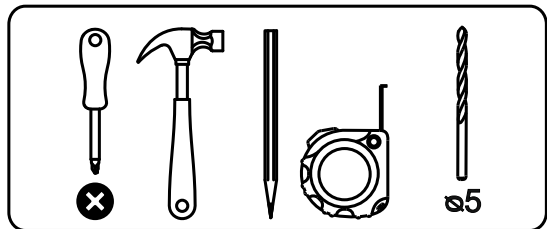

24

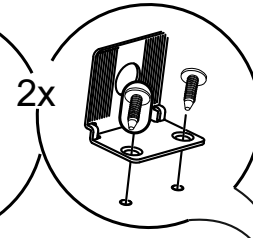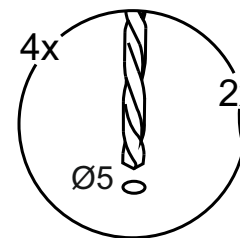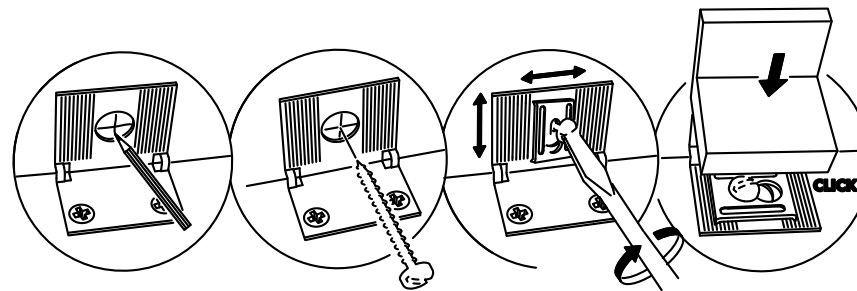


FM0030/FM0033
FMT0048

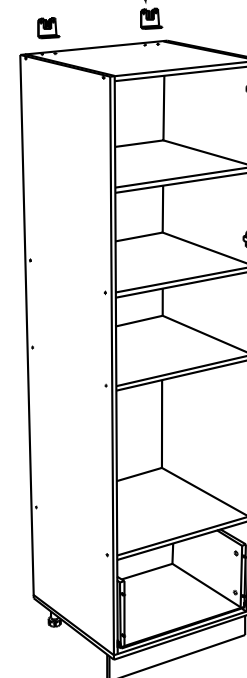

Внимание! Крепление пенала к стене крепёжным уголком обязательно! Крепёжные средства для крепления к стене не прилагаются, для разных материалов стен требуются различные крепления. Используйте крепёжные средства, подходящие для материала стен в Вашем доме.


Attention! Use mounting angle to mount high cabinet to the wall. Fixing devices for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home.

23

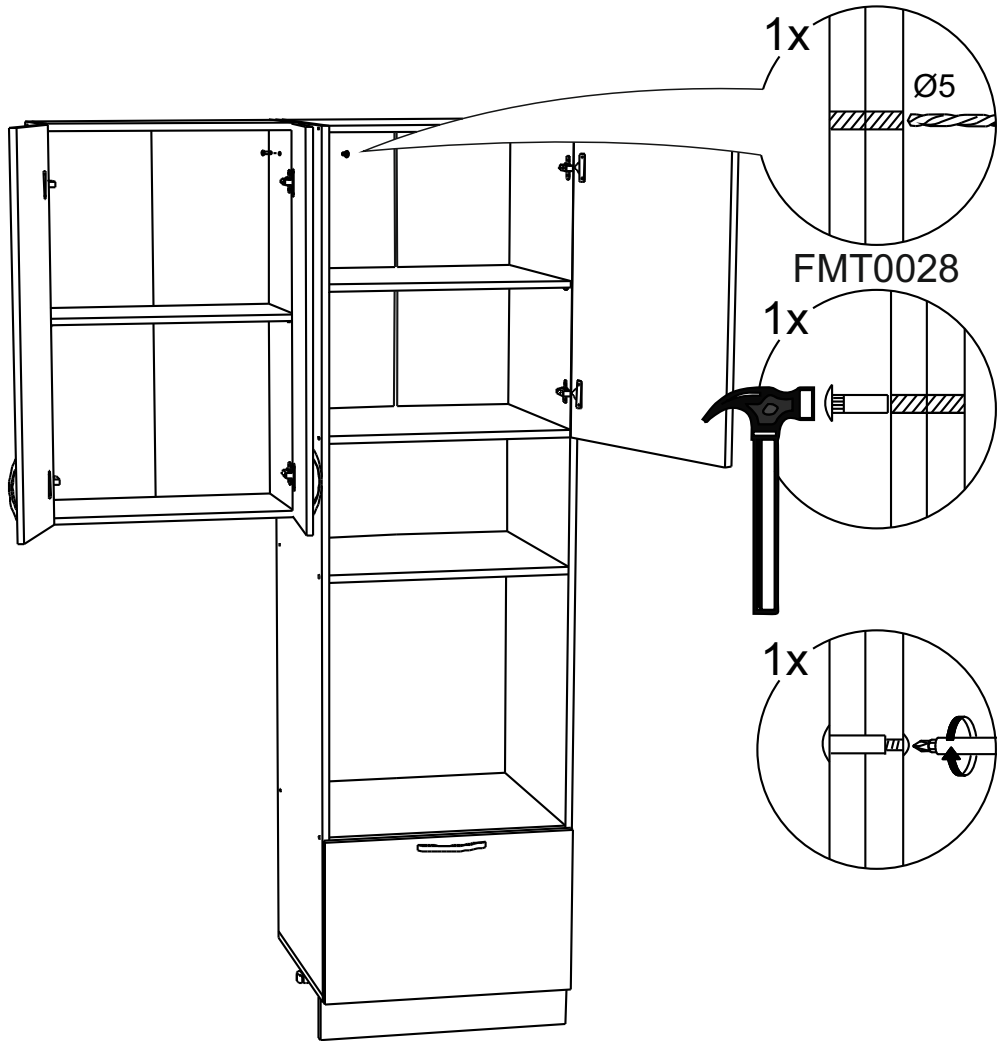


! Внимание! Крепление пенала к рядомстоящим модулям межсекционной стяжкой обязательно!
 Attention! Use connection screw to mount high cabinet to the nearest base and wall cabinets.


1

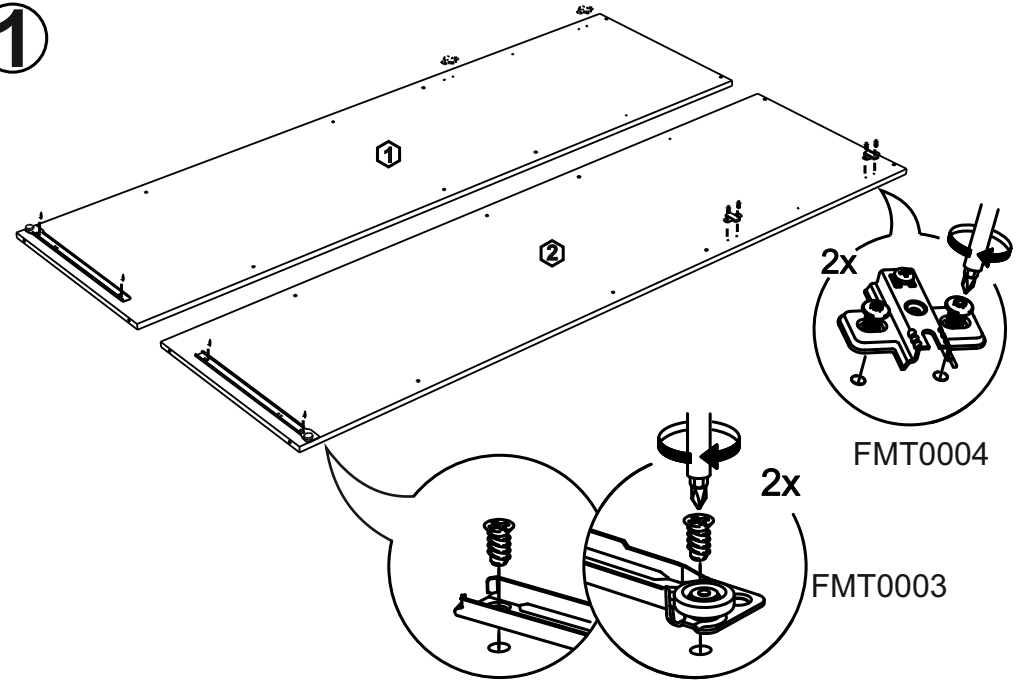


2

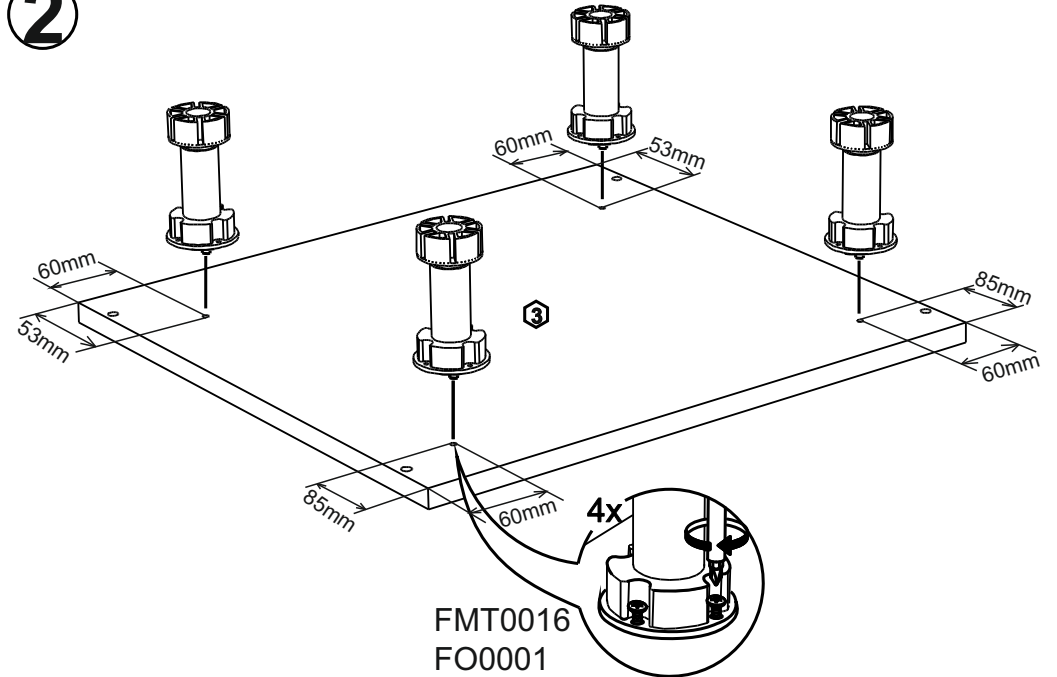


3

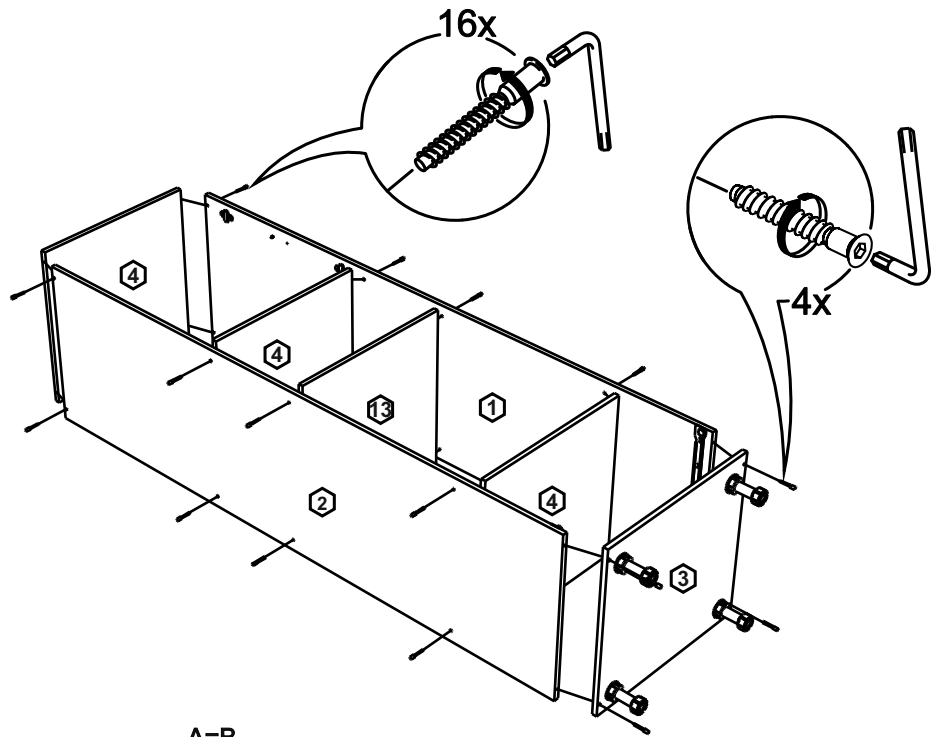


21

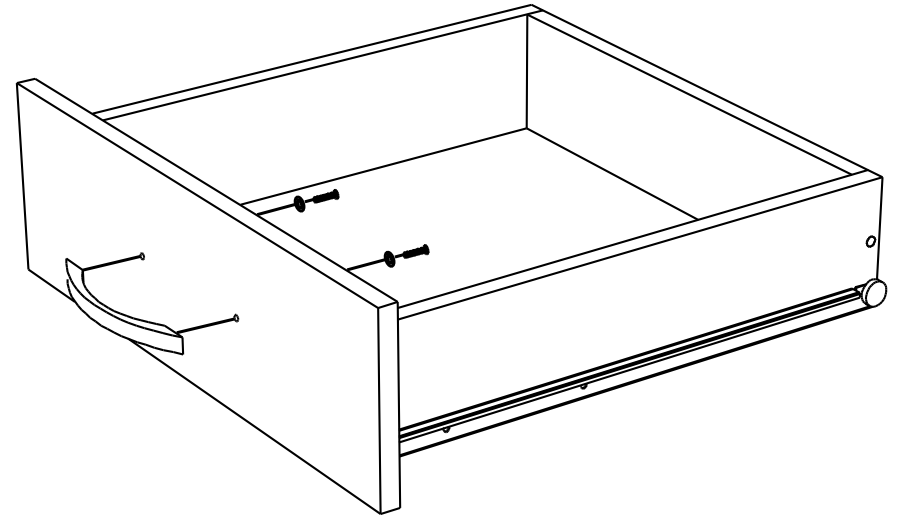


4

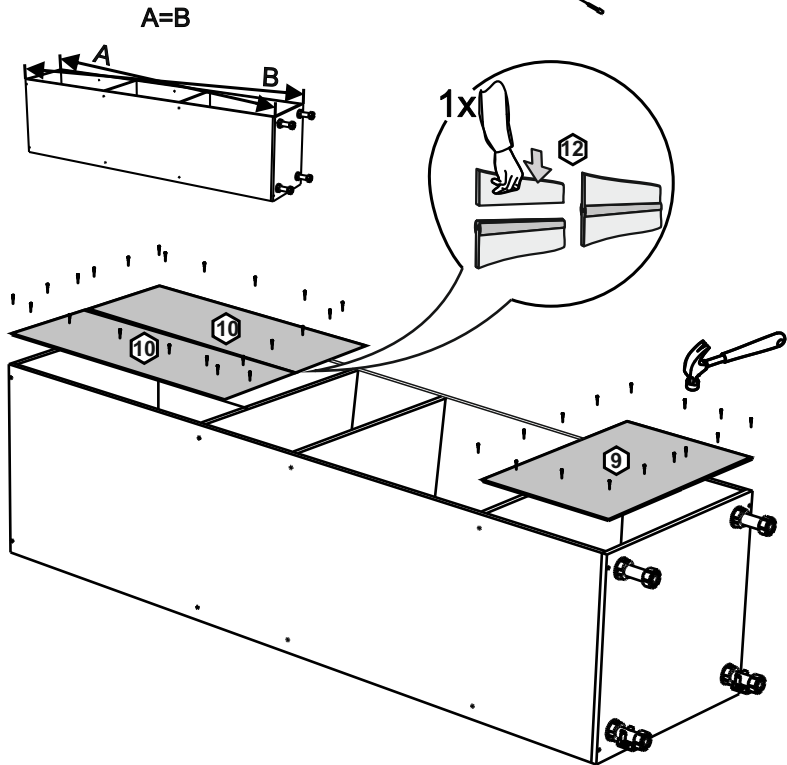


22

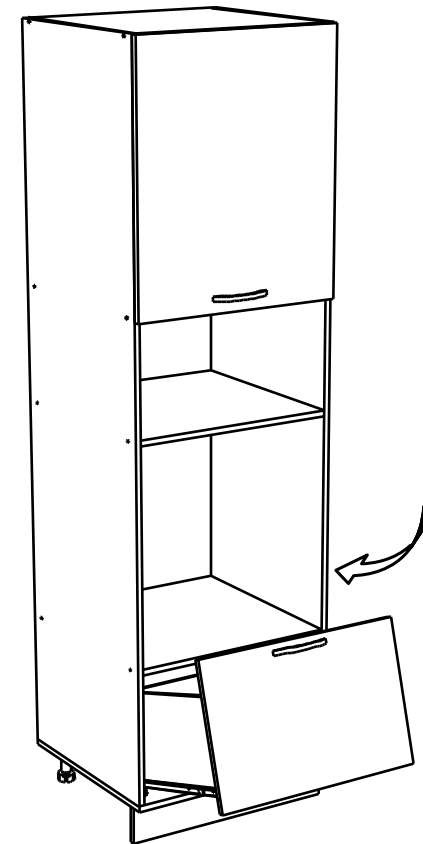


19

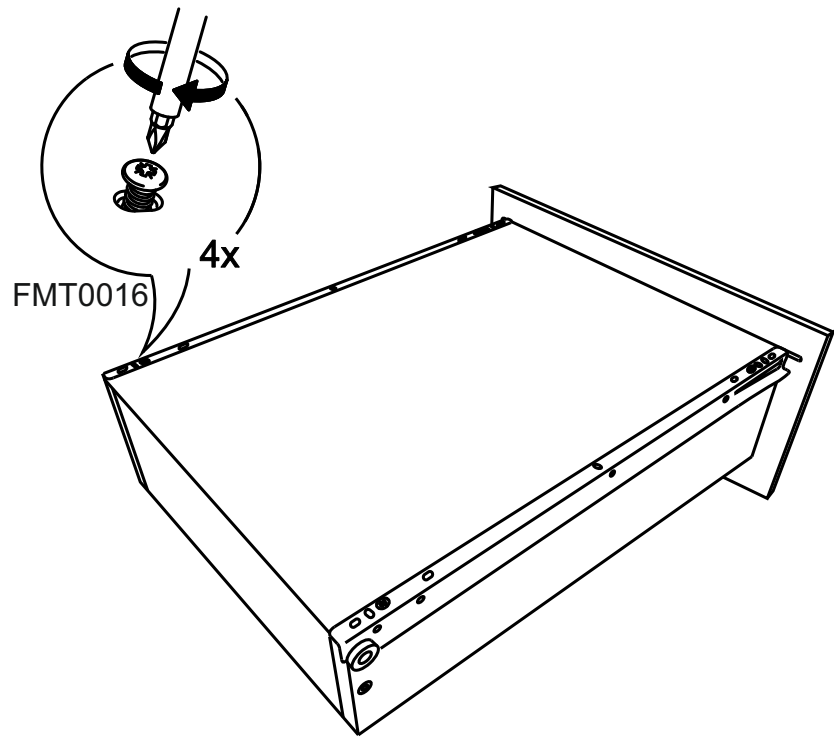


5

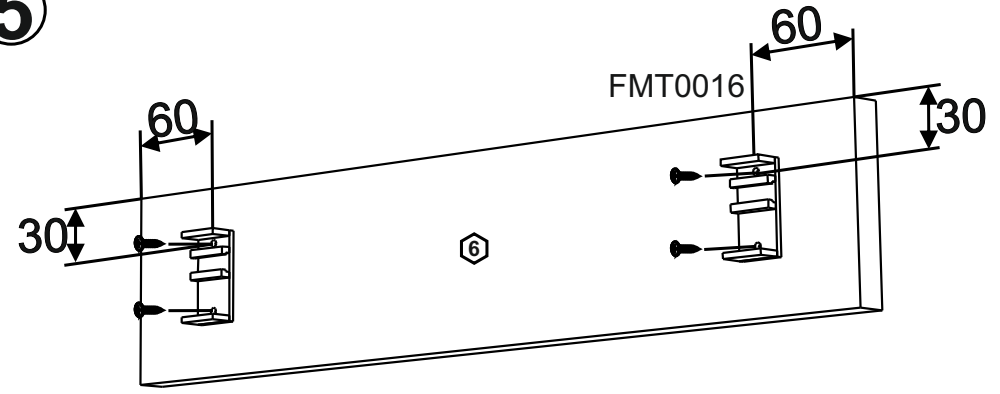


20

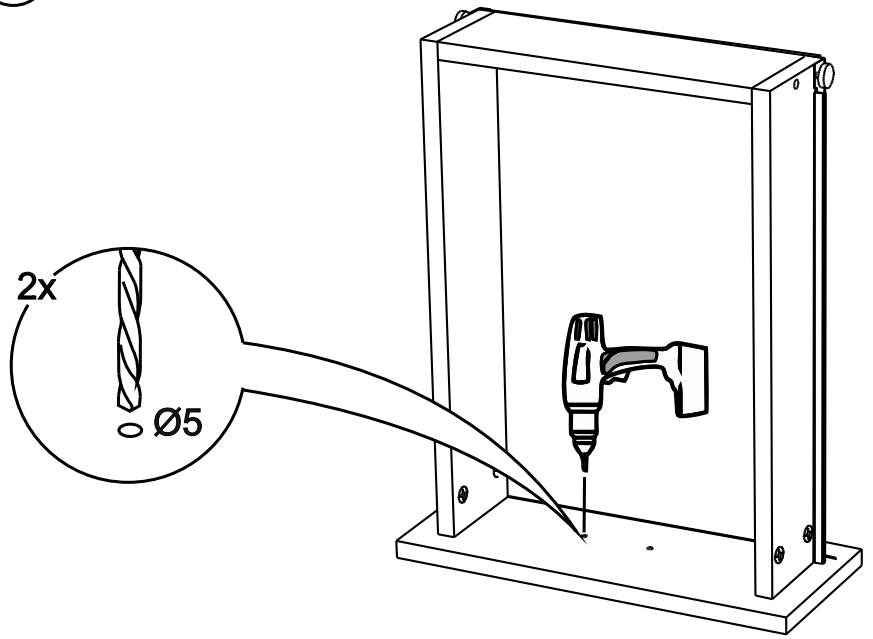


6

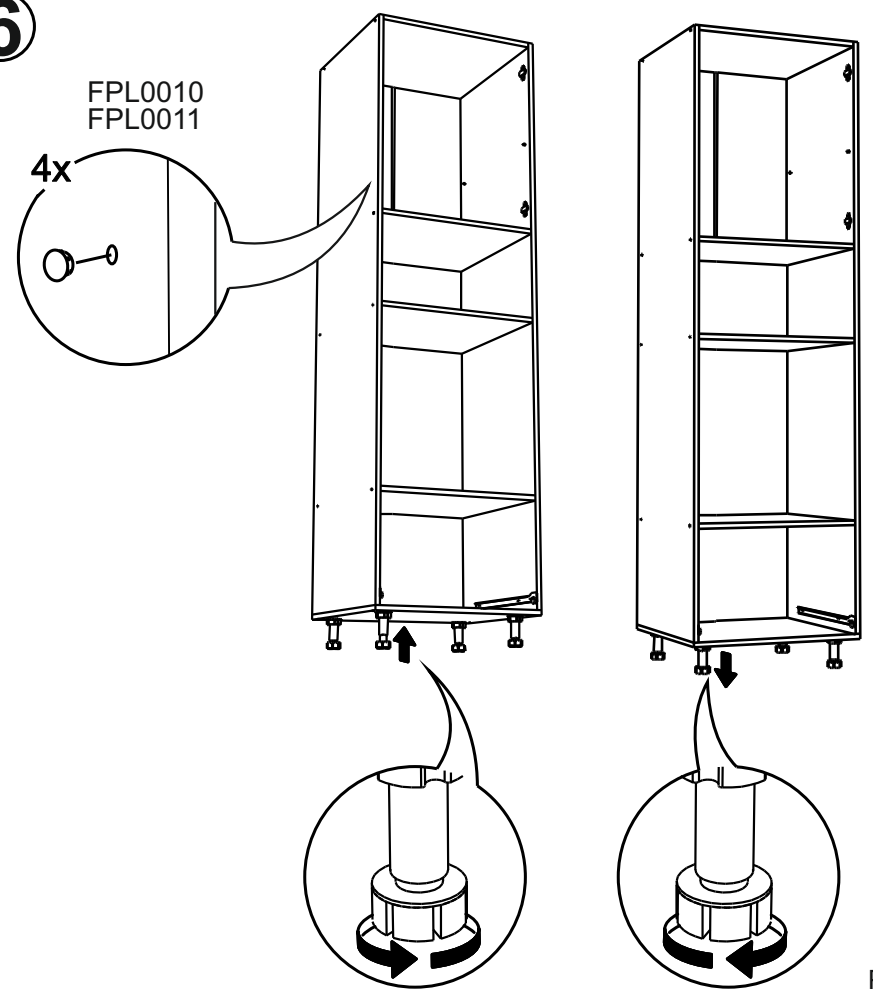

7

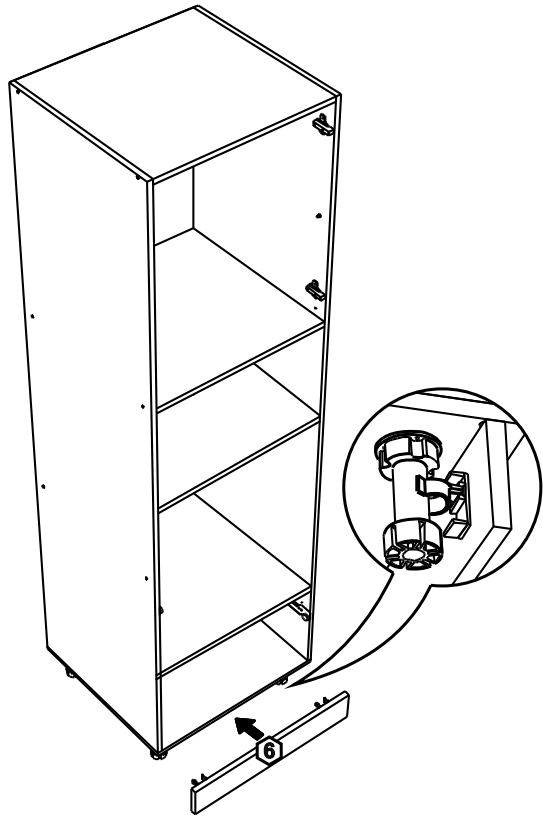


17

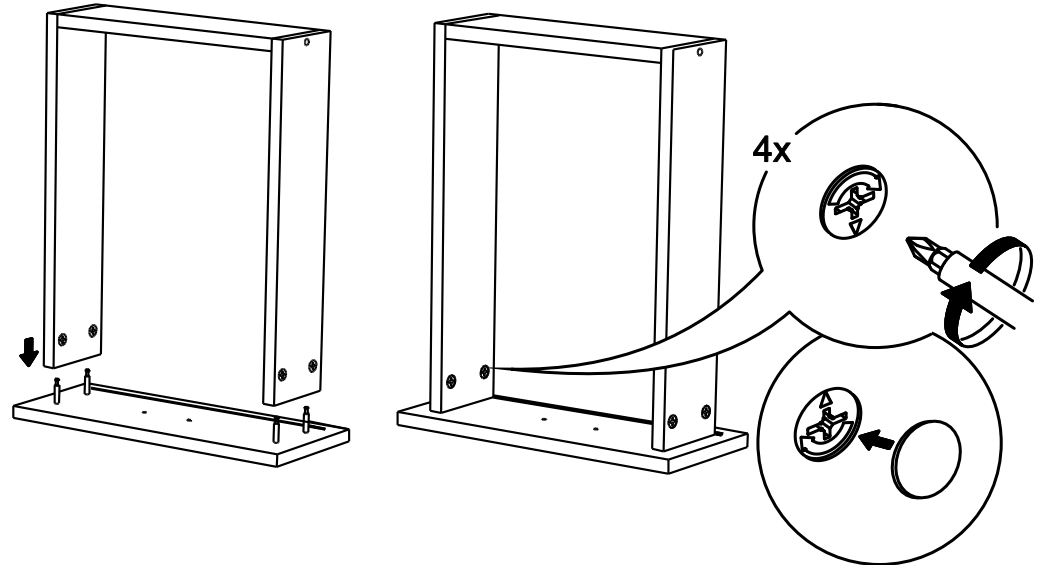


FPL0014
 FPL0015
 FPL0016


8

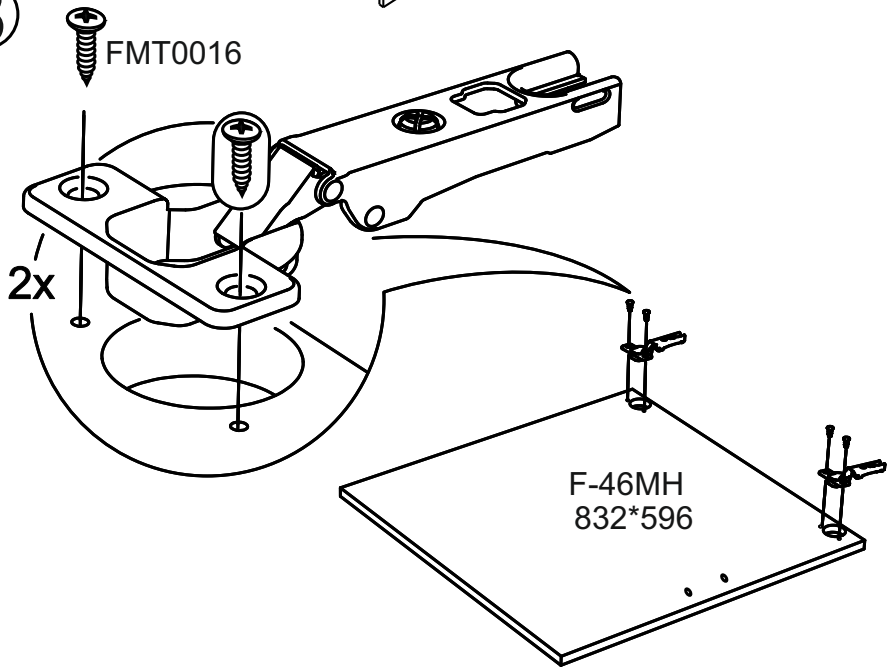


18

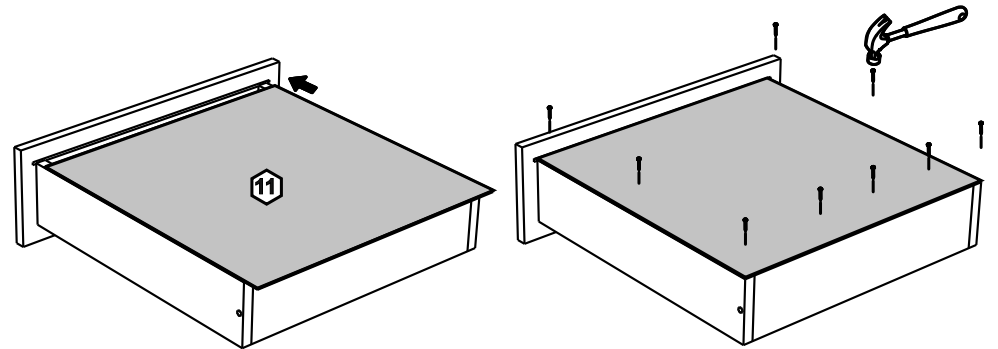


15

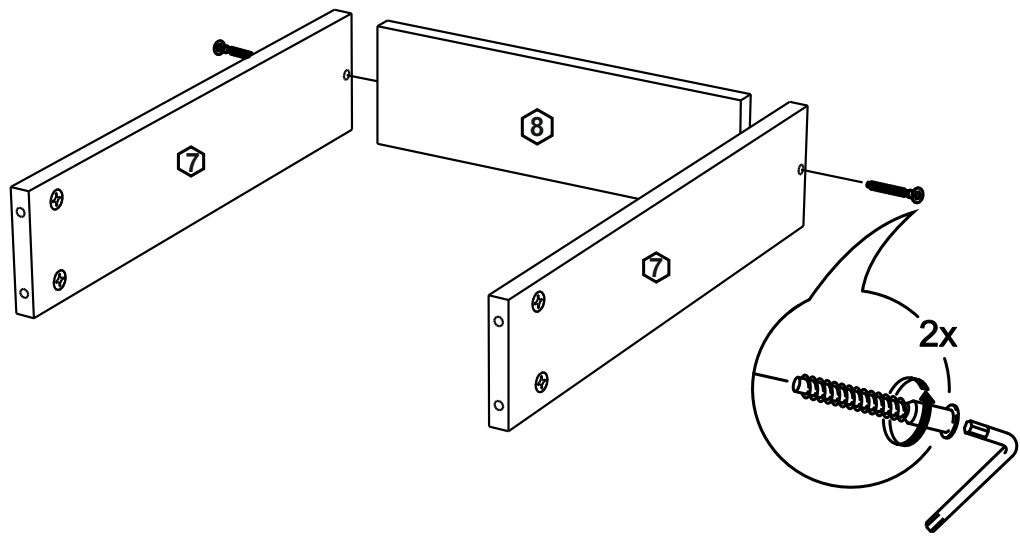


9

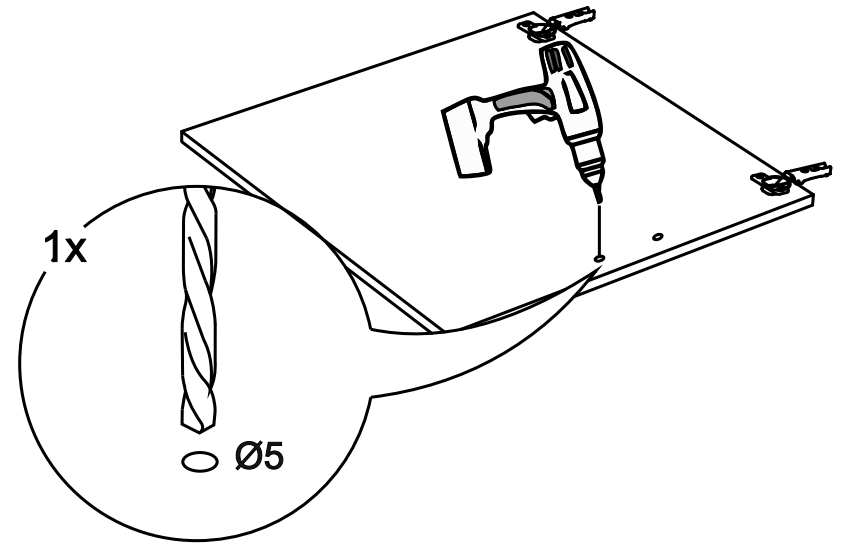


16

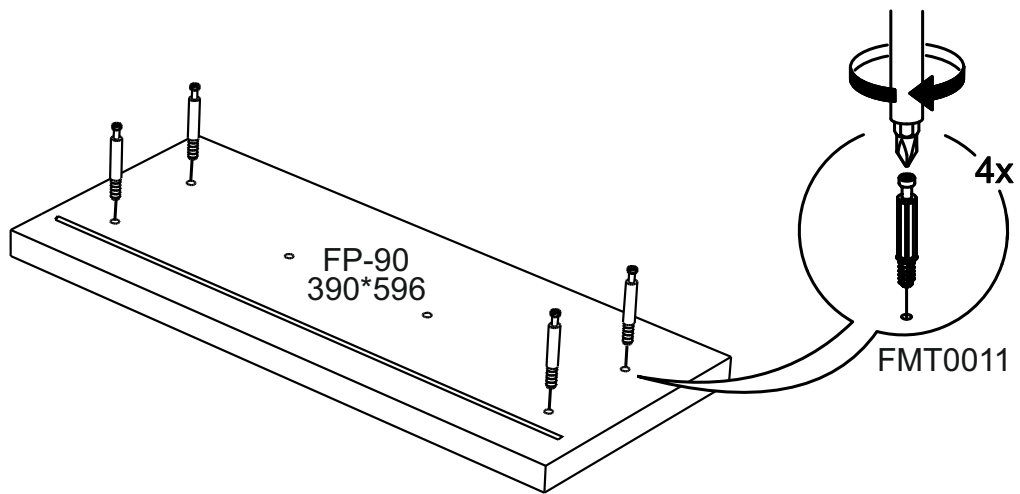


10

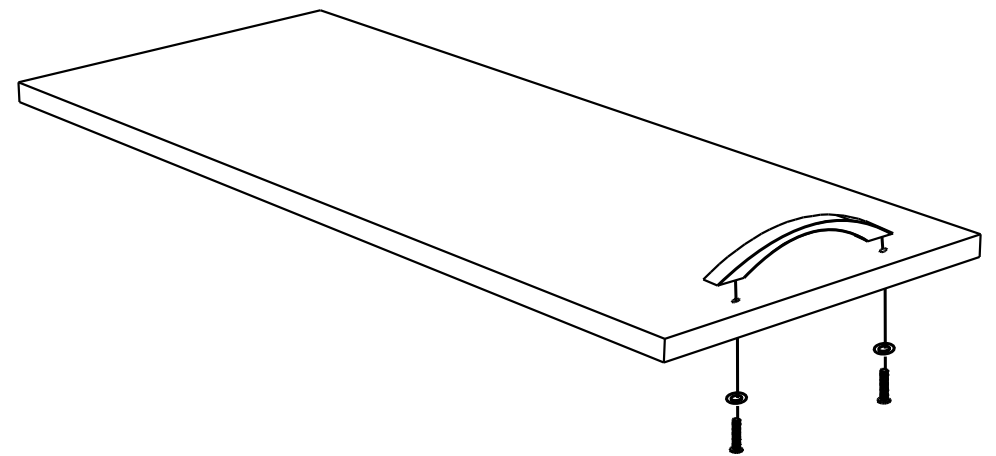


11

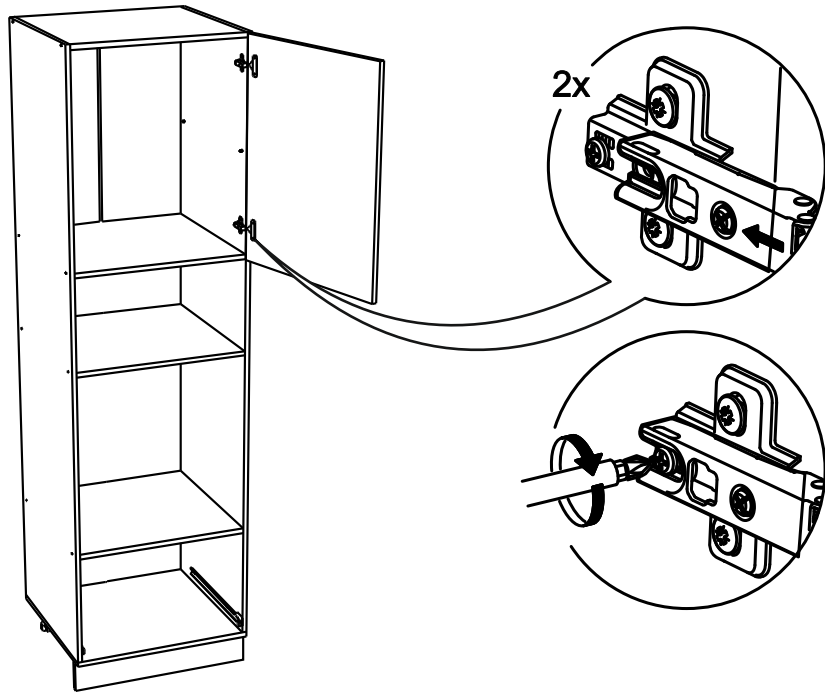

12

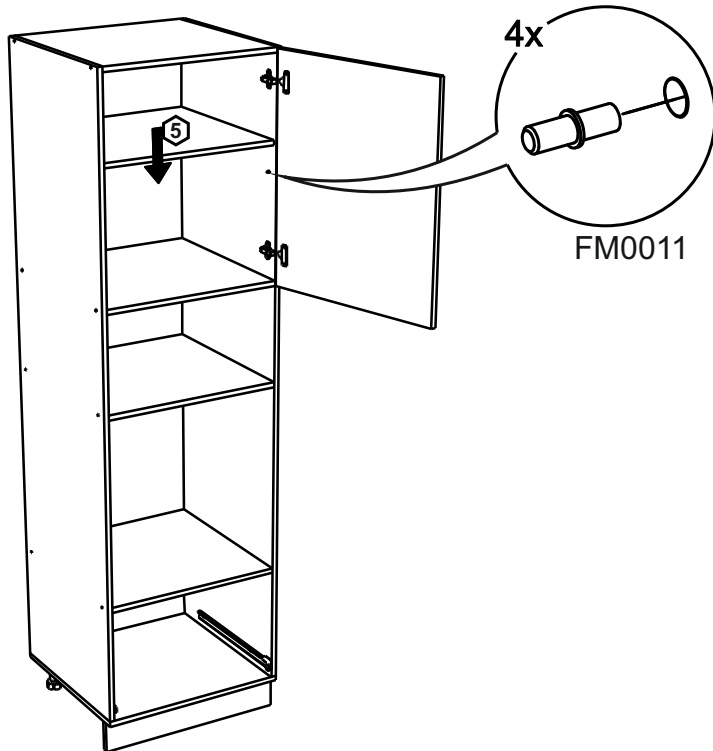

13

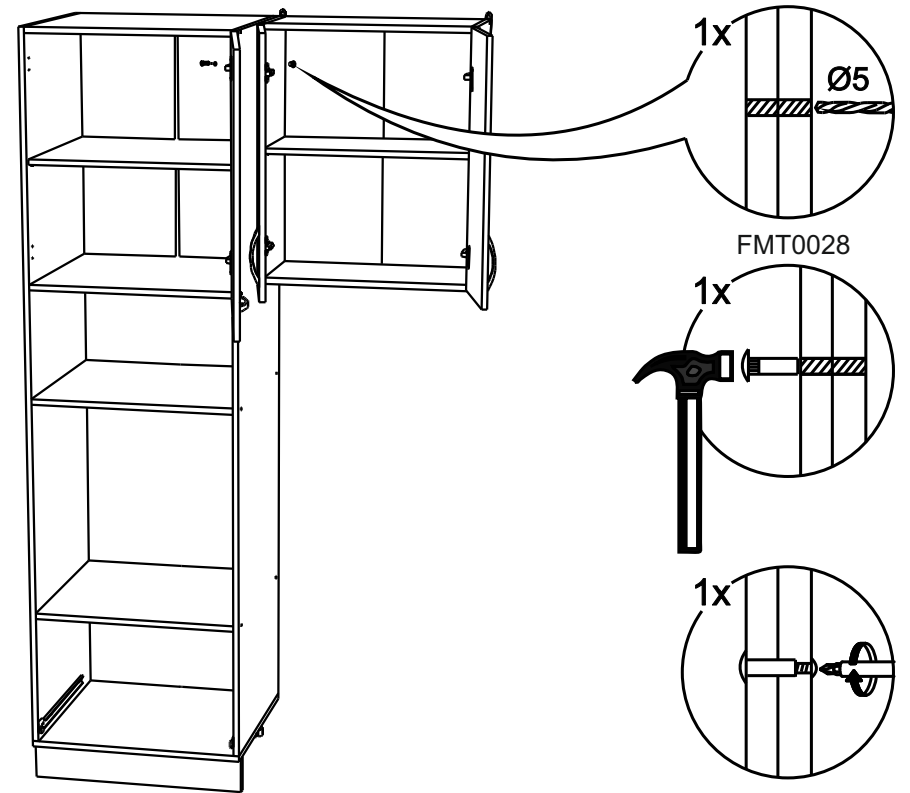

14

